



## Remote Control Page Turner User Manual

Model: JZ-1

01

### Directory

1. About Us	03
2. Introduction	03
3. Package Contents	04
4. Getting Started	05
4.1. Installation	05
4.2. How to Use	06
4.3. Charging Instructions	07
4.4. Charging Dock with Stand	08
4.5. Important Notes	09
5. Troubleshooting	10
6. Warranty Information	10

02

### 1. About Us

At Tuztuala, we believe in simplifying everyday life. We were founded with a simple yet powerful vision: to create practical and innovative solutions that enhance efficiency, making your life more convenient and more enjoyable.

### 2. Introduction

**Hands-Free Reading Made Easy**

We developed the Remote Page Turner to enhance the experience of reading e-books. It's compatible with most capacitive touch screens, including various models of e-readers, tablets, and smartphones.

Typically, when using various e-readers for extended reading sessions, you have to continuously swipe or tap the screen, which can lead to sore or uncomfortable hands. The Remote Page Turner allows you to simply clip it onto your screen and let it stay snuggly under your blankets during winter without exposing your hands.

In such scenarios, all you need is our ultra-thin and compact clip. Attach it to your screen, and you're good to go. It's a hands-free solution that's quick and easy to set up, requiring no software or applications, and no Bluetooth or additional hardware.

Whether you're an avid reader, a researcher, or someone who just enjoys comfortable reading, it's the ideal companion for your reading pleasure. Bid farewell to manual page-turning and enjoy a hassle-free reading experience.

03

### 3. Package Contents



- ① Remote
- ② Screen sense clip
- ③ Charging dock
- ④ Type-C charging cable
- ⑤ Remote Control Page Turner User Manual

04

### 4. Getting Started



#### 4.1. Installation

**Pairing:** Simply press and hold the activation button ③ on the screen sense clip for 2 seconds. (To check if successful, briefly press the page-turning button ①, and both the remote and screen sense clip's indicator light will flash, indicating a successful pairing.)

05

#### 4.2. How to Use

Using Kindle Paperwhite 4 as an example:

A) Place the screen sense clip onto the screen. We recommend clipping it onto the red area as shown in figure ⑤. However, the precise location may vary on different screen models. Make sure that the sensor point of ⑤ the screen sense clip is correctly positioned.

B) Next, you can simply use the device by pressing the Page-turning button ① on the remote.

C) If the remote is not used within 10 minutes, the screen sense clip will automatically enter into smart power-saving mode. If you wish to use it again, press the page-turning button ① on the remote.

D) If the indicator lights on both the screen sense clip and the remote control are green, but the remote cannot control the screen sense clip, it needs to be reactivated. Follow these steps: Press and hold the page-turning button ① on the screen sense clip for 2 seconds. If the indicator light ② on the remote stays on continuously, then press and hold the activation button ③ on the screen sense clip. At this point, if the remote indicator light ② on the remote blinks 3 times, it means the activation is successful, and you can use it normally.

06

#### 4.3. Charging Instructions

To charge, place both the remote and the screen sense clip on the charging dock and connect it using a TYPE-C charging cable. The input voltage is DC5V, and it takes 2 hours to fully charge.



07

#### 4.4. Charging Dock with Stand



The built-in hidden stand eliminates the need for purchasing an additional stand, saving you money. Simply pull out the stand, and you can place your device, freeing up your hands.

08

#### 4.5. Important Notes

A) The sensor point must be kept clean, and try to minimize dust.



B) The sensor point must be close to the screen.



C) The sensor point must be clamped within the effective area of the screen, otherwise, page-turning will not work. (Think of the sensor point as equivalent to a human finger.)

D) If used for 3 hours daily, with a full charge, the screen sense clip can be used for 100 days. If you notice any battery issues, such as slow charging, the indicator lights on the remote or the screen sense clip are green. However, when they turn red, it indicates low battery and you should recharge them promptly.

09

#### 5. Troubleshooting

A) Screen sense clip does not work.

Solution: When operating the remote, check if the green light on the screen sense clip is on. If it is not, try adjusting the position of the screen sense clip to see if it can be used.

B) If both the remote and the screen sense clip are in normal status (with green indicator lights), but the screen sense clip does not turn page.

Solution: Press and hold the page-turning button ① on the remote continuously, then press and hold the activation button ③ on the screen sense clip. If the remote's indicator light ② on the remote blinks 3 times, it means the activation is successful, and you can use it normally.

#### 6. Warranty Information

This item can be returned in its original condition for a full refund or replacement within one year of receipt. If you have any questions, feel free to contact us via email at any time.

10

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.