

USER GUIDE

ユーザーガイド

Guía del usuario

사용자 안내서

Guide de l'utilisateur



Please read the manual before using this product, and save it for future use.

Product configuration information

Processor: T606

Operating System: Android 15

RAM: 4GB LPDDR4X + 12GB Expansion

Storage: 128GB UFS2.1

Screen: 8.68inch 800x1340

Battery: 6000mAh, 3.85V

Camera: Front 5 MP, Rear 8 MP

Wi-Fi: 2.4 GHz

Ports: Micro TF/Type-C, 3.5mm Headphone

Display: IPS Screen and 10-point touch

Music: MP3, AAC, AAC+, AMR-NB, etc.

Video: MP4, OGM, 3GP, AVI. Etc

Picture: JPG, JPEG, GIF, BMP, PNG, etc .

Temperature: -10°C~45°C

Adapter: TYPE-C charger, 5V, 2A

****Specifications and this manual are subject to change without prior notice.**


Google, Android, Google Play and other brands Google Inc. is the trademark of the foundation .

Product Box Content

Tablet (Battery integrated in the device), USB Cable, User Manual

General View

In this user manual, the specifications given in the visuals and the parts indicated in the box contents may differ according to the model.

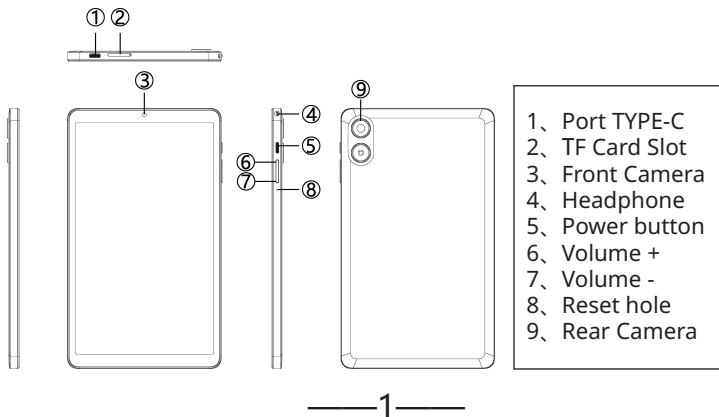

START

Power On/Off

- 1.Hold down the power button for 2-3 seconds to turn on the tablet. Select the language and follow the start up guide to set up the tablet.
- 2.Hold down the power button for 2 seconds to display power off and restart options on the screen.Click power off to turn off the tablet.
- 3.When the device is on, press and hold the power button for 10 seconds to force shutdown.

Reset

When the device is on, use a pin to press down the reset button to force restart.

Battery

- 1.A rechargeable Li-ion battery is installed in the tablet.
- 2.We suggest you drain the battery completely once a month if you only use your tablet occasionally.
- 3.DO NOT dispose of tablet in fire.
- 4.Charge the device fully each time to increase the battery life.
- 5.You can charge the tablet, even if the tablet has some power left in it, as the lithium battery does not need to be fully drained to charge.
- 6.A full charge can be used for an average of 5 hours.
- 7.Use a 5V 2A charger for tablet charging.

Sleep Mode

Simply press the power button once to switch the tablet into Sleep Mode when the tablet is ON; press again to wake it up.

Tip:

Go to Settings > Display>Screen timeout to adjust automatic sleep settings.

Restablecimiento de fábrica

1. Asegúrese de que el nivel de batería esté por encima del 30%.
2. Siga esta ruta para restaurar la configuración de fábrica: Configuración > Sistema > Opciones de restablecimiento > Restablecimiento de fábrica.
3. La tableta volverá a su estado de fábrica después de reiniciarse.

Configuración de memoria virtual

1. Siga esta ruta para configurar la memoria virtual: Configuración > Sistema > Expansión de memoria > Configuración de tamaño de expansión de RAM y seleccione el tamaño de memoria deseado.
2. Reinicie la tableta cuando lo indique el sistema para completar la configuración.

Configuración de gestos

1. Siga esta ruta para cambiar los modos de navegación: Configuración > Sistema > Gestos > Navegación del sistema.
2. Cambie entre "Navegación por gestos" y "Navegación con tres botones" según lo desee.

SOLUCIÓN DE PROBLEMAS

P1. La tableta no enciende

- Reinicie la tableta después de cargarla durante 30 minutos;
- Presione el botón de encendido para ver si la tableta está en modo de suspensión;
- Mantenga presionado el botón de encendido durante 5 segundos para apagar la tableta y luego reiníciela;
- Presione el botón de reinicio con un alfiler para restablecer la tableta.

P2. La tableta no carga

- Cargue el dispositivo durante al menos 30 minutos, por si la batería se agotó completamente;
- Asegúrese de que el cable USB esté correctamente conectado al puerto de carga;
- Pruebe otro cable USB y adaptador compatibles.

P3. Aparece un mensaje de error durante la operación

- Desinstale la aplicación que muestra el mensaje de error, luego descárguela e instálela nuevamente;
- Presione el botón de reinicio con un alfiler para restablecer la tableta.

P4. La tableta no puede ser detectada por el ordenador

- Asegúrese de que la tableta esté encendida;
- Pruebe otro cable USB;
- Pruebe otro puerto USB en el ordenador;
- En lugar de "Cargar este dispositivo", elija "Transferencia de archivos" al conectar la tableta al ordenador.

P5. La tableta no puede conectarse al Wi-Fi

- Asegúrese de que el Wi-Fi en su tableta esté activado;
- Asegúrese de ingresar la contraseña correcta;
- Reinicie el enrutador;
- Asegúrese de que no haya configuraciones de filtro o limitación de conexión de dispositivos en la configuración del enrutador;
- Olvide la red Wi-Fi actual, reinicie el enrutador y conéctese nuevamente a la red.

P6. El espacio de almacenamiento de la tableta no es suficiente

- Elimine las aplicaciones que no usa;
- Limpie la caché de las aplicaciones regularmente;
- Inserte una tarjeta microSD para ampliar el almacenamiento.

Warranty

Our Tablet PC offers one-year warranty after purchase.

For any inquiries, feel free to contact us. We'll be glad to help you out!

Email:Support@gooddealer.cn

Website: www.gooddealer.cn/pages/contact/

To receive warranty repair service: contact the appropriate Customer Care Center. The support technician will help qualify your unit for warranty repair, based on the warranty applicable to your unit and original purchase date, and will provide you with repair processes. If the Tablet PC is not normally sold in the country of use, it must be returned to a supported country for services. Warranty service may include the cost of shipping, handling, duties, taxes, freight, or fees to or from the service location.

To repair your Tablet PC outside the warranty period If your Pad is no longer in the warranty period, contact the appropriate Customer Care Center. Our support person will let you know about repair charges and processes.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.