

Thank you for purchasing this mobile. For the best performance, we recommend that you read the manual carefully.

<i>Basic information</i>	<i>2</i>
<i>Key Instruction.....</i>	<i>2</i>
<i>Interface Icons</i>	<i>3</i>
<i>Remove and Install the battery</i>	<i>3</i>
<i>Power on/Off your phone.....</i>	<i>3</i>
<i>Make or Answer a Call.....</i>	<i>4</i>
FUNCTION MENU.....	5
CONTACTS.....	5
MESSAGE	5
CALL LOGS	5
IMAGE VIEWER.....	6
CAMERA.....	6
VIDEO	7
AUDIO	7
GAMES.....	7
SETTINGS.....	8
<i>Phone settings.....</i>	<i>8</i>
<i>Display.....</i>	<i>8</i>
<i>Security.....</i>	<i>8</i>
<i>Call settings.....</i>	<i>9</i>
<i>Connections.....</i>	<i>10</i>
PROFILES	11
RECORDER	11
CALCULATOR	11
EBOOK READER	11
FM RADIO	11
MY FILES	12
CLOCK.....	12
CALENDAR	12
INTERNET.....	13

Specifications






Basic information

Main Display		System Used	GSM900/DCS1800
Phonebook capacity*	SIM according to card's type, 2000 in the mobile	Camera/video record	Support
Speaker	Supported	MP3/Recorder	Supported
SMS	Support	Call waiting	Support
Alarm clock/Calendar	Supported	USB Mode/Memory Card	Supported (T-flash card)

Key Instruction

Key Name	Function Description
Menu key	1. In standby interface can enter the main menu 2. Answer a call
Send key	1. Make or answer a call 2. Press Send key in standby mode to show all the call log
Back key	1. End an active call or reject a call 2. Press back key in standby mode show the phonebook
End key	1. End an active call or reject a call 2. Hold this key to power on/off 3. Exit from any interface to standby mode
Up/Down key	1. Scroll the cursor up and down
Left/Right key	1. Scroll the cursor left and right
0~9 key	1. Enter numbers or characters while editing text 2. Voicemail dialing(1) 3. Hold* key to input + 4. Press * key to insert a space while editing message, excluding the number input mode 5. Press 1 key to insert common symbols while editing text, excluding the numbers input mode
#key / *key	#key Press # key to change the input mode while editing text *Key Press * key to display the symbols window in the text input mode

Interface Icons

Icon	Description
	GSM system signal strength
	Missed a call
	New message
	Power indicator
	Alarm

Insert SIM card

1. Power off the phone and remove other external power
2. Take off the back cover and remove the battery of the phone
3. Insert SIM card into the SIM card slot in the phone.

Remove and Install the battery

The attached Li-ion battery along with the phone can be used after unpacking. For the first three times, please use up the power and charge it fully for new battery to perform well

Install the battery

1. Put the battery in the battery compartment, note that the metal end of the battery should be firstly inserted
2. Put on the back cover.

Remove the Battery

1. Take off the back cover.
2. Put finger on the side finger grip, and then lift up the battery from the finger grip to remove the battery

Power on/Off your phone

1. Hold the End key to power on the phone. The phone will automatically search for the network
2. When the phone is powered on, hold the End key to power off the phone

Make or Answer a Call

Make a call

1. Enter the phone number
2. Press Send key to make the call
3. Press End key or back key to end the call

Answer a call

There is an incoming call

1. Press Send key to answer the call
2. Press End key or back key to end or reject the call

Function Menu

Contacts

You have 2 phonebooks in this mobile phone: SIM card and the mobile. The mobile can store 2000 or more phone numbers and the SIM card's capacity depends on its type.

New: Create a new contact

Write message: Write a message and send the text messages to this current record

Call: Make a call of current number.

Delete: Delete the current record

Delete multiple: Delete the selected contacts

Import/Export: Import T card contacts to the phone/Export phone contacts to T card/copy SIM1 or SIM2 contacts to mobile, or copy phone contacts to SIM1/SIM2.

Send vCard: Send the vCard by SMS or MMS or Bluetooth

Others

[Speed dial]: Speed dial can be set up

[Own number]: You can view the local numbers

[Service number]: You can view the service number

[Memory status]: Check the storage capacity of the SIM card and phone contacts.

Message

New chat: You create SMS messages in this menu.

Drafts: View the draft you saved.

Delete: Deletes the current message.

Delete all :Delete all text messages in the selected list.

Call : Call the contact of the selected text message.

Mark: Select multiple or all contacts to delete.

Sort: Categorize the messages by time or name

Templates: Some SMS templates are provided, also, you can edit some by yourself.

SMS settings: Set the message configuration and can be view the memory information of message box.

Push message: You can view the push messages.

Security inbox: Enter the password, you can view the secure messages

Cell broadcast list: You can view the Cell broadcast messages

Voice mail server: You can view and set the voice mail server

Message capacity: You can view Message capacity of SIM or phone.

Call logs

Missed calls: Display the missed calls about the latest time and date, caller's number and

calling times.

Dialed calls: Display the dialed calls about the latest time and date, caller's number and calling times.

Received calls: Display the answered calls about the latest time and date, caller's number and calling times.

[Details]: See the current record

[Call]: Call the current number.

[Write message]: Send text messages to the current record

[Add to contacts]: Save the phone number to contacts

[Add to Blacklist]: Add the current to the blacklist

[Delete]: Choose to delete the current record

[Delete all]: Delete all the records

Rejected calls: Display the Rejected calls about the latest time and date, caller's number and calling times.

Delete all: Can clear the call logs.

Call timers: Can view the duration of the call.

Data service counter: Can view data usage.

Image viewer

View or modify photos saved in the album.

Delete: Delete the picture

Mark: Select multiple or all contacts to delete.

Rename: Rename the current picture.

Slide play: Show the pictures in the gallery through a slide show.

Details: You can be view the image information.

After opening a picture, you can do the following:

[Set as wallpaper]: Use the picture as wallpaper.

[Power on/off display]: Use the picture as power on/off display.

[Screen saver]: Use the picture as Screen saver display.

[Set as contact icon]: Use the picture as contact icon.

[Share]: Share the picture by MMS or Bluetooth.

[Edit image]: Edit the picture.

Camera

This feature allows you to feel the endless charm of the imaging world, your digital camera in time to capture a brief moment, beautiful photos become memory

Enter the camera:

More options: You can Select DC mode or DV mode; Turn on or off the flash/night mode;

Set the pictures' size; Set the brightness /contrast/Cont.shot/White balance/Delay/Effect.

Image viewer: Preview pictures taken and saved in your phone.

settings: You can edit the settings for shutter's shutter sounds, quality, banding, auto save, preferred storage.

Help: You can check the instructions for the camera.

Video

Play user has recorded / downloaded video files; select a video according to the Options menu has the following functions:

Play: Play a selected video file.

Open: Open local browse or internet browse or local play list.

Fullscreen play: Videos are played in full screen.

Adjust brightness: You can adjust the video brightness.

View: You can view the videos in my favorite or history play list.

Repeat: You can set up a loop to play all videos or a single video.

Shuffle: Turn on or off shuffle.

Set as: Set the selected video to screen saver or power on/off display.

settings: Set the video configuration.

Details: You can view the video information.

Exit: Exit Video Player.

Audio

The audio player can be play MP3 file and so on, let's you listen to audio files through headset or loudspeaker.

Music list: Go to the playlist and select a list to play the music.

Add: Add the music to the saved play list or to a new play list.

Set as ringtone: Set the music as incoming call ringtone or alarm ringtone.

Shuffle: Turn on or off shuffle.

Repeat: Setting Repeat mode.

Settings: Set up relevant information of music player.

Open review: Playback the music.

Exit: Exit audio player.

Games

The device offers some games : Minijava/Doodle jump/Crossy Road/Bubble party Mix/Super Pet Twist/Football Cup.

Settings

Phone settings

Time & date

Set time/date: Set the display date and time

Time format: Choose the time and date format

Date format: Choose the date format

Update time settings: Turn on or off to automatically update the time according to the time zone

Language settings

Display language: Choose the current language from languages, then the phone menus and interface refresh for the corresponding subsequent language.

Writing language: Set the Pref. input method.

Shortcut settings

Define shortcuts to navigation keys and right key.

Auto power on/off

Set the automatic power on/off time.

Power management

You can view the percentage battery.

Restore factory settings

Restore factory Settings after entering the password.

Input correct password (The default password is "1234")

Display

Animation effect: Set power on/off animation display.

Wallpaper settings: Set the stand-by wallpaper.

Idle display settings: The following functions are displayed or not on the standby interface(Time& date/SIM1/SIM2/Today's schedule/Timer/Audio player/FM radio/Customized word/STK).

Screen saver settings: Turn on or off the screensaver.

Contrast: Set screen brightness.

Keypad backlight time: Choose keypad backlight time for off、20 secs、10 secs、5 secs Night mode.

Auto keypad lock: Choose the keypad lock for off、15 secs、30 secs、1 min、5 mins.

Security

PIN

Activate or deactivate SIM1/SIM2 PIN lock.

Modify PIN2

Set new passwords including PIN1, PIN2 and phone password. Note: Please remember your password firmly in time after changing.

Phone locked

Activate or deactivate the Phone lock.(The default password is 1234)

Modify the cellphone password

Set new passwords for phone Lock. Note: Please remember your password firmly in time after changing.

Privacy

To encrypt phonebook, call History, Messages and so on

Lock screen by end-key

Turn on or off ,Press end to lock the screen.

Fixed dialing number

To set the fixed number (Note: If your SIM card supports can be restricted only to dial the selected phone number. When this feature is turned on, only a fixed dial-up table can call the phone number or a few figures in the table at the beginning of the phone number)

Blacklist

blacklist: Insert the blacklist number.

Blacklist settings: choose open or close audio call interception/message interception.

Call settings

Dual-SIM

Standby mode: You can choose SIM1/SIM2/Flight mode/select when power on.

Reply by original SIM: You can choose Reply call or Reply message by original SIM .

Set SIM name: Can set SIM name.

Set dual SIM call diver: Support double card mutual transfer function.

Call divert

Choose SIM1/SIM2 to open, close or enquire the call forwarding function.

Call waiting

Select SIM1/SIM2 to open, close or inquire call waiting.

Call barred

Select SIM1/SIM2 to open, close or inquire call barred.

Hide ID

Select SIM1/SIM2 to hide ID or display own ID or display ID by network.

Others

Call time minute reminder: Choose display the call time or not when the phone in-calling status.

Auto redial: Choose whether automatic redial will be implemented when the called party is in the busy or have no response.

Vibration when connected: Vibrating reminder during connection.

Reply SMS after: To open or close the message blocking function.

Auto record voice call: Turn it on, The call can be recorded automatically.

Connections

Network account

Management and editing the network for the Internet browser settings, please consult the specific settings to be transported by the network.

Data service

Turn on or off data service.

Data roaming

Turn on or off data roaming.

Preferred data selection

Choose to use SIM1 or SIM2 data traffic to access the Internet.

Network selection

Select automatic or manual method to search the network.

Network type

Choose network type:4G/3G/2G.

VoLTE

The full name for VOLTE is Voice Over LTE, which stands for high-definition Voice calls over 4G networks. After opening Volte, all the services will be carried on the 4G network. So, signal and sound quality will be much better when we talk.

Bluetooth

Activate the Bluetooth function.

Bluetooth Visibility: Activity /Deactivate this function

Paired devices: Display the connected Bluetooth or add new device.

Transferring files: You can view files received via Bluetooth.

Device name: View the Bluetooth name and can be edit the Bluetooth name.

Bluetooth file storage: Set the Bluetooth file storage location.

Help: Bluetooth operation instructions.

STK

As the SIM1/SIM2 operator STK.

Profiles

The Available profiles in your phone are: Normal, Silent, Meeting, Indoor, Outdoor. You can edit the alert type, ring type, ring tones, ring volume, message tone, and message volume or set the button's volume and voice call reminder accordingly.

Note: A long press on “#” button automatically switches to Silent/Meeting mode, press again to return to the original model.

Recorder

Recording started: Start recording.

Audition: Play the record.

Record again: Recording overwrites the original recording file.

Delete: Delete the recording file you just recorded.

Send: Send the record by MMS or Bluetooth.

Record file list: View the recording files.

Storage: Set the recording file save path.

File format: Set recording file save format.

Calculator

The cell phone support continuous four mixed arithmetic operation and the operation is simple, practical and convenient.

Ebook reader

Reading. Txt format of the text of the document. May be a text document format through the USB data lines in mobile phone functionality to copy read.

FM radio

This phone support the FM radio function

Auto search and save: Automatically search for FM channels and save them in the list.

Channel list: Set up the channel list and frequency

Save: Save the FM Channel.

Manual input: In put the frequency by manual

Open speaker: Turn on the speaker to play FM.

Background play: Play FM in the background.

Record: To open or close the recording.

Timing record: Timing for FM recording.

Record file list: View audio recordings file.

Storage: Set FM recording file save location.

Help: Operation instructions for FM use.

My files

Phone

You can manage and assign several folders in this menu by transferring, copying and moving the files saved in these folders. Note: Part of the folders in this menu is hidden by default. You just need to save a file with its format to the root folder of the mobile, and then the system will recognize it automatically. You can move the file to its corresponding folder.

[New folder]: Create a new folder.

[Delete]: Delete a folder.

[Details]: Check the file details

[Edit]: Can rename or copy or cut the file.

[Search]: Enter the keywords can to search in the file manager.

[Sort]: Files can be classified by name, time, etc.

[Mark]: Select multiple or all files to delete.

[Memory status]: View phone/memory memory ; Format phone or memory card; Rename memory card.

Clock

You can set 3 alarm times with this mobile. For each of them, you can set the alarm status to be open or not, set the alarm time and alarm frequency (once, daily or on several self-defined dates).

Calendar

To access the Calendar, press the left soft key. The first row displays year and month; the second row displays week; the middle part displays dates for a specific month; and the last row displays the two soft keys. In the calendar mode, view the previous week by pressing the up navigation key and the next week by pressing the down navigation key; View the previous day by pressing the left navigation key and the next day by pressing the right navigation key. The selected date is displayed in deep color.

Add new schedule: Create a new schedule.

View schedule: View the schedule for the selected date.

All schedules: View the full schedule.

Clear today's schedule: Delete today's schedule.

Clear all: Delete all schedules.

Go to date: Jump to the appointed date quickly when you input a date to search.

Weekly: View the calendar by week.

Daily: View calendar by day.

Internet

You can access the Internet by bookmarks or typing in a web address.

FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The mobile device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.499 W/kg.

For body operation, this device has been tested and meets FCC RF exposure guidelines when used with any accessory that contains no metal and that positions a minimum of 15mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.