 
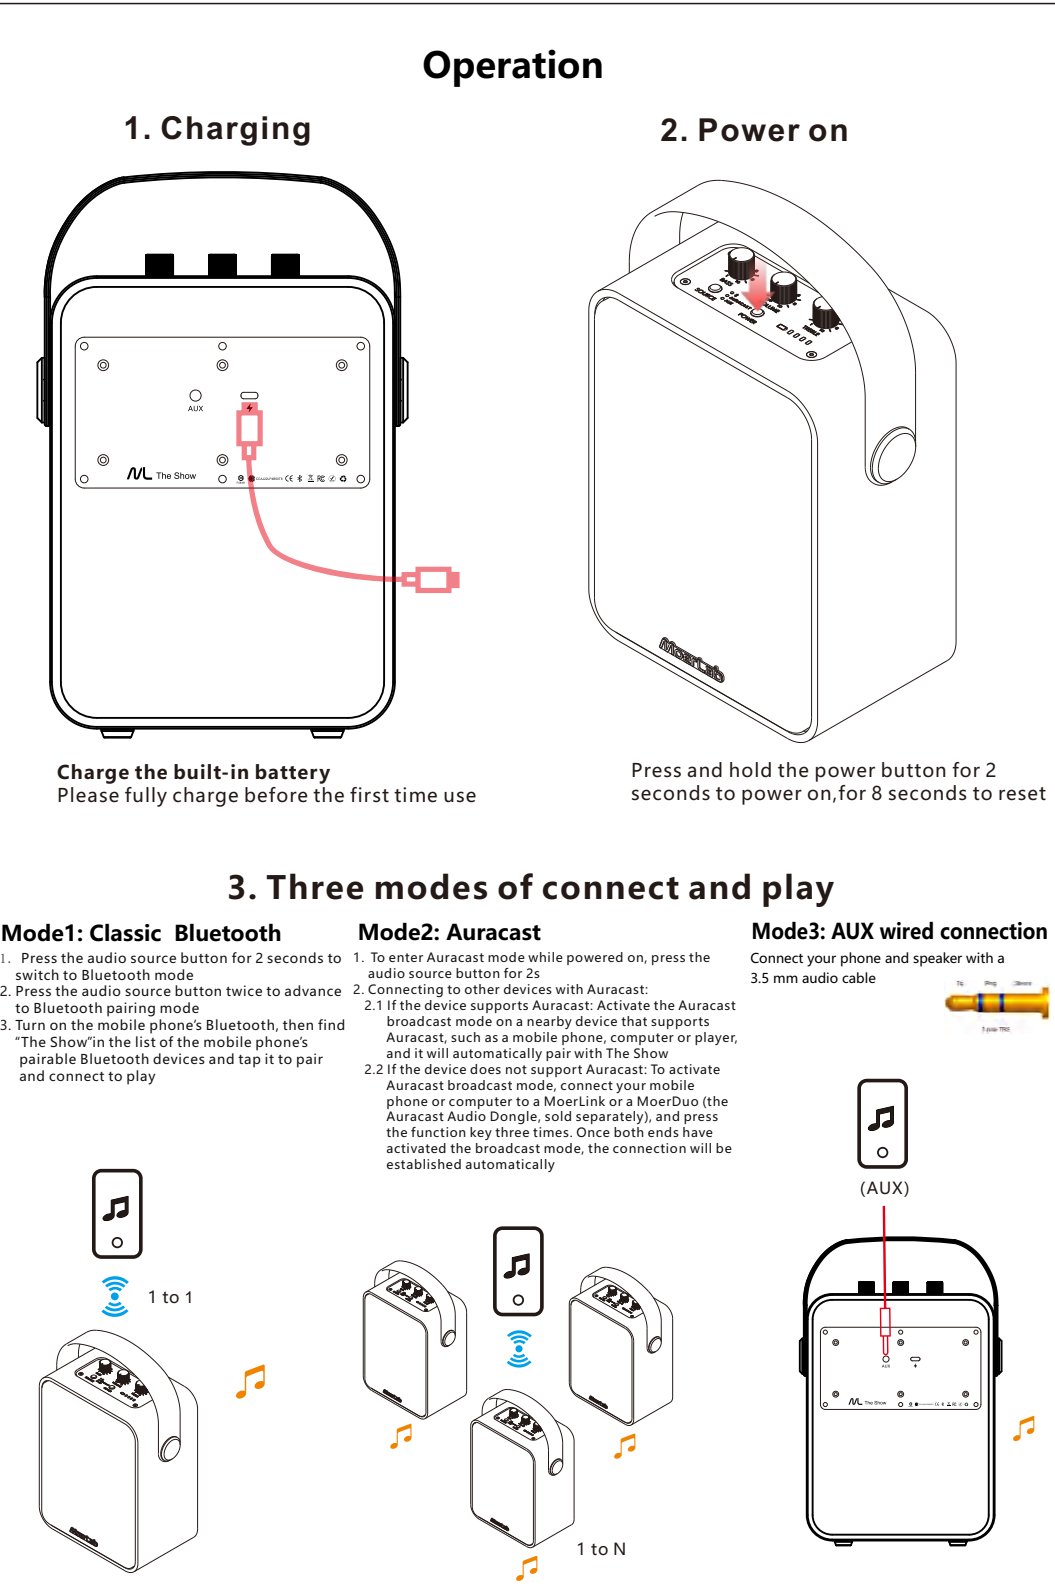 
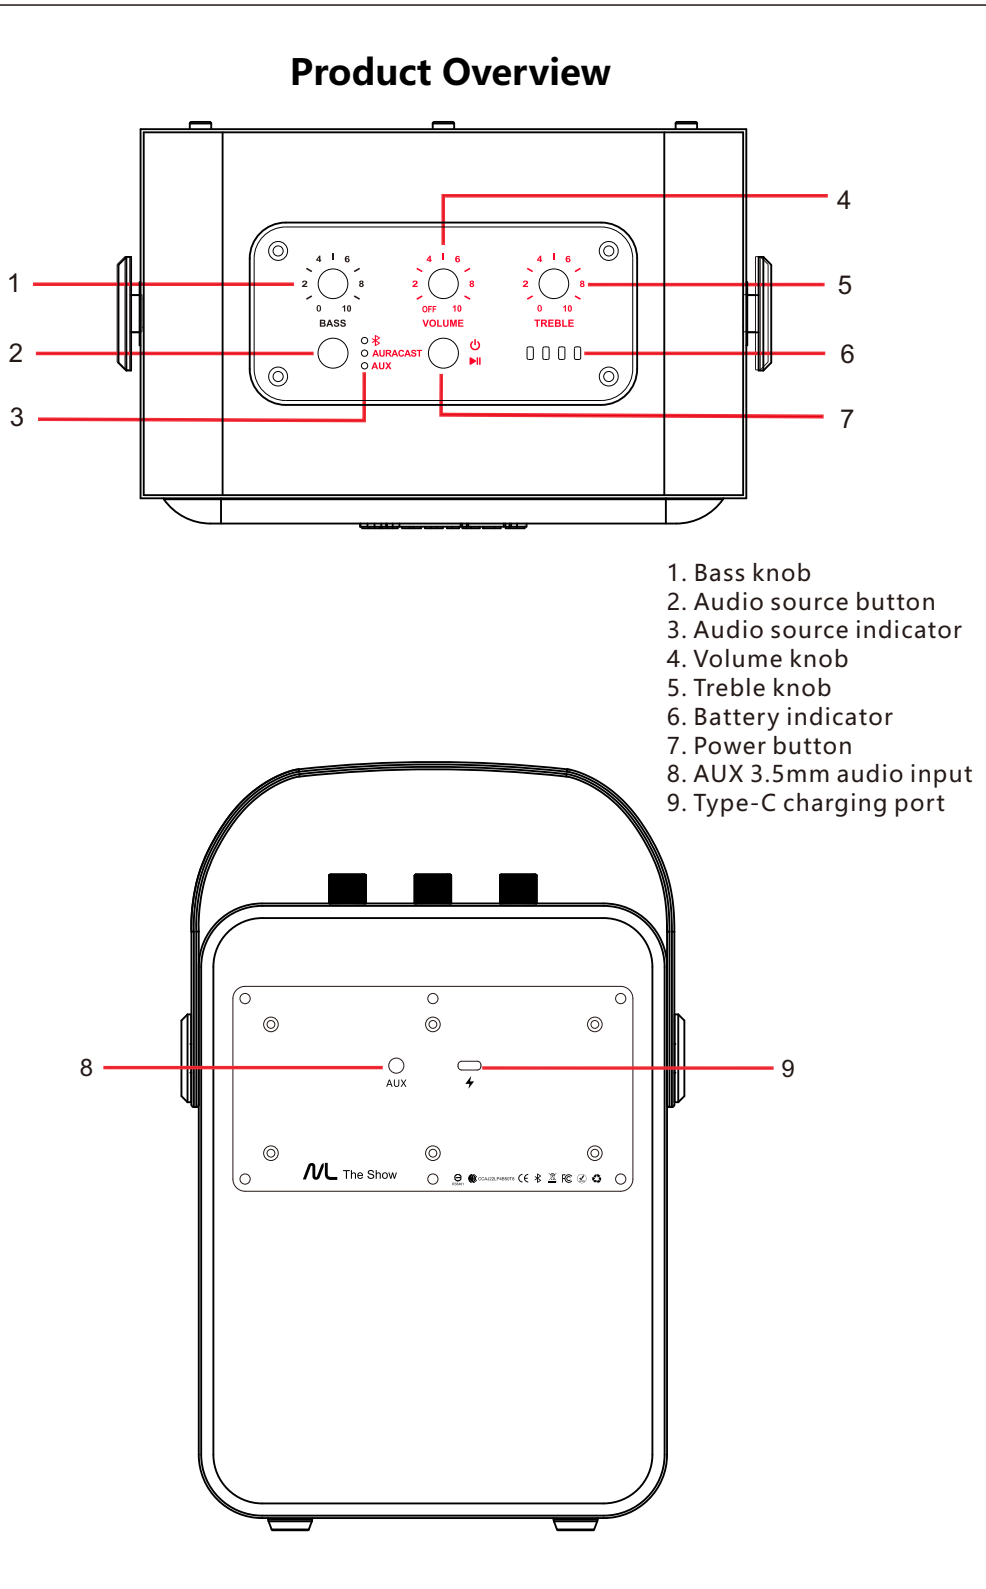 
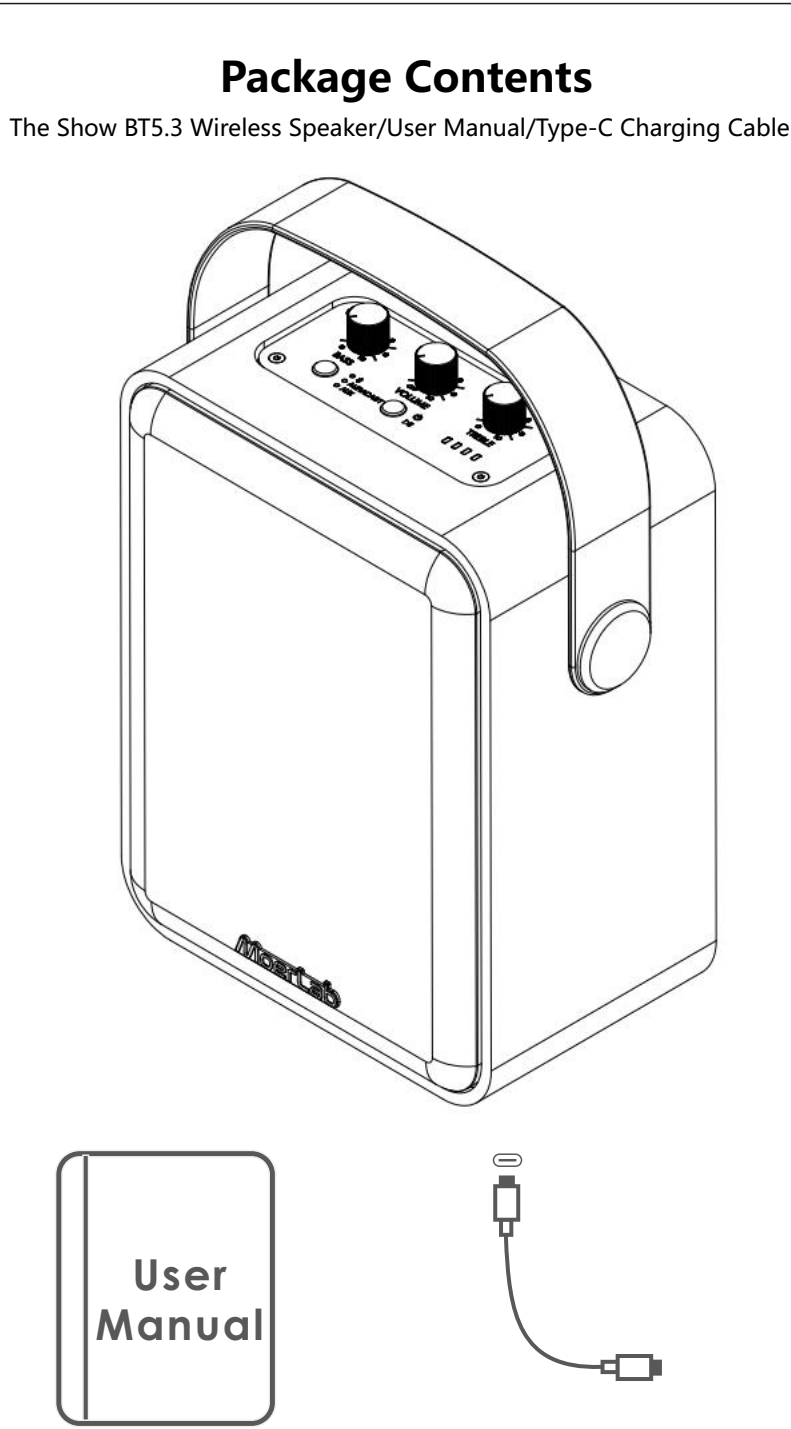 


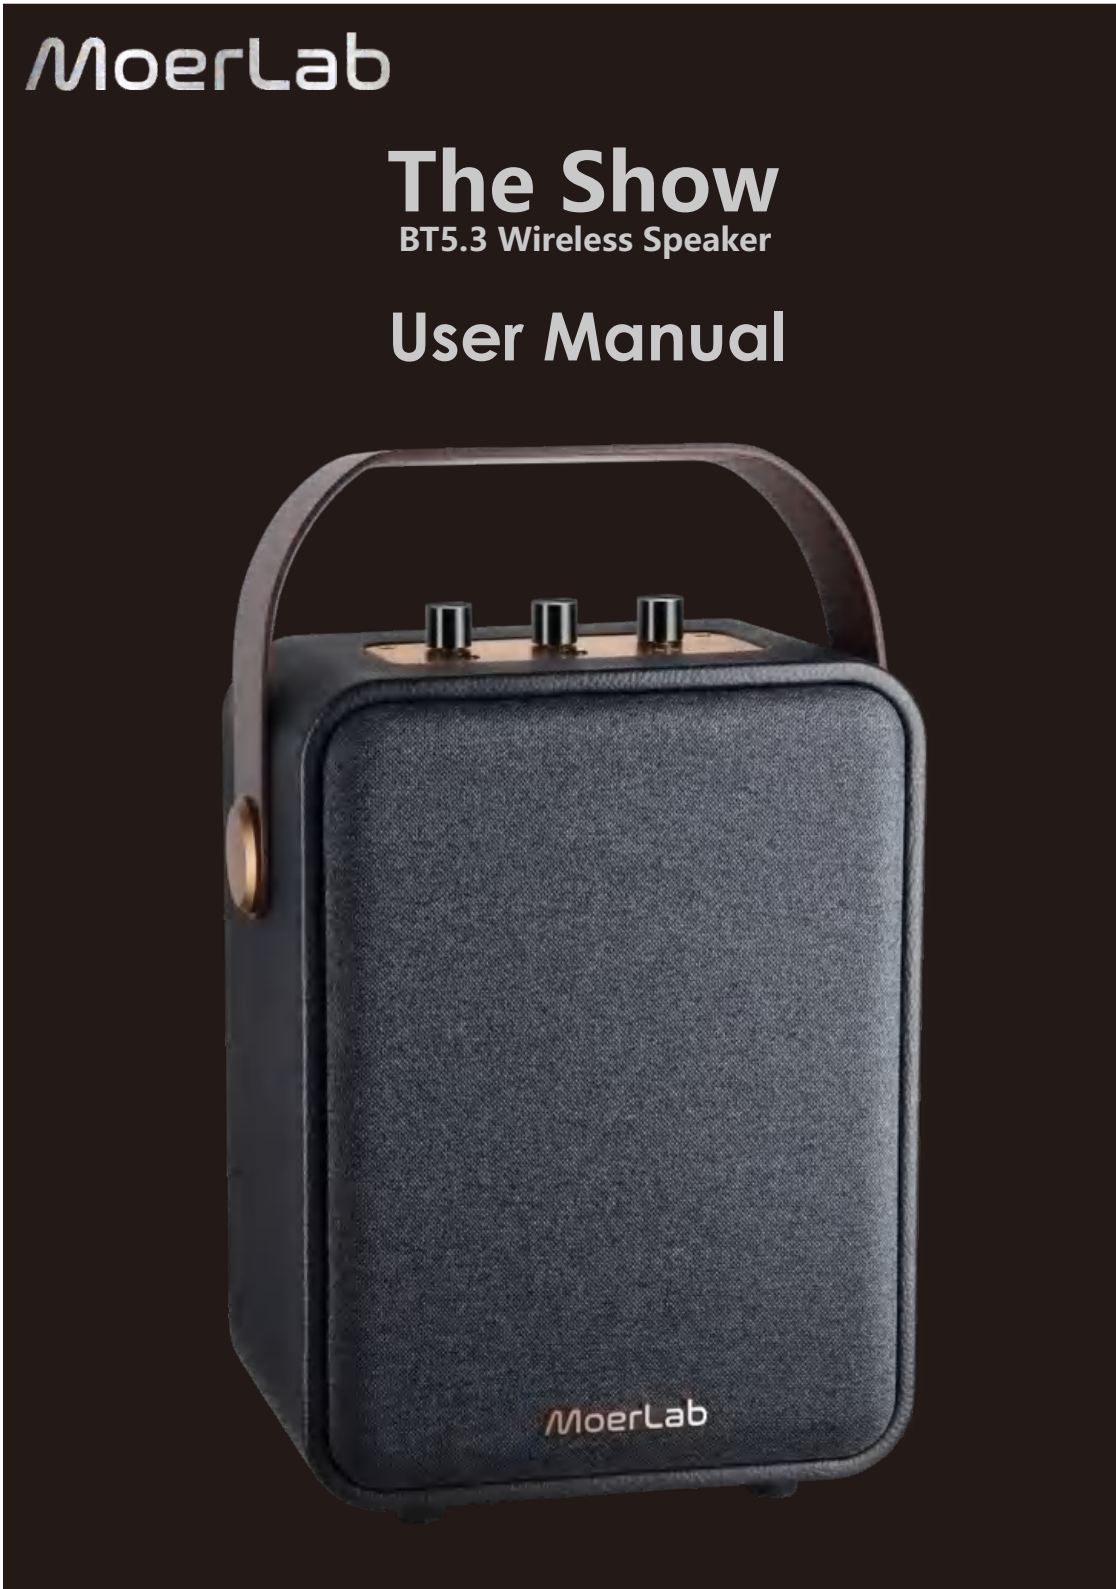

Function Operation Instructions		
Function	Operation	LED Indicator
Power On	Press the power button for 2S	4 LEDs stay on for 10s
Power Off	Press the power button for 2S	All LEDs turn off
Battery Level	Press the power button twice	White LEDs stay on for 10s
Play/Pause	Tap the power button	N/A
Bluetooth Pairing	Press the audio source button twice to enter Bluetooth pairing mode	Flashing
Bluetooth Connection	When the speaker is in Bluetooth mode, search for the Bluetooth device named "The Show" on your phone and tap it	White LEDs stay on
Device Auto Power Off	The speaker will automatically power off after 5 minutes without a Bluetooth connection	All LEDs turn off
Switch to Bluetooth Mode	Press the audio source button for 2 seconds to switch to Bluetooth mode	White LEDs flashes
Switch to Auracast Mode	Press the audio source button for 2 seconds to switch to Auracast Mode	White LEDs flashing in searching state
AUX Mode	When the speaker is in power-on state, connecting to Line in will be automatically recognize as AUX output	White LEDs light stay on
Volume Up	Rotate the Volume knob to the right	
Volume Down	Rotate the Volume knob to the left	
Bass Adjustment	Rotate the Bass knob to the right	
Treble Adjustment	Rotate the Treble knob to the right	
Battery Level Display	Battery level is 10%~25%	1 LED light stays on
	Battery level is 25%~50%	2 LEDs light stays on
	Battery level is 50%~75%	3 LEDs light stays on
	Battery level is 75%~100%	4 LEDs light stays on

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
 
 
- Rearrange the position of the equipment and receiver.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.




Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

*RF warning for Mobile device:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 200mm between the radiator & your body.

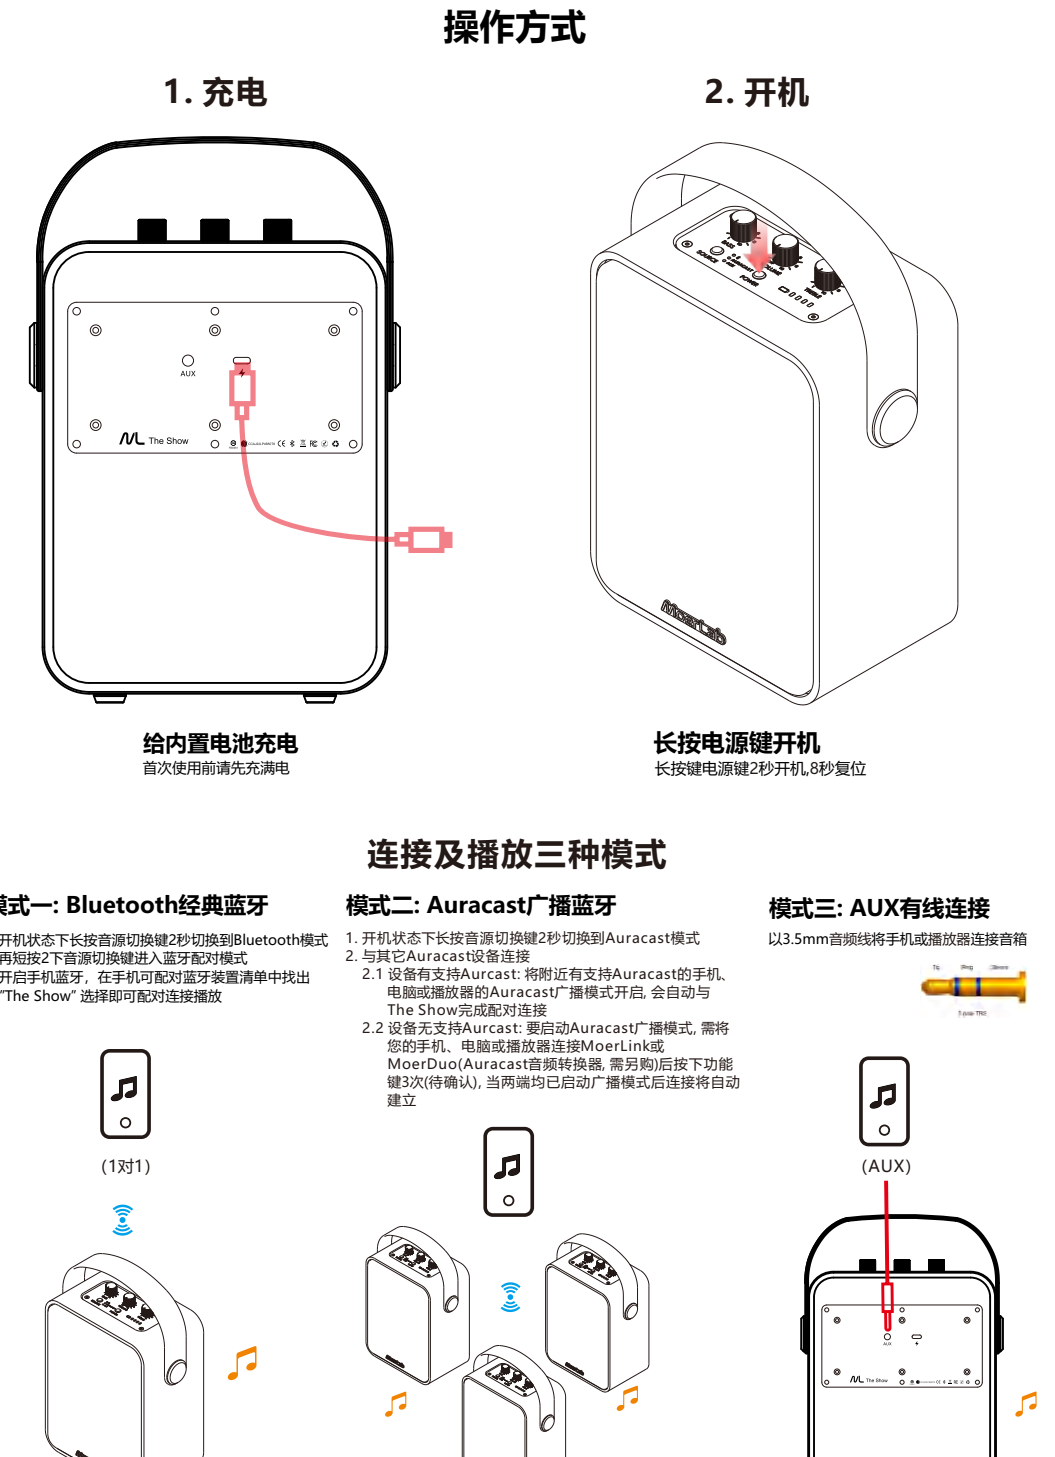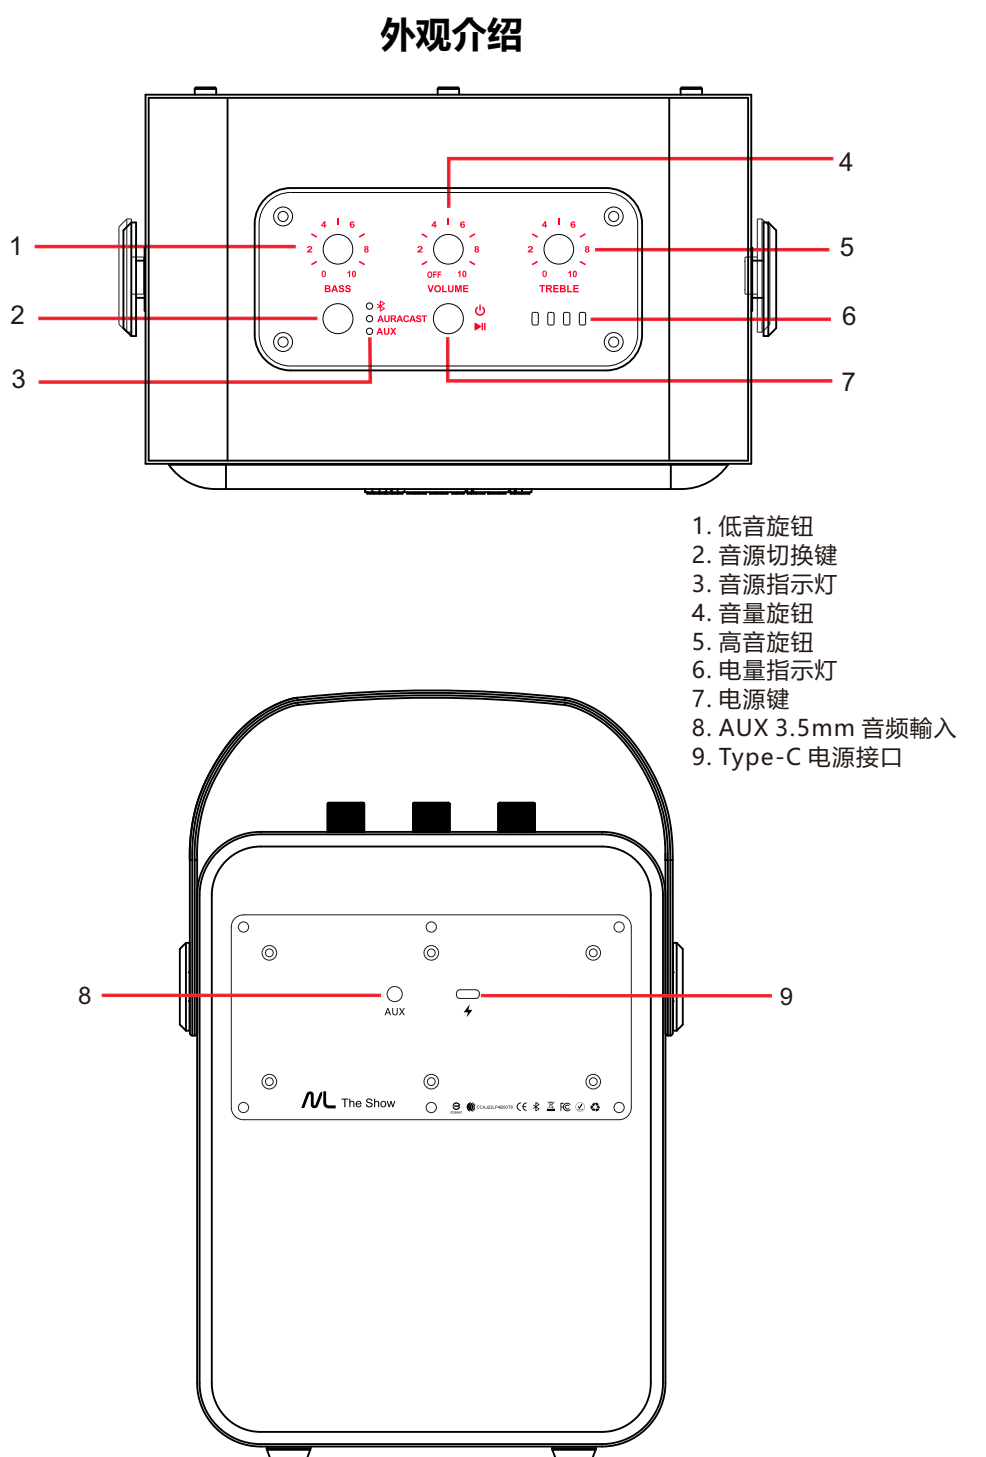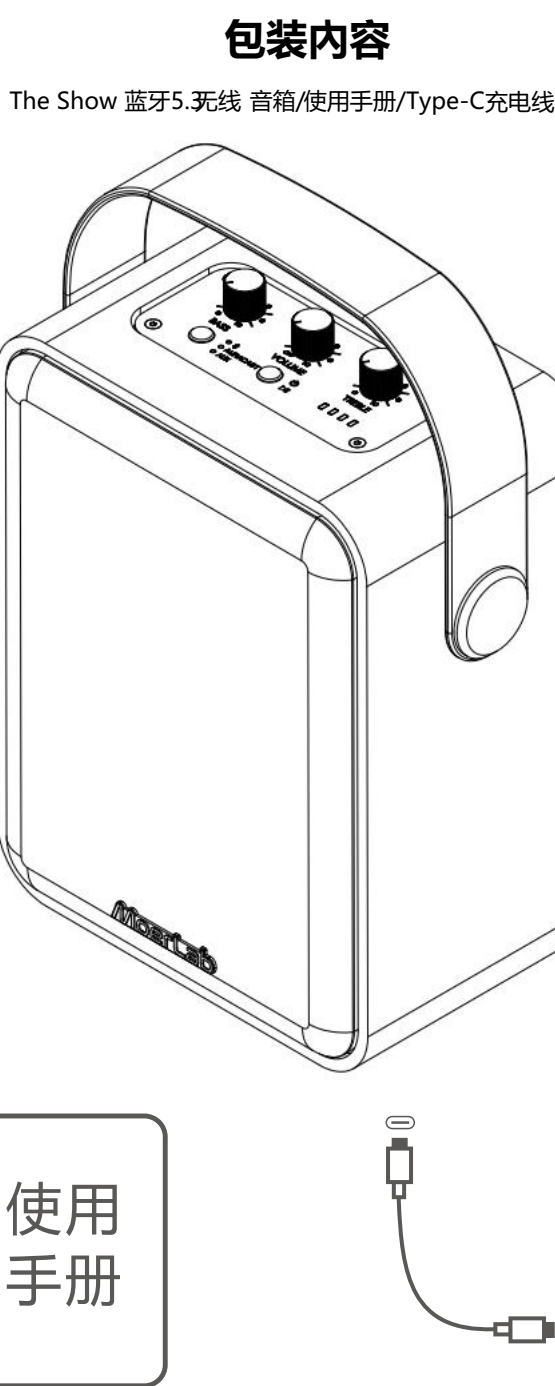

LED指示灯状态说明		
功能	操作	LED 灯
开机	长按电源键2秒开机	4个白色LED指示灯持续10秒
关机	长按电源键2秒关机	灯灭
查询电量	长按电源键2秒按下电源键查看电量	白色LED指示灯持续10秒
播放/暂停	短按电源键播放/暂停音乐	
蓝牙配对	长按蓝牙键2秒，长按下电源键进入蓝牙配对状态	快闪
蓝牙连接	长按蓝牙键2秒，长按下电源键进入蓝牙配对状态	白色LED灯常亮
蓝牙超时关机	蓝牙模式开机无操作5分钟关机	灯灭
切换到蓝牙模式	长按蓝牙键2秒切换到蓝牙模式	白色LED快闪
切换到Auracast模式	长按蓝牙键2秒切换到Auracast模式	Auracast模式蓝牙灯LED灯闪烁，成功接收广播LED常亮
AUX模式	长按蓝牙键2秒任意模式下按Line in键自动识别为AUX输出	白色LED灯常亮
加音量	向右旋转音量旋钮	
减音量	向左旋转音量旋钮	
低音调节	向右旋转低音旋钮	
高音调节	向左旋转高音旋钮	
电量显示	电池电量为10%~25%	1颗灯常亮
	电池电量为25%~50%	2颗灯常亮
	电池电量为50%~75%	3颗灯常亮
	电池电量为75%~100%	4颗灯常亮

LED指示灯状态说明		
功能	操作	LED 灯
开机	长按电源键2秒开机	4个白色LED指示灯持续10秒
关机	长按电源键2秒关机	灯灭
查询电量	长按电源键2秒按下电源键查看电量	白色LED指示灯持续10秒
播放/暂停	短按电源键播放/暂停音乐	
蓝牙配对	长按蓝牙键2秒，长按下电源键进入蓝牙配对状态	快闪
蓝牙连接	长按蓝牙键2秒，长按下电源键进入蓝牙配对状态	白色LED灯常亮
蓝牙超时关机	蓝牙模式开机无操作5分钟关机	灯灭
切换到蓝牙模式	长按蓝牙键2秒切换到蓝牙模式	白色LED快闪
切换到Auracast模式	长按蓝牙键2秒切换到Auracast模式	Auracast模式蓝牙灯LED灯闪烁，成功接收广播LED常亮
AUX模式	长按蓝牙键2秒任意模式下按Line in键自动识别为AUX输出	白色LED灯常亮
加音量	向右旋转音量旋钮	
减音量	向左旋转音量旋钮	
低音调节	向右旋转低音旋钮	
高音调节	向左旋转高音旋钮	
电量显示	电池电量为10%~25%	1颗灯常亮
	电池电量为25%~50%	2颗灯常亮
	电池电量为50%~75%	3颗灯常亮
	电池电量为75%~100%	4颗灯常亮

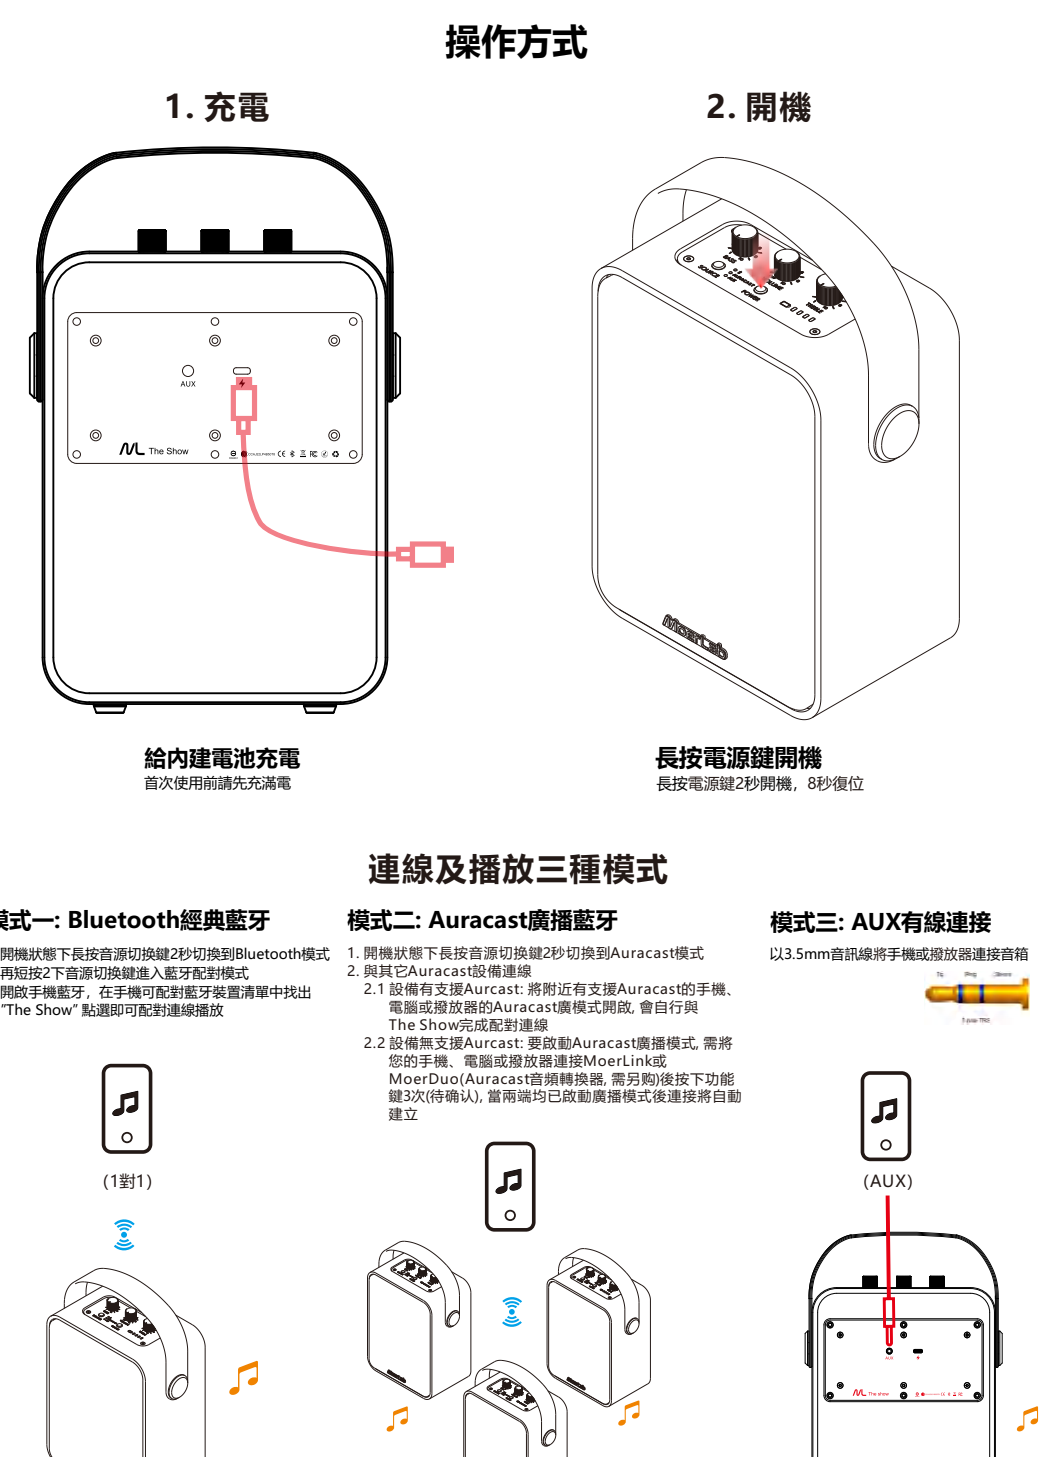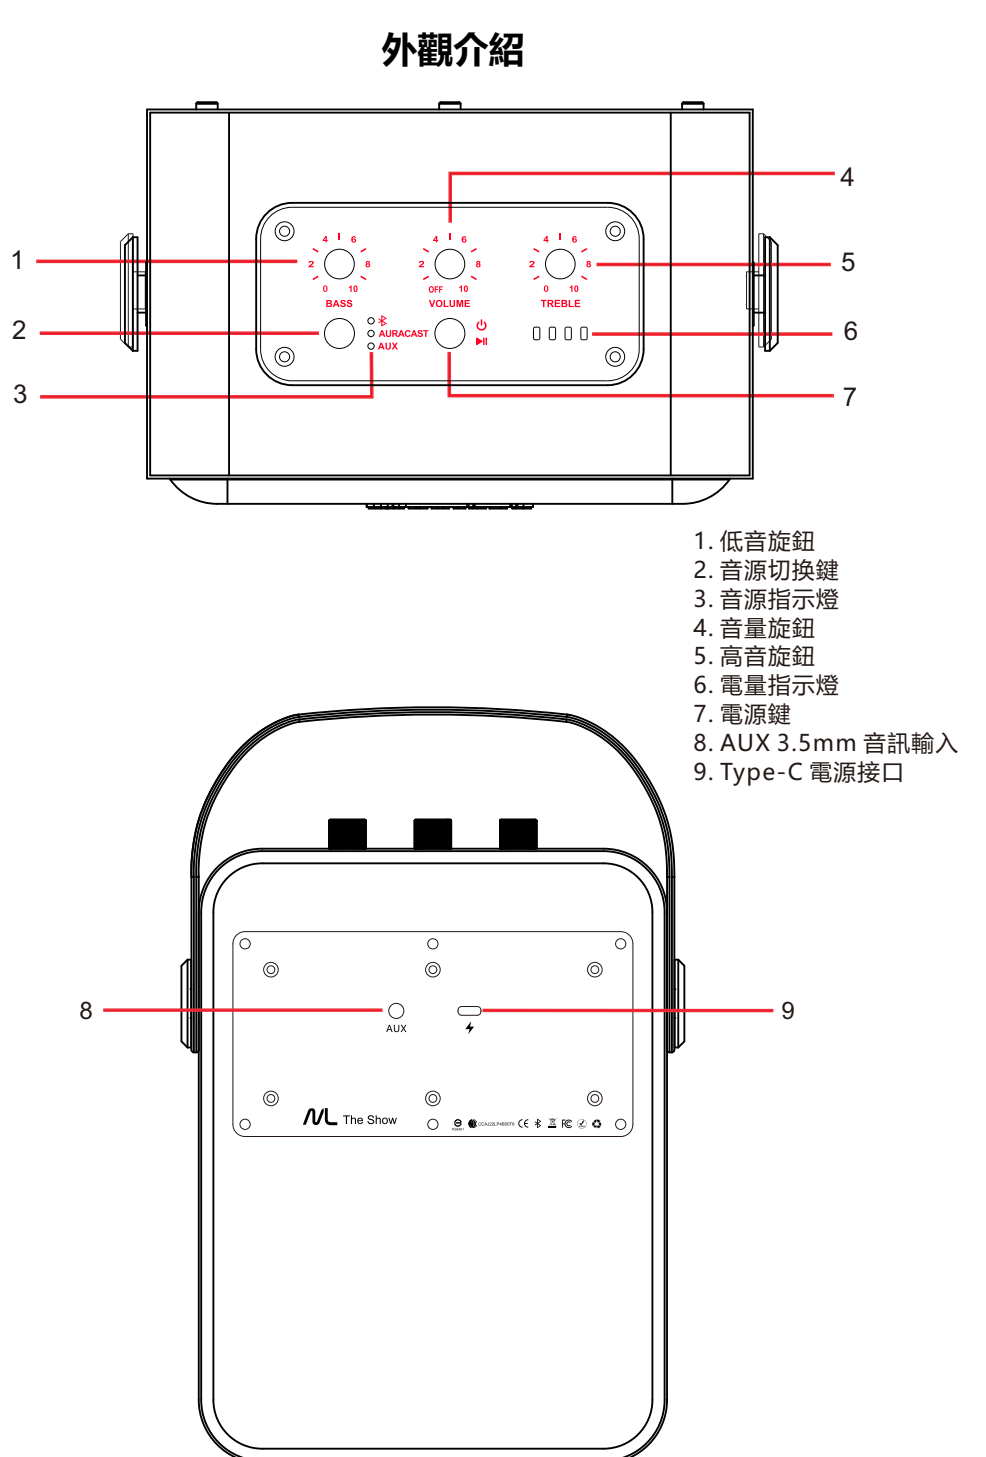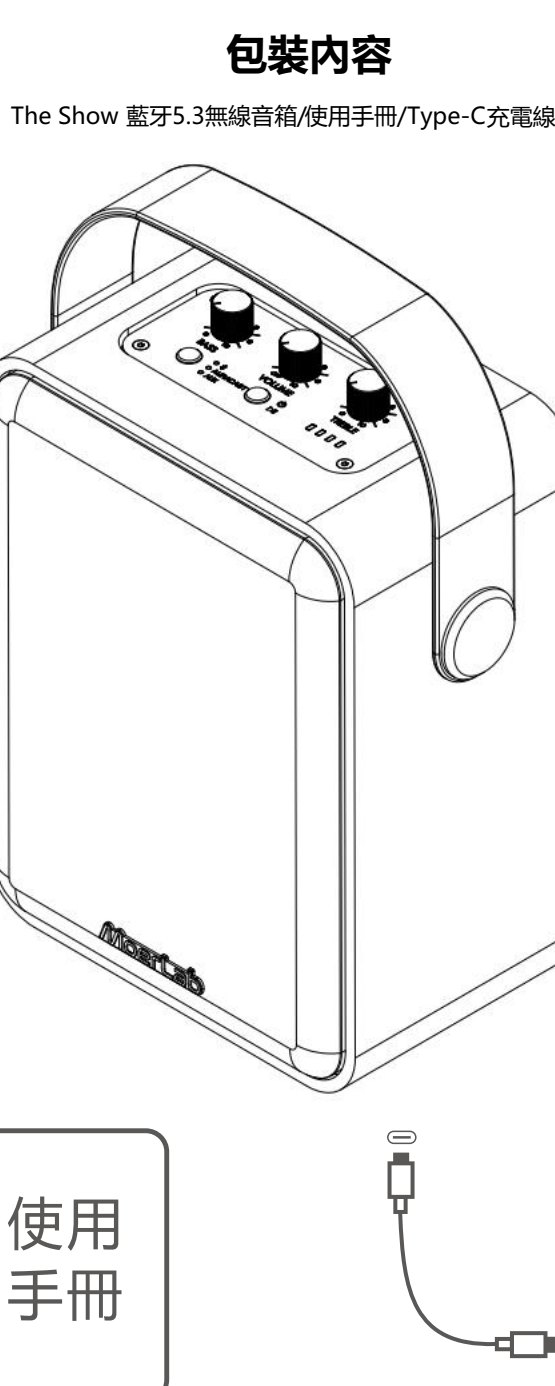   

LED指示灯状态说明		
功能	操作	LED指示灯
开机	长按电源键2秒开机	4颗白色LED指示灯持续10秒
关机	长按电源键2秒关机	灯灭
查询电量	长按电源键2秒按下电源键查看电量	白色LED指示灯持续10秒
播放/暂停	短按电源键播放/暂停音乐	
蓝牙配对	长按蓝牙键2秒，长按下电源键进入蓝牙配对状态	快闪
蓝牙连接	长按蓝牙键2秒，长按下电源键进入蓝牙配对状态	白色LED灯常亮
蓝牙超时关机	蓝牙模式开机无操作5分钟关机	灯灭
切换到蓝牙模式	长按蓝牙键2秒切换到蓝牙模式	白色LED快闪
切换到Auracast模式	长按蓝牙键2秒切换到Auracast模式	Auracast模式蓝牙灯LED灯闪烁，成功接收广播LED常亮
AUX模式	长按蓝牙键2秒任意模式下按Line in键自动识别为AUX输出	白色LED灯常亮
加音量	向右旋转音量旋钮	
减音量	向左旋转音量旋钮	
低音调节	向右旋转低音旋钮	
高音调节	向左旋转高音旋钮	
电量显示	电池电量为10%~25%	1颗灯常亮
	电池电量为25%~50%	2颗灯常亮
	电池电量为50%~75%	3颗灯常亮
	电池电量为75%~100%	4颗灯常亮

LED指示灯状态说明		
功能	操作	LED指示灯
开机	长按电源键2秒开机	4颗白色LED指示灯持续10秒
关机	长按电源键2秒关机	灯灭
查询电量	长按电源键2秒按下电源键查看电量	白色LED指示灯持续10秒
播放/暂停	短按电源键播放/暂停音乐	
蓝牙配对	长按蓝牙键2秒，长按下电源键进入蓝牙配对状态	快闪
蓝牙连接	长按蓝牙键2秒，长按下电源键进入蓝牙配对状态	白色LED灯常亮
蓝牙超时关机	蓝牙模式开机无操作5分钟关机	灯灭
切换到蓝牙模式	长按蓝牙键2秒切换到蓝牙模式	白色LED快闪
切换到Auracast模式	长按蓝牙键2秒切换到Auracast模式	Auracast模式蓝牙灯LED灯闪烁，成功接收广播LED常亮
AUX模式	长按蓝牙键2秒任意模式下按Line in键自动识别为AUX输出	白色LED灯常亮
加音量	向右旋转音量旋钮	
减音量	向左旋转音量旋钮	
低音调节	向右旋转低音旋钮	
高音调节	向左旋转高音旋钮	
电量显示	电池电量为10%~25%	1颗灯常亮
	电池电量为25%~50%	2颗灯常亮
	电池电量为50%~75%	3颗灯常亮
	电池电量为75%~100%	4颗灯常亮



www.moerlab.com