

# **Magic wand rf transmitter**

## Package List:

1. Magic wand (transmitter) 1PCS

2. User manual 1PCS

## Magic wand battery replacement

1. Unscrew the battery cover screw

2. Put 2xAA batteries into the battery holder, facing the "+" and "-" marks of the battery holder

3. After the battery is correctly installed, close the battery cover and tighten the screws

## Use of Magic wand

1. When using the Magic wand, please pair it with the electric appliance to be controlled

2. Press the magic wand ON/OFF button, or shake the magic wand, the snowflake lights will flicker, the music will sound, and the electric appliance will turn on

3. Press the magic wand ON/OFF button again or shake the wand, the magic wand music will sound, the snowflake lights will flicker, and the electric appliance will turn off.

4. Long press the button on the magic wand to turn on and off the sound of the wand.

## Battery handling and usage:

**WARNING:** Keep batteries away from children and pets.

Follow the battery manufacturer's safety and usage instructions.

Insert the battery observing the proper polarity (+/-) as indicated inside the Battery Compartment.

**CAUTION:** Failure to properly align the battery polarity can cause personal injury and/or property damage.

Remove spent or discharged battery from the product. Remove the battery when not using the product for an extended period.

Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.

Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information contact your local solid waste authority.

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause

harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.