



**FORD GT**

Official Licensed Product

# Parent and Rider Manual

**STOP!**

**DO NOT RETURN TO STORE**  
This product cannot be returned  
for a refund after it has been  
unpacked and used.

Call us Toll-Free  
at 1-866-204-9737 for  
assistance and information  
from our trained staff.

For product related questions  
or custom service needs please  
email [info@hypertoys.com](mailto:info@hypertoys.com)

**VISIT US ONLINE@**  
[www.hypertoys.com](http://www.hypertoys.com)

**CAUTION! CHARGER IS A ELECTRONICALLY OPERATED PRODUCT:**  
Not recommended for children under 3 years of age. As with all  
electric products, precautions should be observed during handling  
and use to prevent electric shock.



**WARNING:** USE AT YOUR OWN RISK. ADULT SUPERVISION IS REQUIRED.  
THIS IS A POWERFUL TOY AND IS NOT INTENDED FOR RIDERS UNDER THE AGE OF 3.

Do not discard this owner's manual. Refer to the manual for important instructions before operating and to progress in skill.

No more than 2 rider at a time. Do not exceed 132 lbs (60 kgs) rider weight.

Do not allow riders under the age of 3 years old to use this product. Adult supervision is required.

Always wear shoes and proper protective gear, such as ANSI, SNELL, or ASTM approved helmets. Elbow and knee pads are also recommended.

Battery life may be reduced in extreme temperatures or with a maximum weight load.

Use only in safe controlled areas, not on public streets, or near motor vehicles.

Do not ride at night or in low visibility conditions.

Steep, rough, uneven, or wet surfaces can increase risk to the rider.

Be sure to check local regulations to understand how and where it is allowed to use this product.

**CONTAINS SEALED LEAD-ACID BATTERY. MUST BE RECYCLED OR DISPOSED OF SAFELY.**

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER**<sup>TOY</sup>  
CO



# FORD GT

Official Licensed Product

# Parent and Rider Manual

## With directions for assembly and operation

Please read this manual before assembly.  
Remember to save your receipt.



**12** VOLT  
ELECTRIC

AGE  
MAX WEIGHT  
132 LBS, (60 KG) **3+**



Wireless Remote Control Included



[www.HyperToys.com](http://www.HyperToys.com)

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**⚠ WARNING:**  
Protective equipment should be worn.

**⚠ WARNING:**  
Do not use this ride on toy in traffic.

MAX WEIGHT: 132 LBS (60 KGS)

MAX RIDERS: 2

MAX SPEED: 5 MPH (8 KPH) FORWARD HIGH  
2.5 MPH (4 KPH) FORWARD LOW  
AND REVERSE ONLY

EASY PUSH-BUTTON OPERATION

12 VOLT BATTERY AND CHARGER INCLUDED  
WORKS ON HARD SURFACES  
CONTAINS LEAD ACID BATTERY

**HYPER** TOY CO

# Table of Contents

<b>Important Information</b>	<b>1</b>
<b>Safety, Warnings and Cautions</b>	<b>2</b>
<b>Riding Safely</b>	<b>3</b>
<b>Battery Charging</b>	<b>4-5</b>
<b>Vehicle Operation</b>	<b>6-7</b>
<b>Parts</b>	<b>8-9</b>
<b>Assembly</b>	<b>10-13</b>
<b>Vehicle Care</b>	<b>14</b>
<b>Troubleshooting Guide</b>	<b>15</b>
<b>Limited Warranty</b>	<b>16</b>
<b>Product Information</b>	<b>17-18</b>

## IMPORTANT INFORMATION

- ADULT ASSEMBLY AND SUPERVISION REQUIRED.
- The battery must be charged for 8-12 hours before first use. To start charging the battery before starting assembly, see Battery Charging and Installation Information on page 4.
- Instruct children on safe operation and driving rules before they take their first ride:
  - Only two riders at a time.
  - Always wear shoes while operating this vehicle.
  - Always wear a helmet.
  - Do not allow other children around this vehicle while riding.
  - Do not place your hands, feet, any part of your body, clothing or other articles near moving parts of this vehicle while vehicle is in operation.
  - Do not sit on the rear end of this vehicles seat, it could cause vehicle to tip over.
  - Both riders must always sit in the correct seat position when operating this vehicle.
- California Proposition 65 Warning: This product contains or emits chemicals known to State of California to cause cancer and birth defects or other reproductive harm.
- Do not overload this vehicle or exceed the maximum weight capacity of 132 LBS, (60kg). If you have questions please call **1-866-204-9737** toll free or email us at [info@hypertoys.com](mailto:info@hypertoys.com)
- Please read this manual completely for operation and safety information before operating this vehicle. Keep this manual for future reference.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER**<sup>TOY</sup>  
CO

# Safety

# Warnings and Cautions

## ⚠️ WARNING: Electrical Hazard

### RISK OF FIRE, DO NOT BYPASS.

- Only use same Hyper Toy 12V lead-acid battery with this ride-on vehicle.
- Only use a Hyper Toy Input AC 100-240V, (50-60Hz), Output DC 12V/1A charger when charging this ride-on vehicles battery.
- Never modify the electrical system. Changes could cause a fire resulting in serious injury or death, and could also ruin the electrical system of this ride-on vehicle.
- Never let the rider tip over or flip over this ride-on vehicle because the battery could fall out of the ride-on vehicle and injure the rider.
- Never lift or carry the battery by the wires or connectors. This can damage the battery and possibly cause a fire resulting in serious injury or death. Always use a battery holder to pick up the battery.
- Only an adult should handle the battery equipped in this ride-on vehicle. The battery is heavy and contains sulfuric acid (electrolyte). Dropping the battery could cause serious injury and damage to the battery.
- Only adults are allowed to operate the battery charging of this ride-on vehicle.
- Never allow children to operate charging the battery equipped on this ride-on vehicle. The electricity involved in charging the battery could cause injury, fire, or even death.
- Always wait to handle the electric motors equipped on the ride-on to cool down after the ride-on vehicle has been used.
- Always check for excessive wear or damage of the battery, charger, and their connections before charging the ride-on vehicle. If damage is found do not charge or operate the ride-on vehicle. Contact customer service immediately.

## ⚠️ WARNING: Riding Hazard

### To reduce the risk of injury, adult supervision is required.

- Never use in roadways, near motor vehicles.
- Never use on or near steep inclines or steps.
- Never near swimming pools or other bodies of water.
- Always wear shoes.
- Maximum 2 riders are allowed to use this ride-on vehicle at one time.
- Maximum weight load for this ride-on is 132 LBS, (60 KGS.)

## ⚠️ WARNING: Battery Charger

FCC ID:2A8PMHYPFGT112R

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER**<sup>TOY</sup>  
CO

## ⚠ WARNING: Adult Supervision Required

- Always Teach Safety First
- While most children can develop the physical skills necessary to operate this vehicle, it is important to remember that they do not yet have mature judgment skills. Children should never be allowed to ride this vehicle without adult supervision. Before any child rides this vehicle an adult must evaluate the child's skill levels and abilities to operate the vehicle safely. Even after instruction hazards are not always anticipated or recognized by children. So before any child operates the vehicle teach them appropriate safety rules.
- Only use the supplied rechargeable battery and charger with this electric ride-on vehicle.
- THERE IS NO SUBSTITUTE FOR DIRECT ADULT SUPERVISION.

## ⚠ WARNING: Safe Riding Rules

To reduce the risk of injury adult supervision is required.

- Always sit only on the correct seat inside the ride-on vehicle at all times.
- Always wear shoes.
- No more than two riders at a time.
- Do not operate on loose dirt, sand or gravel.
- Do not operate near drop-offs, obstructions, swimming pools or other bodies of water.
- Do not operate in roadways, on the street or near motor vehicles.
- Do not operate on or near steep inclines or steps. Use on generally level ground only.
- Do not operate in the dark as unexpected obstacles could cause an accident.
- Do not operate on slopes. The vehicle may accelerate or roll backwards at unsafe speeds even if the pedal is released.
- Do not place anything near moving parts such as motors, gears or wheels. Rotating parts can snag hair, fingers, etc. causing serious injury.
- Do not operate near flammable vapors (such as gasoline, paint thinner, acetone, liquid wax, etc.).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon/zinc), or rechargeable batteries.
- Electrical components can produce an internal spark when first turned on or off. Using the vehicle near flammable liquids or vapors could cause an explosion or fire resulting in serious injury or death.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**


**HYPER** TOY  
CO

# Battery

# Charging Instructions

**ATTENTION!** Only use the provided charger and battery from the original manufacture to charge this ride-on vehicle. For safety purpose all battery charging should only be done by an adult.

## Battery Charging Procedure

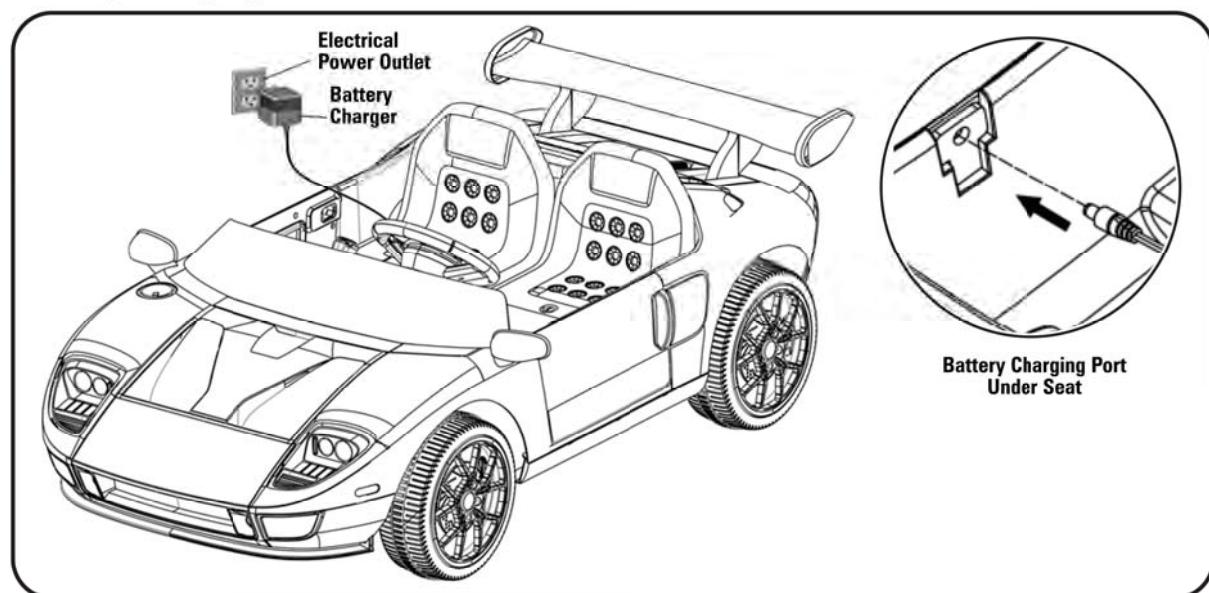

1. The ride-on vehicles power connections must be connected under the seat before operating or charging the battery. To connect the battery power connections remove the riders seat and find the two red plugs coming from two red cables. Align the terminals and press together to fully connect the battery power before operating this ride-on vehicle.
2. Gather the ride-on vehicles originally provided battery charger and find a suitable electrical power outlet in a well ventilated area to plug the battery charger into. Turn the ride-on vehicles power switch to the ON mode first and then align and insert the small round battery charging plug into the battery charging port, labeled under the riders seat.
3. This ride-on vehicles battery should be charged 8-12 hours before first use but never charge the battery longer that 20 hours. NOTE: During the charging process the batter charger and or battery may feel warm to the touch, this is normal during the battery charging process. Recharge the battery every 30 days while not in use or being stored to extend the life of the battery. Leaving the ride-on vehicles battery uncharged for too long will shorten the batteries life.

## Battery Disposal



The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Important! Recycle the dead battery responsibly. The battery contains lead acid (electrolyte) and must be disposed of properly and legally. It is illegal in most areas to incinerate lead acid batteries or dispose of them in landfills. Take it to your local approved lead acid battery recycle center. Do not throw the battery away with your regular household waste!

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

## ⚠️ WARNING FOR LEAD/ACID BATTERY

- Do not mix alkaline and standard (carbon/zinc) or rechargeable (Ni-Cd) batteries.
- Please keep battery and charging kit away from anything flammable during battery charging.
- Batteries must always be inserted or connected with correct negative and positive polarity.
- Only use battery and charger kit specified by the manufacturer.
- Never dismantle battery or battery charger kit.
- Never place battery or battery charger kit in fire.
- Battery chargers used with this toy need to be regularly examined for damage to charger cord, connections or enclosures. If damaged contact customer service.

## Battery Trouble Shooting

- The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly; the self-resetting fuse will be cut off for 20 seconds before becoming operational again.
- If after waiting 20 seconds and the vehicle still not operational first check all battery connections under the seat. Make sure all battery power connections are fully connected in the secure position.
- If this does not correct the problem the battery is most likely out of order. Please contact customer service and speak to one of our staff.
- The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for 1 to 3 years. Replace the battery with a new one.
- If the battery has a buzzing or gurgling sound when charging this is normal and not a cause for concern. It may also be silent when charging, which is also normal.
- Charger feels warm when recharging battery. This is normal and not a cause for concern.


FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

# Operation

## Rider Controls

**ATTENTION!** An adult must be present at all times while children operate this ride-on vehicle. Make sure the child knows how to operate this ride-on vehicle safely and responsibly.

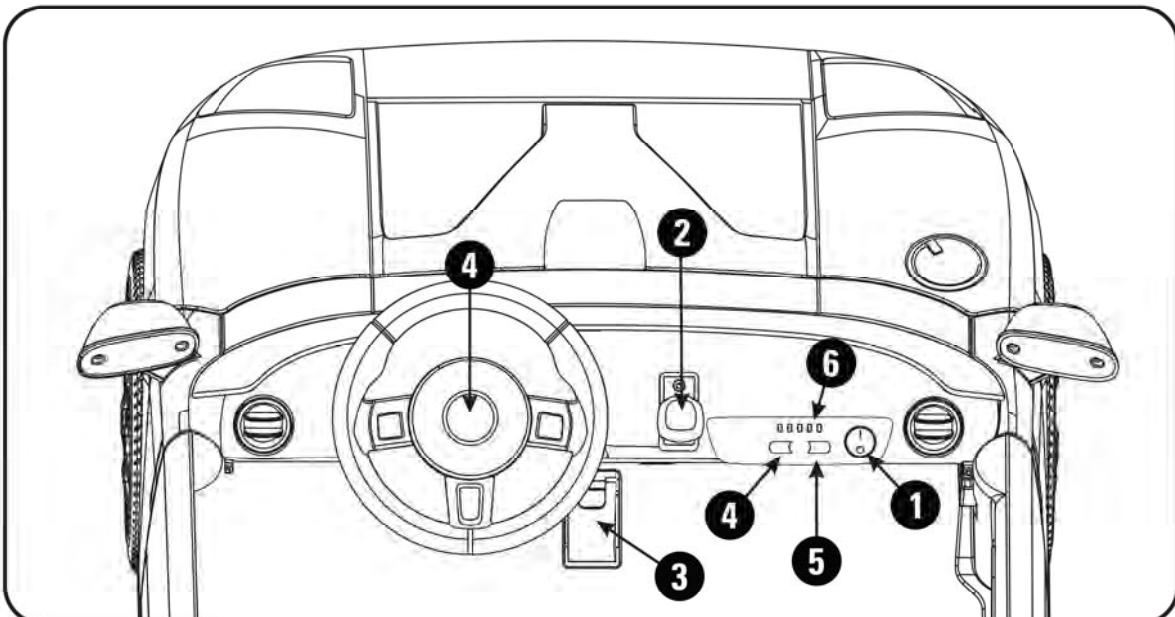

- 1. ON/OFF Switch** - Press down and release this button to turn the ride-on vehicle power ON and press and release to turn the ride-on vehicle power OFF.
- 2. Forward/Stop/Reverse Shifter** - Selects the direction mode the ride-on vehicle will move when the rider presses down the Foot Pedal Accelerator or set the shifter to STOP to park the ride-on vehicle.
- 3. Foot Pedal Accelerator** - The rider presses the foot pedal accelerator to move the ride-on vehicle forward or in reverse. When the rider releases the foot pedal accelerator the ride-on will come to a stop.
- 4. Horn Sound Buttons** - There are two buttons on the steering wheel that when pressed will sound an realistic horn sound.
- 5. Engine Sound Button** - There one button on the dash of the ride-on vehicle that when pressed will sound an realistic engine sound.
- 6. Battery Power Indicator Lights** - The row of battery power indicator lights located on the dash of the ride-on vehicle shows the current status of how much charge the battery for the ride-on vehicle has while in the ON mode. All lights on mean battery is fully charged and one light on means it's time to re-charge the battery soon.


FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY CO

# Operation

# Remote Control

**ATTENTION!** An adult must be present at all times while children operate this ride-on vehicle. **ONLY ADULTS** are allowed to use this Remote Control to operate the ride-on vehicle.

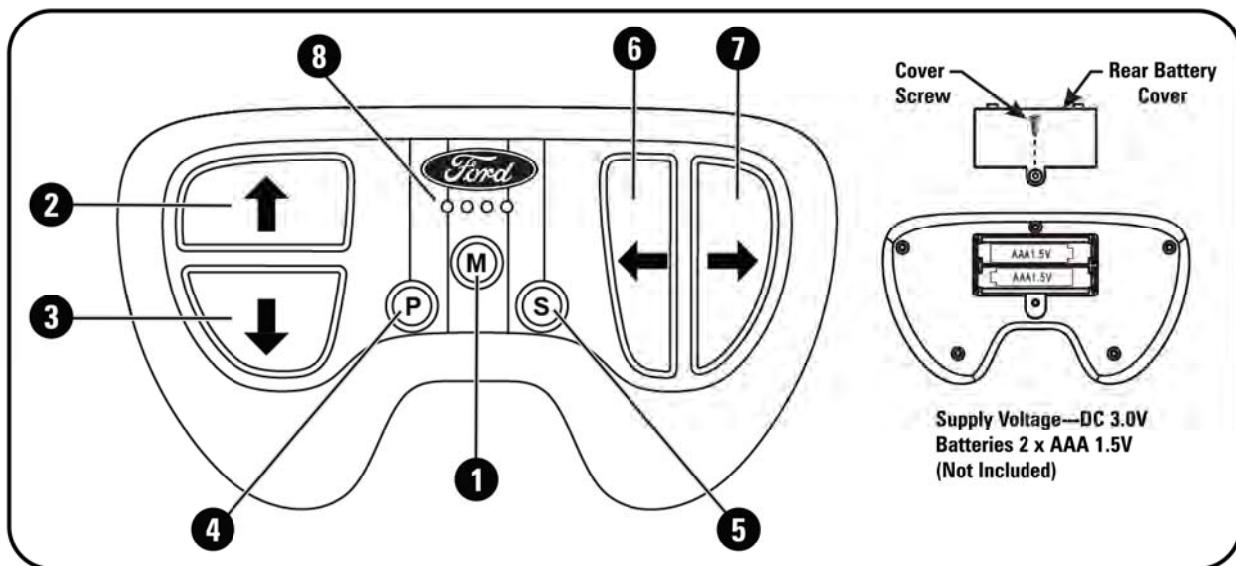

**NOTE:** This remote control overrides all controls from the rider while in use. It is recommended that only adults may operate this remote control while the ride-on vehicle is in use.

## Remote Control Battery Install

Turn the ride-on vehicle to OFF mode. Remove the remote control rear cover screw with a phillips screwdriver. Remove rear battery cover. Install 2 x AAA 1.5V batteries, not included. Attach rear battery cover and install cover screw with phillips screwdriver until secured.

**1. Frequency Key** - Press and hold this button for 2-4 seconds. The indicator light will start to blink. Go to the ride-on vehicle dashboard and turn the power switch to the ON mode. The remote control indicator light will stop blinking when remote control and ride-on vehicle pairing is successful. This process will only need to be completed once.

**2. Forward Button** - Press down this button to control forward acceleration. Release this button to bring the ride-on vehicle to a stop.

**3. Reverse Button** - Press down this button to remotely control reverse direction acceleration. Release this button to bring the ride-on vehicle to a stop.

**4. Park/Brake Button** - Press down this button to stop or park the ride-on vehicle.

**5. Low/Medium/High Speed Button** - Press and release this button to select between the ride-on vehicle's three Low/Medium/High speed levels.

**6. Steer Right Button** - Press down this button to steer the ride-on vehicle to the right.

**7. Steer Left Button** - Press down this button to steer the ride-on vehicle to the left.


FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

# Parts

## Parts Diagram

**ATTENTION!** All items on this page, unless labeled not included, are provided within this ride-on vehicles original packaging. Some parts are installed on both left and right sides of the ride-on vehicle.

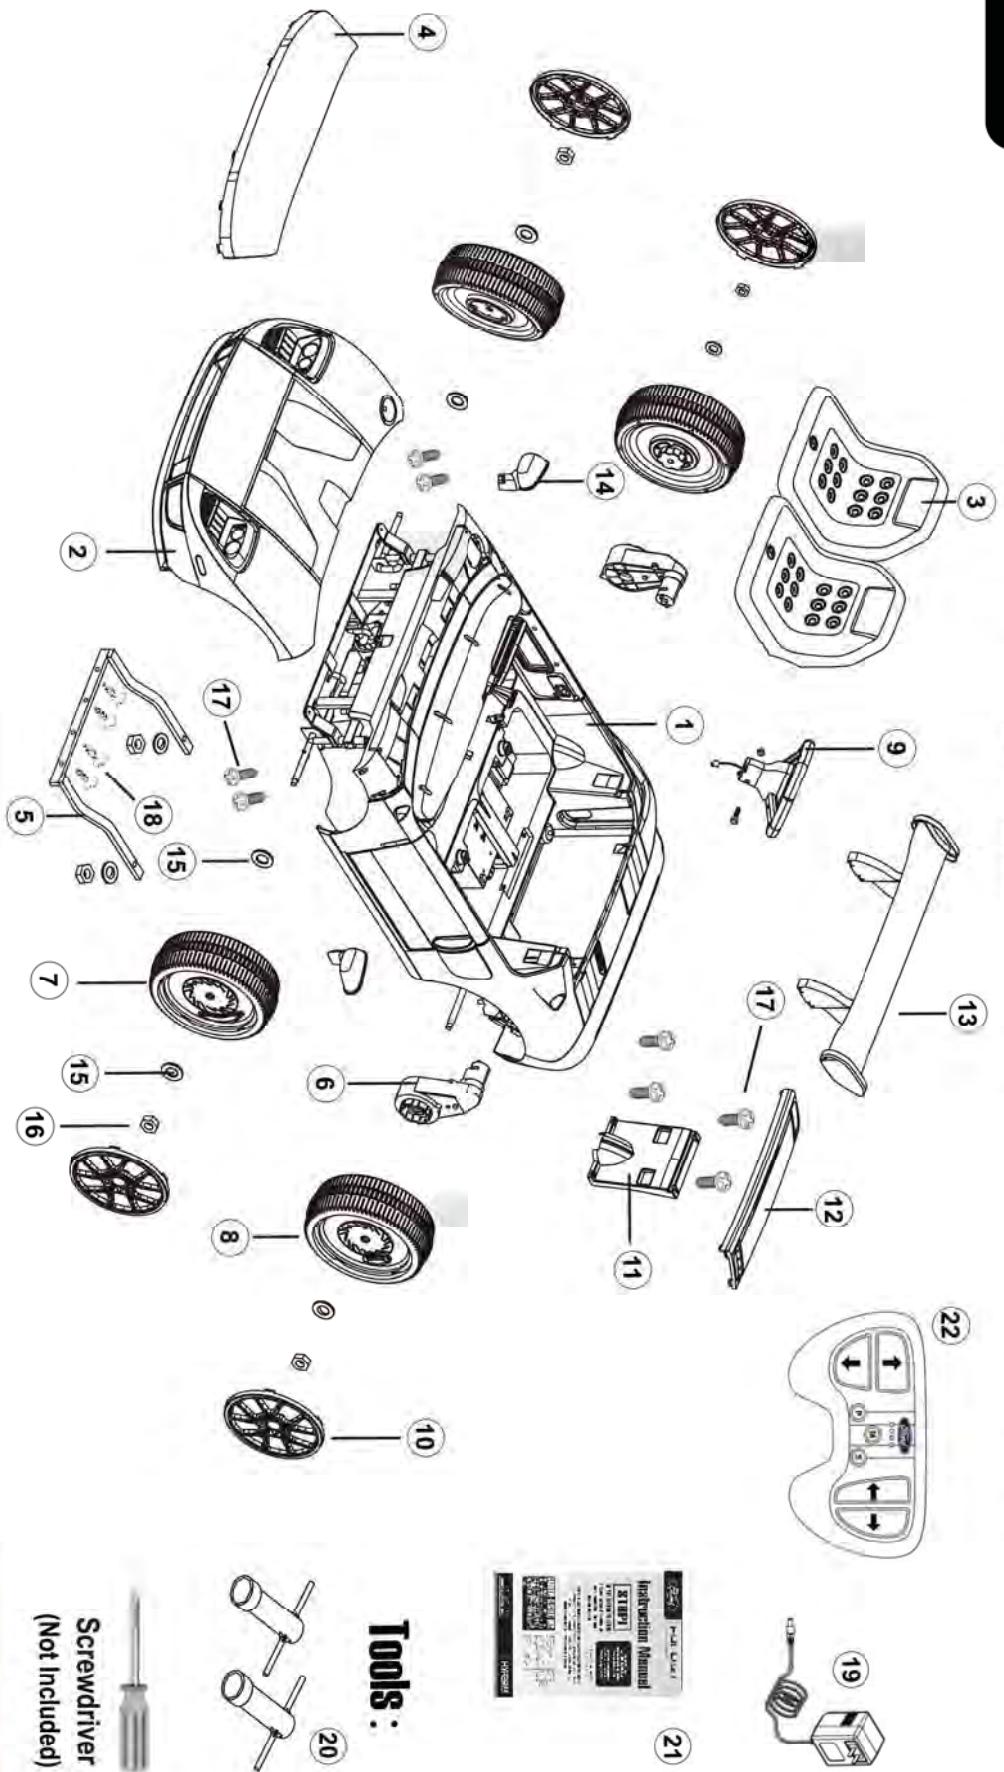

**HYRER**  
TOY

# Parts

# Parts List



NO.	Name	PICTURE	Qty (pcs)	Remark	NO.	Name	PICTURE	Qty (pcs)	Remark
1	Vehicle body		1		2	Front Bumper		1	
3	Seat		2		4	Wind-Shield		1	
5	Front Support		1		6	Electric Motor		2	preset on the axle
7	Front Wheel		2		8	Rear Wheel		2	
9	Steering wheel		1	with bolt & locknut	10	Wheel Cover		4	
11	Seat Back Board A		1		12	Seat Back Board B		1	
13	Rear Wing		1		14	Rear-View Mirror		1	left&right
15	Washer		8	preset on the axle	16	Locknut		6	preset on the axle
17	Screw		4	M4*12mm	18	Large Flat Screw		8	M4*12mm
19	Charger		1		20	Wrench		2	
21	Manual		1		22	Remote Control		1	

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY CO



# Assembly

**ATTENTION!** Assembly of this ride-on vehicle must always be performed by an adult. Keep children under the age of 3 years old away while assembling this ride-on vehicle. The small parts or plastic bags may become a choking hazard for children.

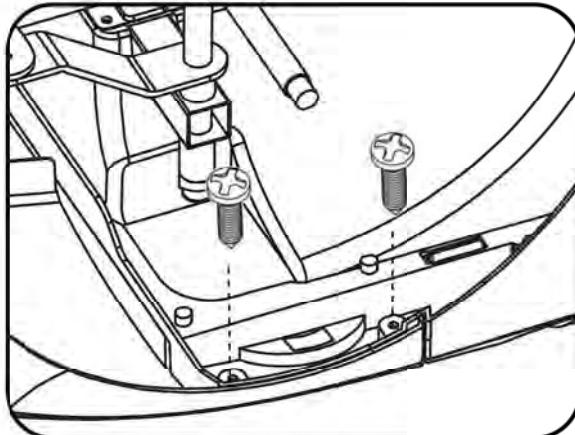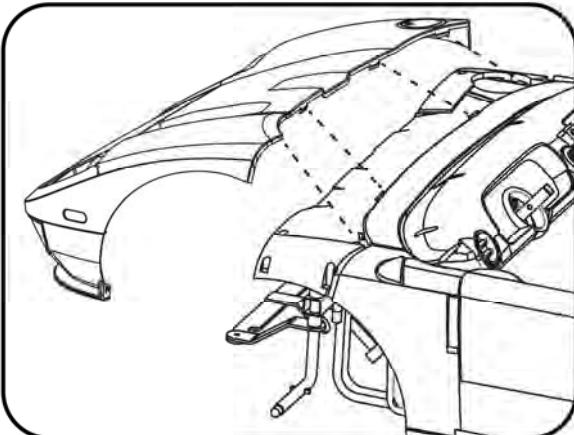

## 1. Install Front Bumper

First carefully insert the front bumper into the corresponding slot of the vehicle body with "snap" sound, then turn over the body, fix the front bar with 2 M4 x 12mm screws on each side.

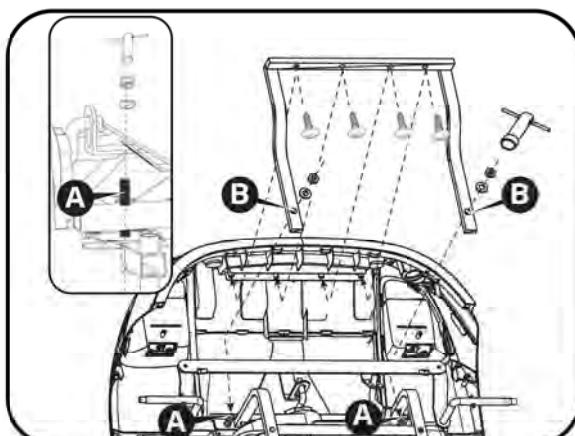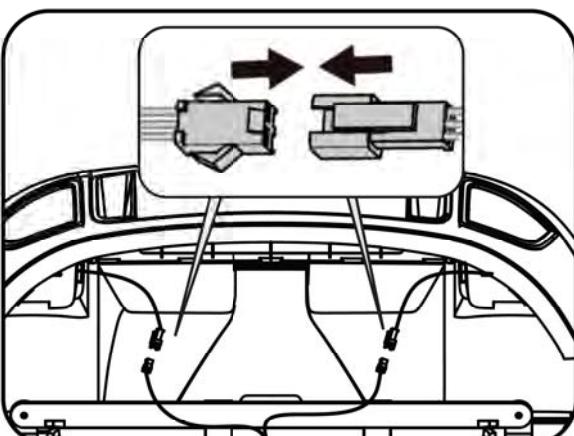

## 2. Connect Headlight Wire Connector

Keep the body turning over and locate the headlight wire connectors for both right and left headlights as shown. Align and press the left side headlight wire connectors together until fully secured. Repeat this process on for the right side headlight wire connectors.


## 3. Install Front Support

Remove the washer and locknut from (A) with wrench. Clip the front support onto the body and the hole (B) on the support should cross by (A). Make sure the screws holes are match with the front bumper screw holes. Fix the sup-port with 4 large flat screws. Place the washers on (A) and install and tighten the both locknuts with the provided wrench as shown until fully secured.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**


**HYPER** TOY CO

# Assembly

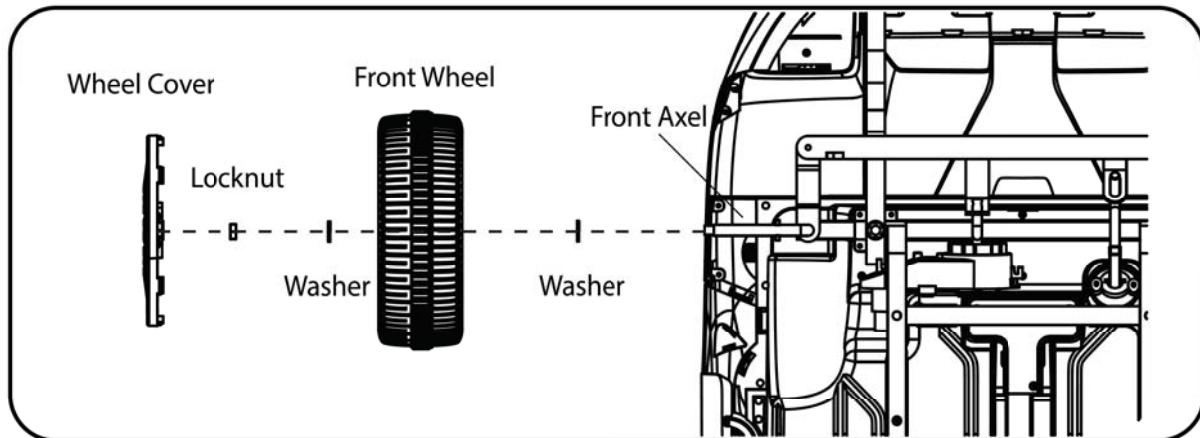

## 4. Install Front Wheels

First remove the locknut with the provided wrench and then the first washer on the front axle. Leave the second washers on the front axle. Align and slide the center of the front wheel onto the front axle with second washer behind wheel. Place first washer onto front axle and lastly install the locknut onto the front axle and tighten until secure with the provided wrench. Align and install the wheel cover by pushing the tabs into the wheel center tab slots. Repeat this process on opposite side.

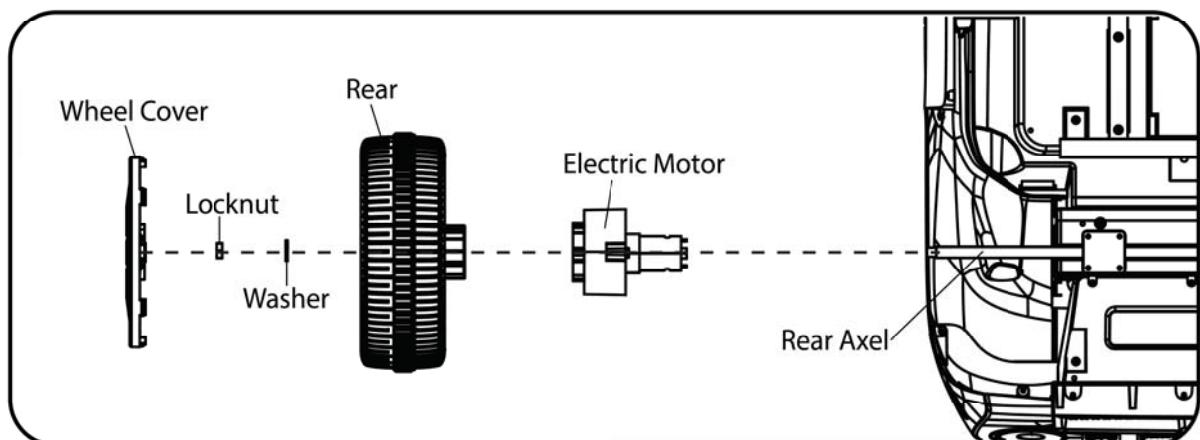


## 5. Install Rear Wheels

Using the 2 wrenches provided remove the locknuts at each end of the rear axle at the same time. Remove the washers each end of the rear axle. Align and slide the right rear wheel onto the rear axle aligning the back of the wheel with the electric motor. Fully press the wheel into the electric motor. Align and slide the left rear wheel onto the rear axle. Place the washers onto the rear axle on both sides of the rear axle. Install and tighten the 2 locknuts onto each side of the axle. At the same time use the 2 wrenches provided, one on each end, to tighten the rear axle locknuts until locknuts are secure. (Please make sure the locknuts not too tight to lock the wheels). Align and install the wheel cover by pushing the wheel cover tabs into the wheel center. Repeat wheel cover installation on opposite side.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO


# Assembly

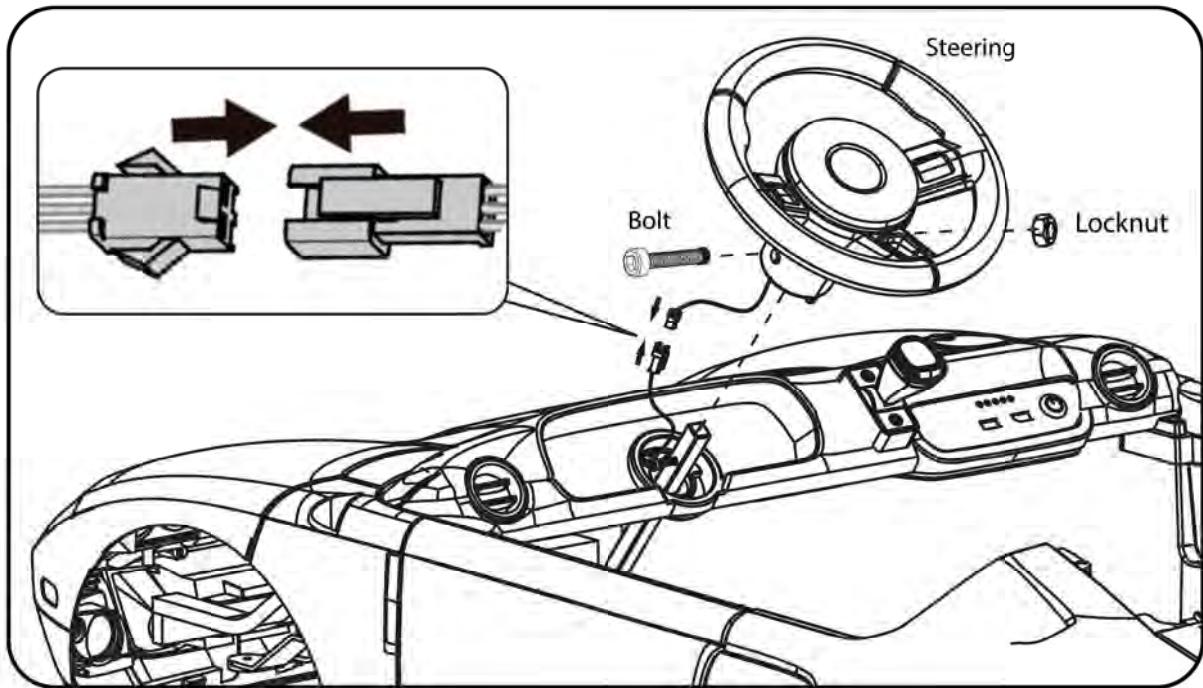

## 6. Install Steering Wheel

Remove the locknut and bolt from the steering wheel. Locate the steering wheel and steering wheel wire connections. Carefully align the wire connectors and press together until a secure connection is made. Install the steering wheel, and fasten with locknut and bolt using a phillips screwdriver.

**CAUTION!** Turning the steering wheel before finishing the steering wheel installation may cause damage to the steering wheel wires.

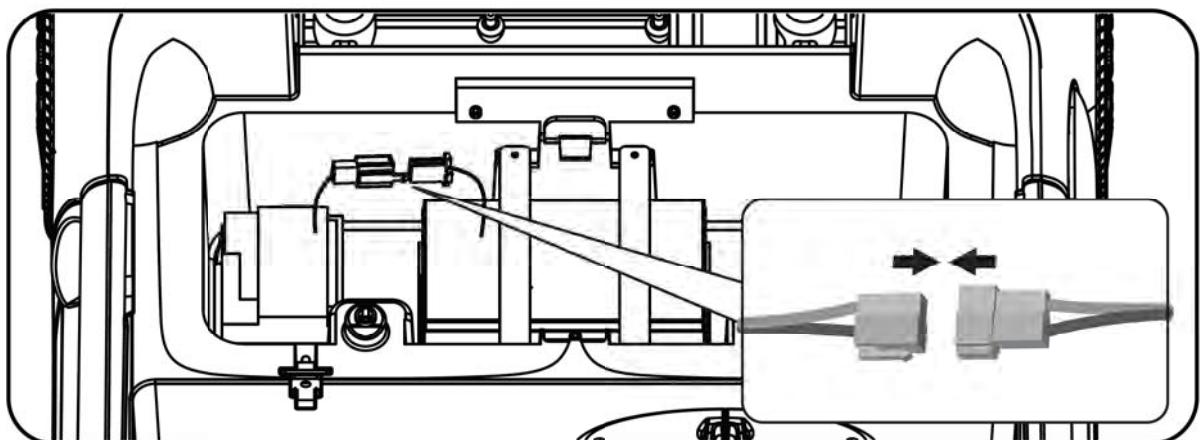


## 7. Connect Battery Cables

Locate, align, and press the battery power cable connectors together until a secure connection is made. Test the battery cable connections by turning the power switch to the ON mode.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY CO


# Assembly

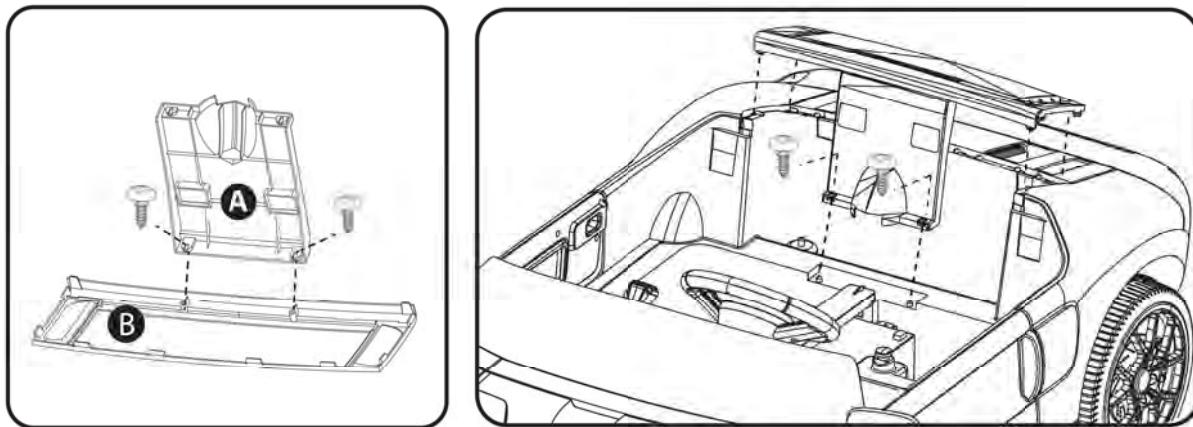

## 8. Install Seats

Align the seat back board (A) with seat back board (B) with both screw holes aligned.

Locate and clip the seat back board into the vehicle body. Install and tighten with a phillips screwdriver 2 large flat screws on the bottom of seat back boards as shown until fully secured.

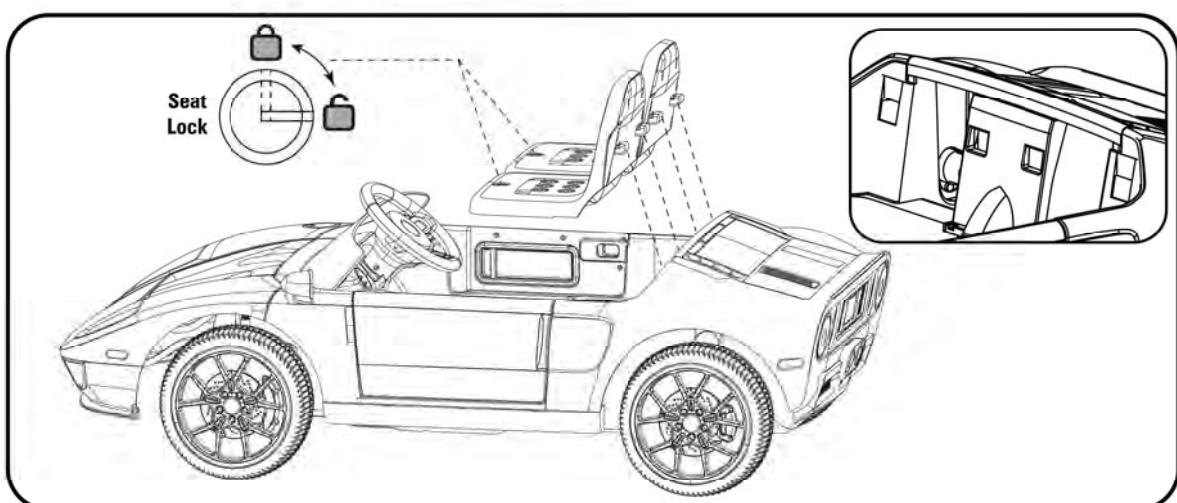

Locate and align the back of the seat clips with the ride-on vehicles seat slots and press seat into body until fully secured. NOTE: The hole for the seat lock should be aligned with the hole for the lock on the ride-on vehicles body. Twist both left and right side seat locks to the locked position after installing the seat onto the ride-on vehicles body.


FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

# Assembly


## 9. Install Windshield

Locate the windshield and align the windshield slot in front of the dash. Carefully press the windshield down, left, right, and center top edges, into the windshield slot so the windshield tabs engage and lock the windshield securely to the ride-on vehicles body.

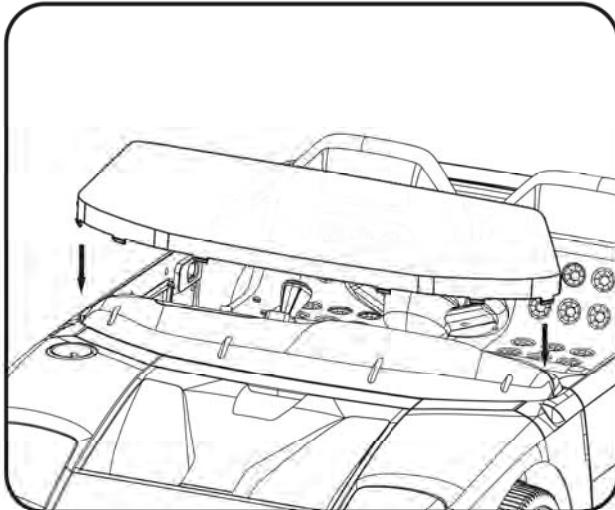


## 10. Install Side Mirrors

Locate the left and right side mirrors. Install the side mirrors one at a time by aligning the side mirror base with the side mirror slot on the ride-on vehicles body. Press the side mirror into the side mirror slot until the side mirror is secured to the ride-on vehicle body. Repeat this process on the opposite side of the ride-on vehicle.

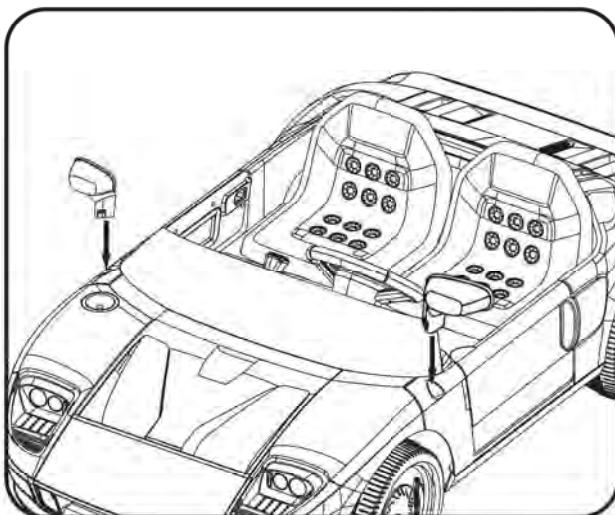

## 11. Install Rear Wing

Align and press down the Rear Wing base supports into the base support slots on the top rear of the ride-on vehicles body as shown. The Rear Wing should be fully secured to the ride-on vehicles body when properly installed.

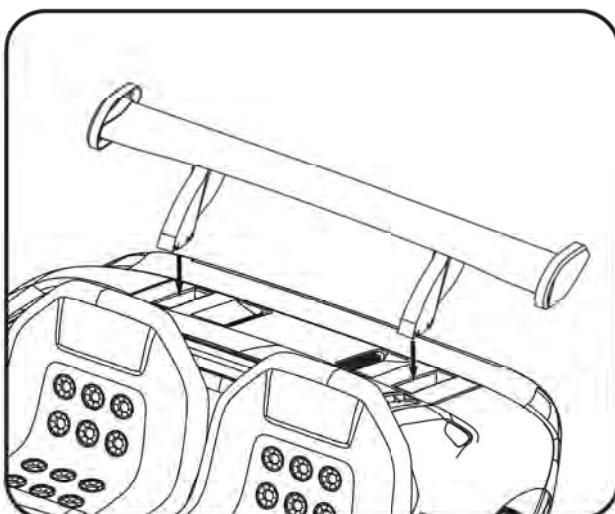

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

# Vehicle Care

## ⚠ ATTENTION!

Adult supervision is always required while this vehicle is being operated, battery re-charged, assembled, or repaired.

- Check all screws, nuts, and protective coverings regularly and tighten securely.
- Check all plastic parts on a regular basis for cracks or broken pieces.
- Never use this battery powered vehicle near water or in wet weather conditions such as rain and snow.
- Never change speed levels while vehicle is still in motion.
- Never operate this ride-on vehicle in mud, sand, loose dirt, or gravel. This can cause the electric switches and motor to fail.
- Never wash this battery powered vehicle with soap and water, this can cause the electric parts of the vehicle to fail. To clean this vehicle only use a non-wax furniture polish applied to a soft micro-fiber soft cloth.
- Always store vehicle inside or under a protective cover.
- Always re-charge this vehicles battery 8 - 12 hours every month while not in regular use to extend the life of the battery.



### CALIFORNIA PROPOSITION 65 WARNING:

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER**<sup>TOY</sup>  
CO

# Troubleshooting Guide

Problem	Problem Cause	Solutions
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor <b>contact customer service</b> .
	Battery is dead	Replace battery, <b>contact customer service</b> .
	Electrical system is damaged	<b>Contact customer service</b> .
	Motor is damaged	<b>Contact customer service</b> .
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, <b>contact customer service</b> .
Vehicle runs sluggishly	Battery low on power	Recharge battery.
	Battery is old	Replace battery, <b>contact customer service</b> .
	Vehicle is overload	Reduce weight on vehicle. Max weight is 132lbs, (60kg).
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions, see <Safety>.
Vehicle needs a push to go forward	Poor contact of wires or connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, <b>contact customer service</b> .
	"Dead Spots" on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. <b>Contact customer service</b> .
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	<b>Contact customer service</b> .
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	<b>Contact customer service</b> .
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact customer service**.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER**<sup>TOY</sup>  
CO

# Limited Warranty

**DON'T RETURN YOUR VEHICLE TO THE STORE**

## **Do not take back to store, call customer service with any problems or questions.**

Hyper Toy Company offers the following limitations, terms and conditions to the original owner of the Hyper Toy Company electric Ride-On Toy. Should this Hyper Toy Company electric Ride-On toy or an part be determined defective by Hyper Toy Company to be covered by this Limited Warranty, it will be repaired or replaced, at Hyper Toy Company sole option, which will be conclusive and binding. Under no circumstances does this limited warranty include the cost of travel or shipment to and from any retailer or consumer. Such cost, if any, shall be borne by the original or subsequent owner.

This Hyper Toy Company electric ride-on toy has not been designed or engineered for ramp riding, jumping, aggressive riding, in severe climates or over severe terrain, riding with heavy loads of over (132 LBS or 60 KG) or any similar activities. Such uses may damage the Hyper Toy Company electric ride-on toy, that can cause serious injury to the rider and in all cases will void this warranty.

### 6 Months from the date of the purchase on vehicle

Hyper Toy Company Electric Ride-On display, throttle and throttle assembly, control wiring harness, wiring and wiring harness, motor and associated transmission and all components not directly associated with the 12V battery are warranted from 6 months from date of purchase to The Original Purchaser against any defects in material, manufacturing, and/or workmanship. If there is any evidence of consumer repair the warranty is voided. Any claim of damage under this clause cannot be due to owner abuse or neglect and must first be reported to Hyper Toy Company Customer Service and a Return Merchandise Authorization (RMA) tag to be issued.

Wheels are considered a wear and tear item and are only under warranty in the event of manufacturer defect.

Items not covered under warranty terms under any conditions.

1. Damage due to failure to maintain the battery as accurately described on various product warning stickers and the products owner's manual.
2. Damage due to maintenance or the actual damage caused by the lack of maintenance.
3. Damage due to improperly assembled products.
4. Damage due to climatic or environmental damage, various cleaners and/or chemicals that may result in damage to the finish.

This warranty does not cover and is intended to exclude, any liability on the part of Hyper Toy Company. Whether under this warranty or implied by law or indirect or consequential damages for breach of warranty.

This warranty gives you specific legal rights. You may also have other rights that vary from state to state and province to province. In those states that do not allow the exclusion of implied warranties or limitation of incidental or consequential damages, the above limitations or exclusions may not apply to you. This warranty applies to the United States and Canada.

**DON'T RETURN YOUR VEHICLE TO THE STORE.** Should you require service or assistance with your vehicle during the warranty period, contact our trained technical staff at Hyper Toy Company 1-866-204-9737 toll free or email us at [info@hypertoys.com](mailto:info@hypertoys.com)

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER**<sup>TOY</sup>  
CO

# Product Information



## Note:

Activation of your warranty gives you **FREE** telephone and online technical service help. Please visit [www.hypertoys.com](http://www.hypertoys.com) to complete product registration and activate your warranty. You will need to provide the product serial number to complete registration. You will be able to find the product serial number on the underside of the vehicle.

**Hyper Toy Company**  
**Customer Service Contact:**  
177 Malaga Park Dr.  
Malaga, NJ 08328  
**Call Toll Free**  
**1-866-204-9737**  
Monday-Friday 8:00AM to 5:00PM (CST)

For product related questions or customer service needs please email [info@hypertoys.com](mailto:info@hypertoys.com)

**VISIT US ONLINE@**  
[www.hypertoys.com](http://www.hypertoys.com)

**CAUTION-ELECTRIC TOY:**  
NOT RECOMMENDED FOR CHILDREN UNDER 3 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK.

**⚠ WARNING:**  
RISK OF FIRE. DO NOT BYPASS.  
TO REDUCE THE RISK OF INJURY, ADULT SUPERVISION IS REQUIRED.  
  
NEVER USE IN ROADWAYS, NEAR MOTOR VEHICLES. NEVER USE ON OR NEAR STEEP INCLINES OR STEPS. NEVER NEAR SWIMMING POOLS OR OTHER BODIES OF WATER. ALWAYS WEAR SHOES.  
  
NEVER ALLOW MORE THAN 2 RIDERS  
MAX WEIGHT OF 132 LBS, (60 KGS).  
**⚠ CAUTION:** SCREWS CONTAIN SHARP POINTS AND EDGES. ADULT ASSEMBLY REQUIRED.

**⚠ WARNING:**  
CHOKING HAZARD - THIS PACKAGE CONTAINS SMALL PARTS. KEEP AWAY FROM CHILDREN UNTIL ASSEMBLED. THIS PRODUCT IS NOT INTENDED FOR CHILDREN UNDER 3 YEARS DUE TO AN INABILITY TO OPERATE SAFELY.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY CO