

# Card-lock User Manual

Model: CD229

## **Cabinet lock operation statement**

### **1. Initialize and change door opening mode**

Press and hold the initial button when you hear a "di" sound and release your hand for single card mode, press again to hear a "di di" sound and release your hand for dual card mode, press again to hear a "di di di" sound and release your hand. It is a one-time open door mode. These three modes switch cyclically, set the corresponding mode as needed.

### **2. Method of Configuring Management Card**

If the initialization is successful, swipe the management card twice, then the management card is set successfully. You can also set up dual management cards, you should swipe the two management cards once in a row.

### **3. Single card configuration method**

- Swipe the management card once and the lock makes a sound
- Swipe the user card once during the sound, the user card is set successfully

If the user card is not set successfully, you need to re-operate

### **4. Dual card configuration method**

- Swipe the management card once and the lock makes a sound
- Swipe the guest card once during the sound, the guest card setting is successful
- Swipe the management card again, the lock makes a sound
- Swipe the waiter card once during the sound (the waiter card can be multiple)

In the dual card mode, the waiter card and the guest card can be used together to unlock, and the card is swiped in no particular order.

### **5. Self-service storage (one-time open door mode) configuration method**

- Assuming that any card A swipes once to close the lock, you must use the card A to open the door when opening the door, and the lock is emptied after unlock
- Assuming that any card B swipes once to close the lock, you must use the card B to open the door when opening the door, and the lock is emptied after unlock

After the cycle of one lock and one open, the lock is cleared and can be used by the next user.

### **6. Delete card**

Swipe the management card six times in a row to clear all cards. Please operate with caution. The management card itself will not be cleared. To clear the management card, initialize the lock.

Be careful:

- When installing this lock, be sure to install the battery and test before use, otherwise the electronic lock will not work out of the scope of maintenance.
- In addition, please take good care of the management card you have set up to protect the user's private storage.
- The lock will automatically open when the battery life reaches the limit. Please replace the battery before automatically opening to ensure safe storage.

## **FCC Caution.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.