

Baby Swing User Manual

Item:#3481



Before installing and using, please follow the instructions carefully to ensure the safety of your child.

⚠️ WARNING

PLEASE READ THESE INSTRUCTIONS CAREFULLY TO

ENSURE THE SAFETY FOR YOUR CHILD

1. Always secure infant in restraint system provided.

2. Never leave infant unattended in the swing

3. For ages 0-6 months

4. Bouncer seat: the maximum weight for this product is 20 lbs.

Cradle swing: the maximum weight for this product is 25 lbs.

Note: the seat must be positioned when using the bounce chair function.

5. DO NOT move or lift the product from the toys or canopy

6. DO NOT move or lift the product when the child is sitting in it.

7. DO NOT hang other items from the canopy except for the toys included in this product.

8. DO NOT place the product at an elevated surface(table, stairs, or any other elevated surface) to reduce fall risk.

9. It's dangerous to use this product on an elevated surface.

10. DO NOT use this product on anything soft such as a sofa or bed to avoid falling and asphyxiation.

11. If the child is able to sit up unassisted, please use this product under adult supervision

12. This product is not classified as a toy.

13. DO NOT open or fold the product with the child inside of it.

14. When using the music player, please make sure to start at a low volume and to raise the volume gradually.

15. DO NOT use if any parts are missing or broken. Never substitute parts.

16. Keep the product away from fire.

17. Discontinue use of product when infant intends to climb out (approximately 6 months).

18. FALL and STRANGULATION HAZARDS: Infants have suffered head injuries falling from swings and have strangled in straps.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **STOP** using product when infant attempts to climb out (approximately 6 months).
- Stay near and watch infant during use. This product is not safe for unsupervised use or unattended sleep.

19. To prevent battery leaks, which can burn skin and eyes:

- Always replace the entire set of batteries at one time.
- Never mix old and new batteries, or batteries of different brands or types.

- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.

20. SUFFOCATION HAZARDS: Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway. **ALWAYS** keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.


一、Part instruction

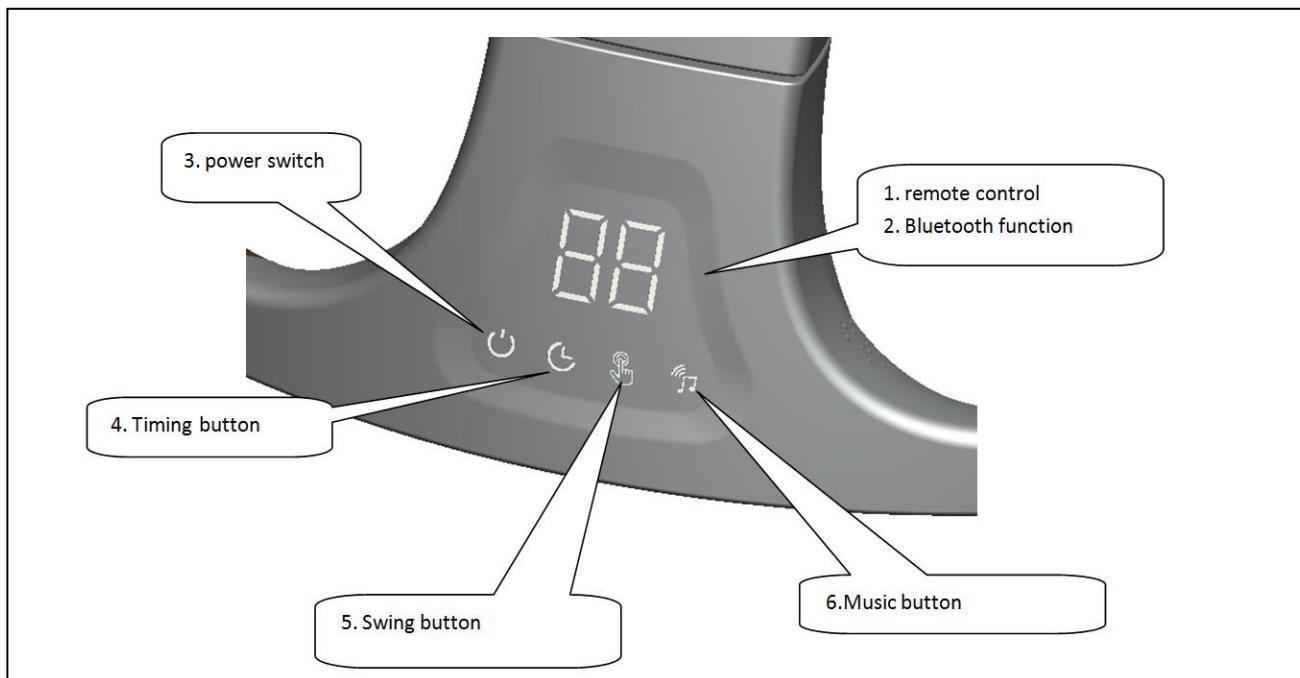

二、Product assembly



一、install left and right foot as above photos show

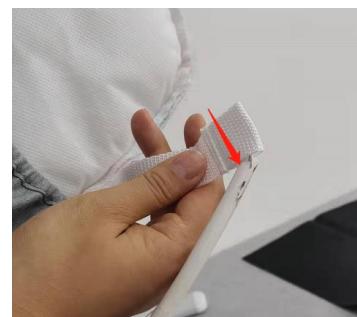

二、Make the webbing on the left and right sides of the seat fabric pass through the iron



三、Install the seat tube



四、Put the seat fabric cover the tube



五、fix the snap button through the button tube



六、fix the rear snap button as the photo show

七、Put the top of the shoulder strap through the button hole




八、Run the webbing through the buckle

九、Stall the canopy through this hole and fix the plastic on the tube



†: Lift up this button , turn on the swing functions. otherwise, the seat is positioned

三、 Functions details

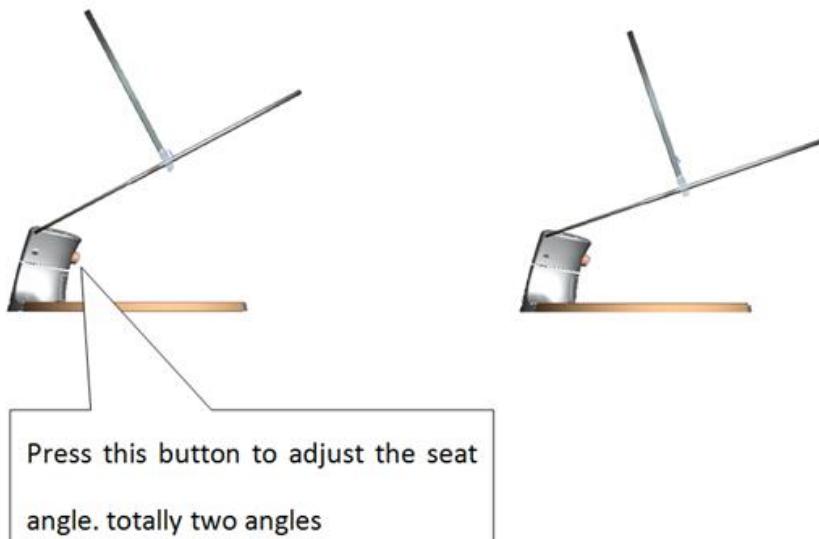

2、Power switch button: touch the  one time and see that the indicator light is on. Press the button a second time to turn off.

3、Touch the  to change the swing settings. There are 5 swing speeds indicated by the lights. the swing will stop automatically if the motor gets stuck.

4、Timer: touch the timer button  the first touch will have the swing chair swing for 8 minutes. the second touch will have it swing for 15 minutes, and the third will have it swing for 30 minutes.


5、This product can support a bluetooth drive to play music.

6、Music:1)Touch  to play the built in music.
2)Touch and hold for 2 seconds to change the volume
3)Touch  and hold for 2 seconds to play the next song.

7、Bluetooth Connecting: Turn on the bluetooth on smart phone and it can automatically connects

8)If the swing shakes terribly, please check the safety lock and place the swing on a flat surface.

Adaptor

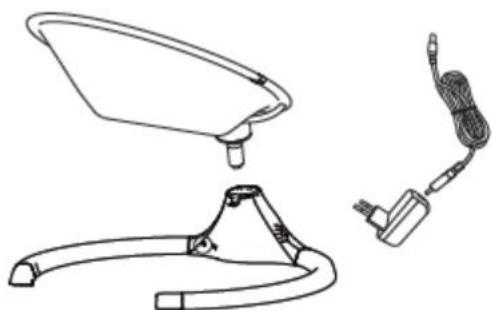

Only use the adapter that comes with this product.

Safety Instruction

Buckle infant in the swing chair.




Adjusting the waist belt or shoulder belt.

Tighten the waist belt.



Loosen the waist belt.

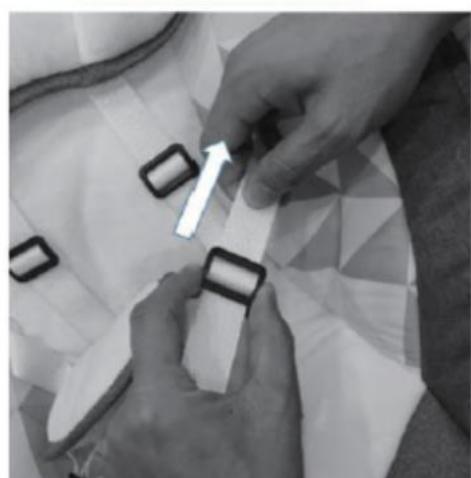

Maintenance and Cleaning

- 1、Before each use to check the components (screws and rivets) is firm, intact, parts or cloth is damaged, should be regularly checked and maintained. For your baby's safety, please stop using it if there is any abnormality.
- 2、Avoid prolonged use or storage in damp, cold or high temperature
- 3、Use the recommended battery model
- 4、Use the adapter provided by the manufacturer
- 5、Cut off the power when not in use
- 6、For washing of the fabrics, carefully comply with the instructions indicated on the label.



WASH AT OR BELOW 30°C



HAND WASH ONLY



 
DO NOT BLEACH



DO NOT DRY CLEAN



DO NOT TUMBLE DRY



DO NOT IRON

1532,S.Washington Avenue
Piscataway,NJ 08854
Phone:732-752-7220
E-mail:info@dreamonme.com
Customer Care:+1(732)366-1788
www.dreamonme.com