

General Instructions for Fan Lamps


Must read before installation:

(! ATTENTION !)

1. To ensure safety in use, please have professionals install, inspect and repair it. If you don't know installation, please have a professional electrician install it.
2. The fan light must be installed or removed after the power is off.
3. When the ceiling fan is installed, screws of each part must be firmly fixed.
4. When the ceiling fan rotates, no object should touch the blade to avoid danger.
5. If there is any problem with the product, please contact the store customer service first, we will provide you with considerate service.

Installation steps:

1. When installing this product, first cut off the power. Then determine the installation plan and the ceiling weight.
2. According to the hole position of the hanging board(cross), drill the installation holes on the ceiling and insert expansion bolts, and fix the hanging board(cross) on the ceiling with tapping screws to make sure the installation is firm. (Figure 1)
3. Connect the neutral and live wires of the power cord to the neutral(N) and live(L) wires of the drive power supply in the chassis. Then wrap them with electrical tape for insulation.(Figure 2)
4. Align the notches of the chassis with the hanging board screws and screw them in place.
5. Tighten the screws of to the hanging board(cross) . Make sure the installation is firm. (Figure 3)
6. After the installation is complete, make sure the installation is correct before connecting to the power supply for normal use.
7. When power on, use the remote control (2x AAA batteries need to be additionally purchased) to check whether the light or fan of the device could work normally.

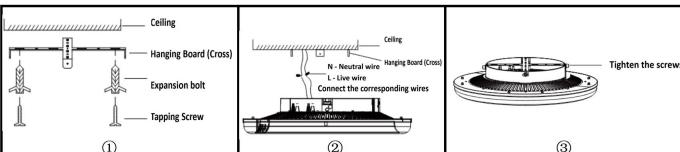

(Note: The product shape in this manual is for reference only, the actual product shall prevail)

Tips:

1. The ceiling fan does not rotate:
 - (1) Check whether the power line poor contact.
 - (2) Check whether the fan power supply voltage is normal.
2. Fan noise:
 - (1) Check whether all screws are fully tightened on cross hanging plate.
 - (2) Check whether there is friction between other motors when they run.

Method of controlling lamps:

1.Wall Switch:Neutral light →Cool white light →Warm light.

2.Remote Control (Without Battery in the Package):


(1)Remote control distance: 8-20 meters.

(2)Remote control battery: AAA

Batteries X 2.

(3)Pairing the remote control with the fan light:

- ① Turn on the power, press and hold **the pair code button** for a long time within **5 seconds of the light on**.
- ② When you hear a **beep** or a light **flashes**, the code match is successful.
- ③ If you need to match the code a second time, you need to wait 30 seconds before turning on the power and repeat the above operation.

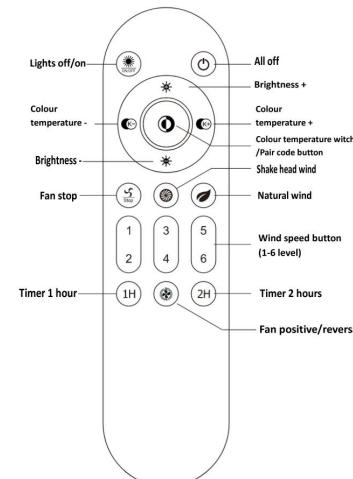

3.Phone App

1. Download the APP  scan the QR code → open the browser → select the version to download
2. Open the APP → select a room → Click on  → select "fan light" → enter the equipment name (such as fan light) → OK

3. Click on  enter

1. Language (Chinese and English can be selected)
2. Scan (scan the other party's QR code to share device control)
3. My QR code (you can share it with the other party)
4. Room management (room name can be added)
5. Instructions (Choose the second interface fan light, instructions for using various symbols of the device)
6. Check for updates
7. Feedbackpoint to enter

1.  Code matching button (click this button within 5 seconds of turning on the light, such as the light source flashing or the buzzer "di", it proves that the pairing code is successful;if the pairing code fails, repeat this operation).
2.  After clicking, you can choose a time to turn off the device regularly.
3.  After clicking, the wind blown by the fan is like the wind in nature.
4.  The wind blown by the fan after clicking is suitable for sleep.
5.  After clicking, the fan will rotate in the reverse direction.
6.  Click to change the direction of the wind.
7.  After clicking, the fan will rotate forward.
8.  After clicking, the white light and yellow light will light up at the same time, but the brightness is only 10% of the maximum brightness.
9.  After clicking, the white light and yellow light will light up at the same time, and the brightness is the maximum brightness.
10.  After clicking, only the yellow light will light up, and the brightness is the maximum brightness.
11.  After clicking, only the white light will light up, and the brightness is the maximum brightness.

COMPANY NAME:XINYIDA LIGHTING ELECTRICAL APPLIANCE CO, LTD

ADD: NO6 EAST HUASHENG ROAD, CAO THREE INNOVATION PARK,

GUZHEN,ZHOUSHAN CITY, GUANGDONG PROVINCE, CHINA

TEL:+86 18262005931

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.