





STOP!

For proper use of your musical figurines, please follow these instructions. Save them for future reference.

First, locate your remote control. Using a small Phillips head screwdriver, remove the battery case cover on the back. The remote is powered by a CR 2032 button cell battery (included). Install the battery and secure the battery compartment cover. See Fig. A.

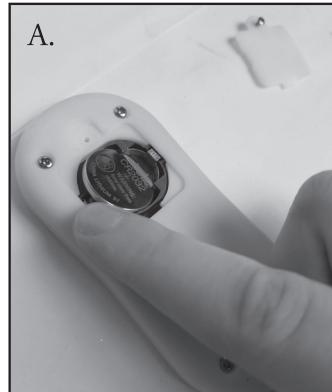

Next, install the batteries in your figurines. Locate the battery compartment under the base of the figurines (Fig. B). Unscrew the battery compartment cover, and install 3 "AA" batteries (not included) as shown (Fig. C). Replace the battery cover. Finally, make sure the power switch is set to "ON" (Fig. D). Follow these steps for each new figurine that you receive in the collection

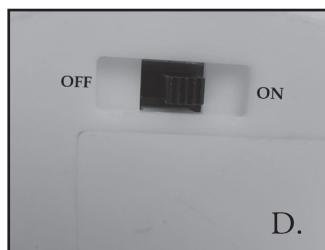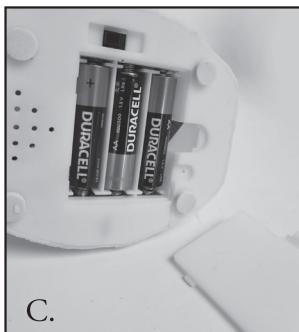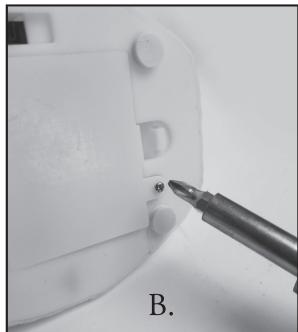

WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

At the end of product life, please dispose of electrical and battery-operated products at your local recycling center.



Continued on back...

Now, it's time to sync the remote to your figurines.



With the batteries installed in the remote and in your figurines, press the "SYNC" button ONCE on the remote (see Fig. E). The lights on the figurines will begin to flash. After 3-5 seconds, the lights will stop flashing. This means your figurines are synced to the remote and you are ready to enjoy the music and lighting features. This remote will sync your first 3 figurines in the collection. Simply repeat this step for each new figurine that you receive.

The remote controls all of the multiple functions of your figurines, which includes the color of the lighting, the style of lighting, and the music. See Fig. F.

Press the Lighting Color button ONCE and your figurines will cycle through 8 different colors: Magenta, Yellow, Red, Gold, Green, Aqua, Blue, and White. If you prefer only one color, keep pressing the button and the lighting colors will scroll through the available options. Stop pressing the button when you reach your desired color.

Press the Lighting Style button and you can choose from two lighting options, either "randomly fading" or "candlelight flicker." The lighting will stay on for 4 hours before automatically turning off. You will need to press the Lighting Style button again when you are ready to reactivate the lights. To exit this recurring feature, press the You are also able to change the light color with the Lighting Color button while the lighting style is active.

To hear the music, simply press the Music button. Each figurine will play its own individual song. As you receive additional figurines and SYNC them as directed above, when you press the Music button, the figurines will play all of the songs together. As the first song finishes, press the PLAY button again and both figurines will play the second song; press Play again and all 3 figurines will play the third song together.

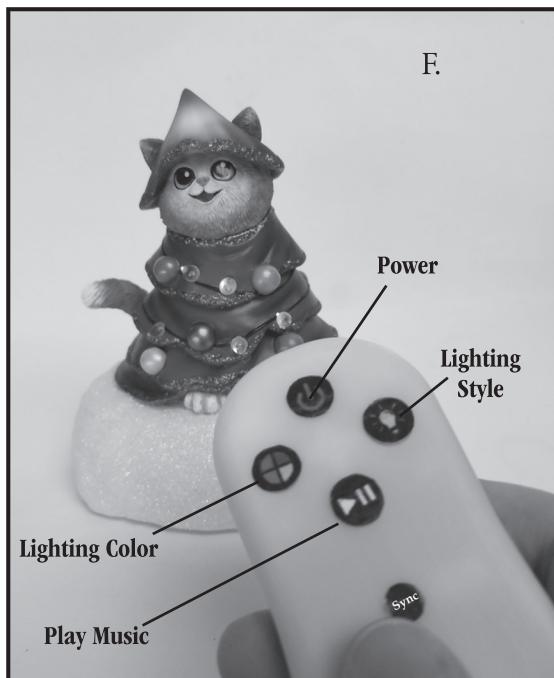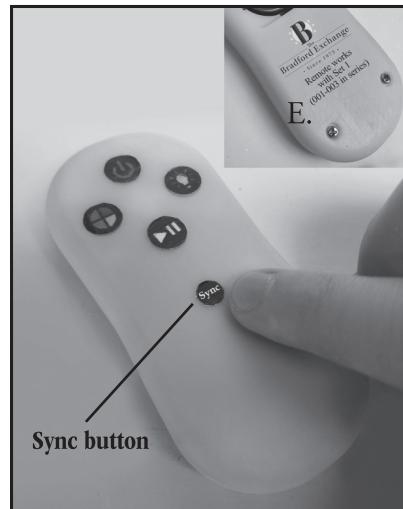

TROUBLE SHOOTING:

*In the event that one or more of the products stops working in sync with the other products, re-sync by pressing the SYNC button. Alternately, you can simply turn the switches on and off again on each figurine. Repeat as needed.

*After 30 seconds the songs will stop playing. The lights will remain illuminated until the music button is pressed again, or the product is turned off.

*Slide the switch on the bottom of the figurines to OFF between uses in order to conserve battery life. The product will need to be synced the next time they are turned on.

FCC ID: 2A8UV-H33886S1

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received,
including interference that may cause undesired
operation.

FCC ID: 2A8UV-H33886R1

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received,
including interference that may cause undesired
operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.