

Battery Insertion

1. **Remove the Socket:** Twist the cap at the bottom of the handle to remove the socket.
2. **Insert the Batteries:** Insert three AAA-sized batteries into the socket. (Make sure to check the + and – terminals when inserting the batteries.)
3. **Reinsert the Socket:** Insert the battery socket in the direction indicated by the arrow and twist the cap to close it. (If the socket is inserted incorrectly, the product will not operate, which may cause damage.)

User Manual

1. **Button Usage:** The power button allows you to change the LED mode.
 - Normal Mode: 1 press POWER ON > 2 presses Dimming > 3 presses Flash > 4 presses OFF
 - APP Connection Mode: 2 consecutive presses (flashing blue)
 - Central Control Mode: Automatically switches modes during concerts (disconnect from smartphone before the performance).
2. **APP Usage:**
 - **Download:** Scan the QR code or visit a specific URL to download the APP.
 - **Connecting and Updating:**
 1. Turn on Bluetooth on your phone. (Android users need to approve location permission if prompted.)

2. While the cheering stick is powered on, press the power button twice to enter Bluetooth pairing mode (flashing blue light).
3. Open the APP and press the "Connect" button to connect automatically. (Note: The APP will automatically check the software version. If the software is not up to date, follow the prompts to update.)
 - **Mood Light Mode:** You can change the mood light colors freely through the APP.

3. **Central Control Mode:** The cheering stick will operate in sync with the central control at the concert venue without additional connections, as long as it is powered on.

User Precautions

1. **Storage:** Avoid direct sunlight and high-temperature, high-humidity areas; store at room temperature.
2. **Impact Caution:** Avoid dropping or applying strong impacts to prevent damage to the LED.
3. **Safe Storage:** Keep out of reach of infants and young children to prevent swallowing or placing parts in their mouths.
4. **Use Genuine Batteries:** Always use genuine batteries and remove them for storage if the device will not be used for a long time.
5. **Liability Limitations:** We are not responsible for damage or malfunction due to user negligence, unauthorized modifications, or accidents.
6. **Radio Interference:** As a wireless device, it may experience radio interference during operation.

FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation