 



 Settings

Move to [Settings] icon, press [ok] button to enter into system settings. You will see the menu on the right

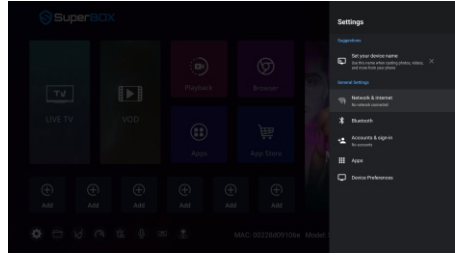


Wi-Fi

 With Wi-Fi enabled, you'll need to select your network's name and enter the password. An on screen keyboard should appear if you're using the standard infrared remote control.

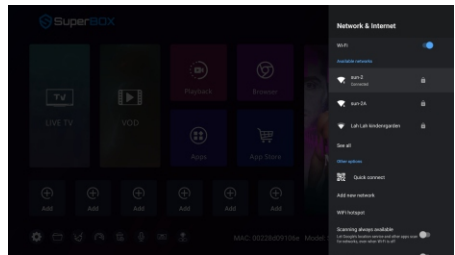

Ethernet

 If you will use a network cable instead of Wi-Fi, please select this option [DHCP] instead.

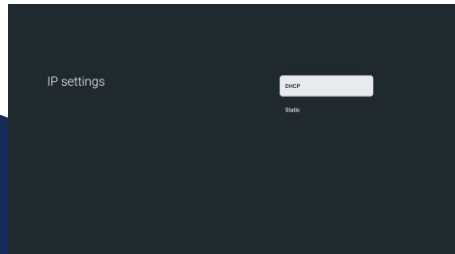

? Troubleshooting

Warning

Under any circumstances, Never try to repair the device by yourself, it will void the warranty. if any issue occur, read the following instructions on how to troubleshoot the device.

If you are unable to resolve the issue, please consult your dealer for help.

Problem	Solution
No signal on the TV	1) Check if the HDMI or AV cable is securely connected. 2) Check if you have selected the correct input source on your TV.
Can not turn on your Smart TV Box	1) Check if the power connector is completely plugged into the DC socket of your Smart TV Box. 2) Check if the power supply is stable.
Can not connect to network	1) Make sure that the network cable is securely connected and the Ethernet works well. 2) Make sure that WiFi network is connected and the security key for the encrypted network is correct. 3) Make sure that you select the correct IP address settings.
Remote Control does not respond	1) Make sure that the batteries are good. 2) Make sure that the distance between the remote control and your Smart TV Box is no longer than 8 meters.
Some TV can not display entire screen	Setup the screen display position of your Smart TV Box. Settings->display->Display position



User Guide



SEMAX

Preface

Thank you for choosing our Smart Media Player.
For your convenience and ease of use, we created this manual.
Please read it as a reference on how to properly use TV box.

Specification


- ★ Android 12
- ★ Processor Quad-core ARM Cortex TM -A53
- ★ GPU Quad-core Mali-T720 MP2 @ 600Mhz
- ★ Memory 4GB DDR3
- ★ Internal Storage 64 GB EMMC
- ★ Support Video Decoder: H.265 10bit up to HP level 5.1: 6K4K2K@30fps (Up to 250 Mbps)
- ★ Support audio formats: MP3, WMA, AAC, FLAC etc.
- ★ Support photo formats: JPG, JPEG, BMP, GIF, PNG.
- ★ USB2.0X1, USB3.0X1 Host connectors and SD/MMC card reader.
- ★ Network RJ45 1000M Ethernet; Support 802.11 b/g/n/ac/ax 2.4G/5G WiFi6E
- ★ Composite Audio/Video output, support all television.
- ★ Support all standard SD/HD/UHD video output formats: 480i/p, 576i/p, 720p, 1080i/p, 60fps
- ★ HDMI Support 6K@60fps Support HD Audio(7.1CH)

Package Contents

NO.	Picture	Name	Piece
1		Smart Media Player	1
2		IR remote control	1
3		Power Adaptor	1
4		HDMI Cable	1
5		User Guide	1

Note: Other contents are optional.

 Connection Diagram

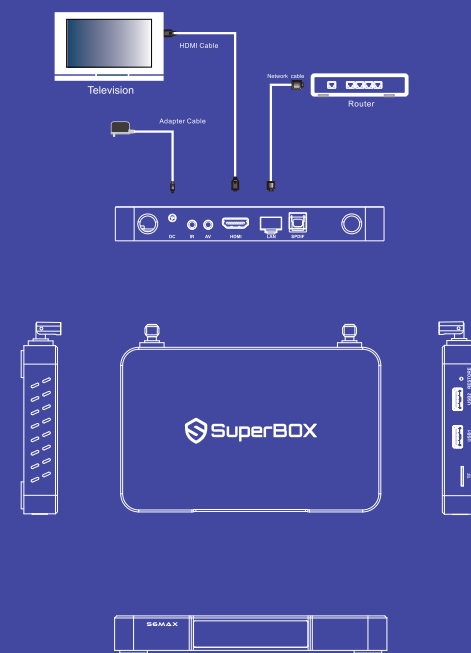

HDMI connection

- Connect HDMI cable into the product interface, the other side into a TV set.
- Set the TV Output Display Settings to 720p or 1080p and then transferred to the corresponding TV HDMI Component Video status.

A/V connection

If your TV have no HDMI connector, Don't worry! you can connect your TV via AV cable. Connect AV cable into the product interface, the other side into a TV set.

成品110x154mm, 正反印刷, 对折再对折。折页, 切成品。