


Cool-Stunt Twist Truck


1:18 Stunt Twist Truck

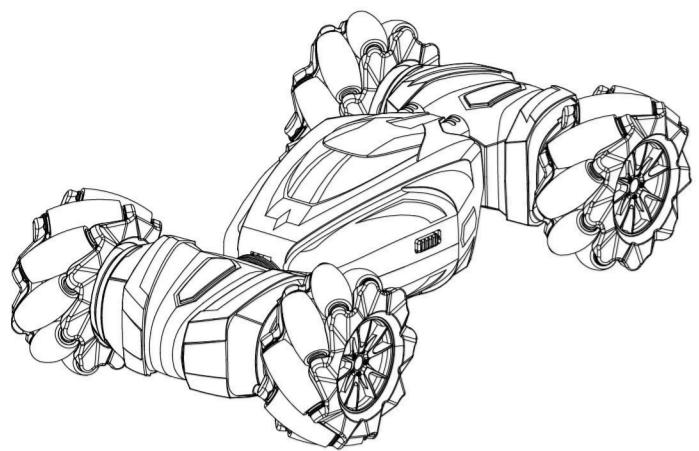

User Manual

About the Stunt Twist Truck


With two modes of racing and climbing modes, the twist truck adopts 2.4G remote control technology to realize forward, backward, left/right sideway, left/right rotation, twist and transformation, light & music, intelligent programming, auto demo, etc. via remote controller or watch controller.

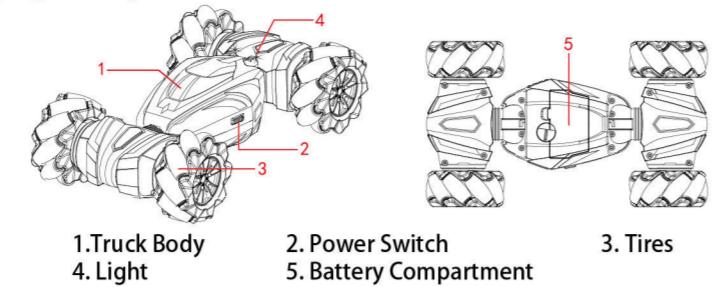


Operation Tips

Operation Environment


- Do not use it on public roads or streets to avoid potential threat to the traffic.
- Do not use it in crowded places or around people or animals to avoid potential personal injuries or property losses.
- Do not touch or stop the wheels in rotation.
- Do not use it in the rain or have it run over puddles to avoid failures.
- Do not operate in the rain or make the remote control truck run over puddles to avoid failure.
- Do not touch the motor during or right after the operation as it might produce heat.
- Take the battery from the remote control vehicles and launcher if not in use.

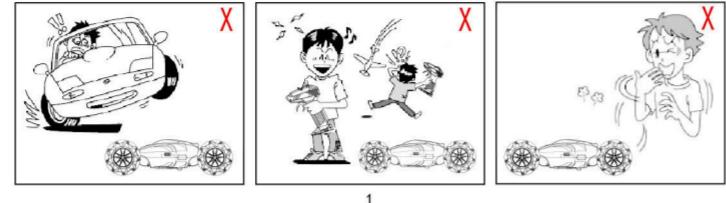

List of Original Accessories

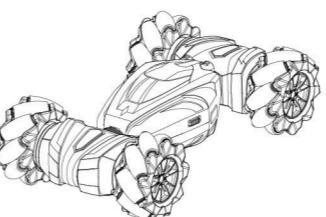


Stunt Twist Truck x1

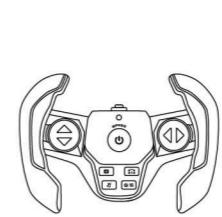


Remote Controller x1



 
Watch Controller x1
Included Button Battery x1
(the battery for the remote control version requires additional purchase)




Lithium Battery x1

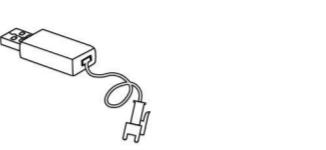

USB Charging Cable x1

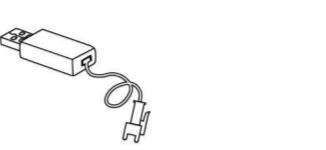

Screwdriver x1

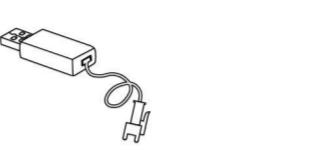


User Manual x1

Note:

Please carefully check the accessories and their quantity (e.g. accessories list). If you find them incomplete, please provide proof of purchase and contact the seller for replacement.

About the Remote Controller

 ① Watch Controller (the battery for the remote control version requires additional purchase)




1. Indicator: The red indicator is for the power and will turn up when power on; the green indicator is for the process of pairing and will turn up at startup and flash when pairing; the blue indicator is for low voltage and will flash when the battery is low.

2. Power Switch: Short press to power on, long press for 3 seconds to power off.


3. Function Button (Switch between rotation and lateral movement modes): Short press to switch between, long press for auto demo (rotation mode has been activated by default at startup).

Note: The watch will power off automatically in 3 minutes in standby mode (i.e. no operations).

② Remote Controller

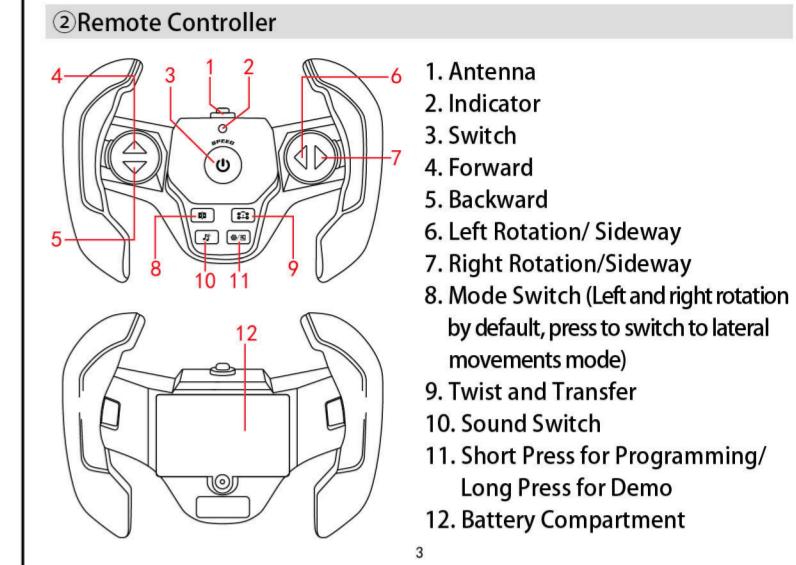


Button Batteries for Watch Controller

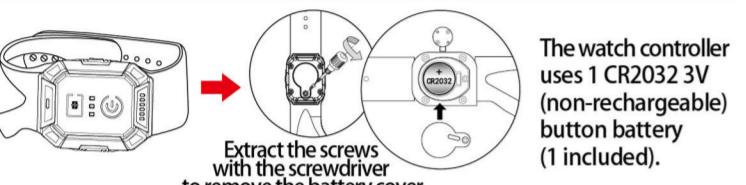

The watch controller uses 1 CR2032 3V (non-rechargeable) button battery (1 included).

Battery Installation for the Remote Controller

① Open the battery cover of the remote controller
Use a Phillips screwdriver to open the battery cover of the remote controller.

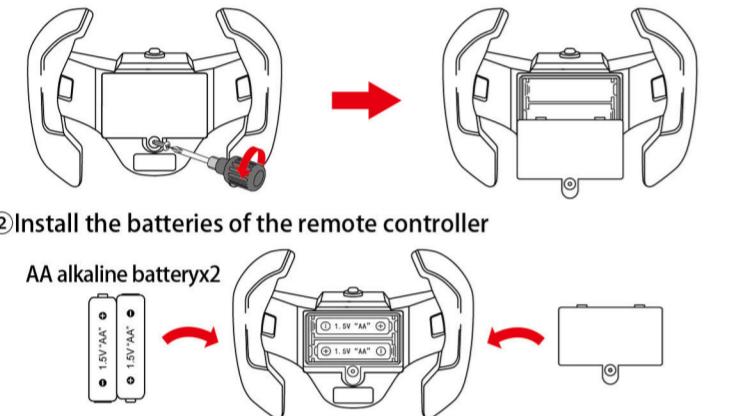

Open the battery cover and insert 2 AA alkaline batteries with the two poles aligned correctly. (batteries require additional purchase)


- Ensure the two poles have been aligned correctly when loading the batteries.
- Please do not mix old and new batteries.
- Please do not mix different types of batteries.

4


Pair the Remote Controller with the RC Truck

① Pair the Watch Controller with the RC Truck
(The remote control version requires additional purchase)

Press the power switch on the controller, and then power on the RC truck when the controller's indicators flash slowly. The controller's indicators turn from slow flash to solid, indicating the pairing has been successful.

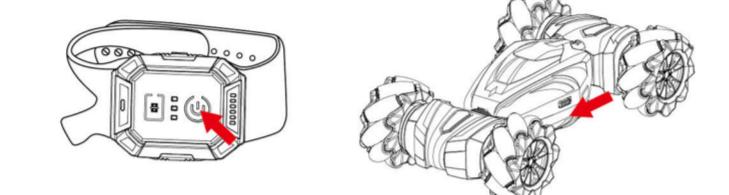


② Pair the Remote Controller with the RC Truck

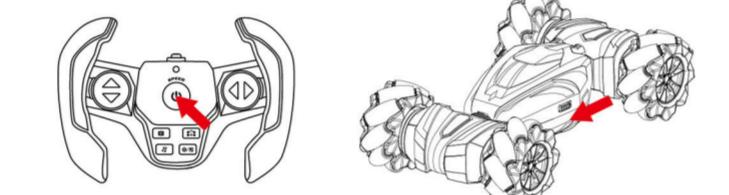

Power on the remote controller first and when the indicator flashes slowly, power on the remote control truck. When you hear the sound of "click" and that indicates standby mode, the red indicator of the remote controller will turn off, indicating the pairing has been successful.

5

Charge from RC Truck Battery

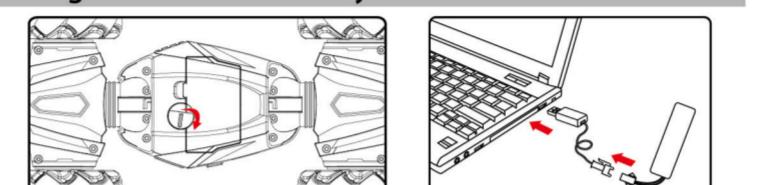


- Unscrew the buckle as shown in figure, and then open the battery cover to take the batteries out of the RC truck's battery compartment.
- Connect the USB charger connector with the battery connector and ensure the two poles aligned correctly. Plug the USB cable of the USB charger into the computer interface, and you'll see the LED light turns on when being charged and off when charging completes. It takes 90-120 minutes to charge up to full and gives 20-25 minutes of playing time.
- After charging, insert the batteries into the battery compartment and connect them with the connector on the circuit board with the two poles aligned correctly.

Note:

- This product is suitable for children above 8 years old. Minors must have the supervision of an adult when using this product.
- Please be careful when using all electronic products to protect yourself from electric shock.
- Please do not disassemble or modify this product without authorization, as any modification may result in malfunction.


Operating Steps

- Power on the remote control truck, keep it stable, and slowly toggle the throttle joystick on the remote controller (see figure ①) to see if the remote control truck moves forward or backward.
- Place the remote control truck on the ground and slowly toggle the rudder joystick on the remote controller (see figure ②) to see if the wheels are rotating.

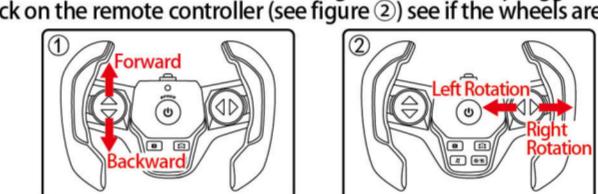


Operating Steps

- Power on the remote control truck, keep it stable, and slowly toggle the throttle joystick on the remote controller (see figure ①) to see if the remote control truck moves forward or backward.
- Place the remote control truck on the ground and slowly toggle the rudder joystick on the remote controller (see figure ②) to see if the wheels are rotating.

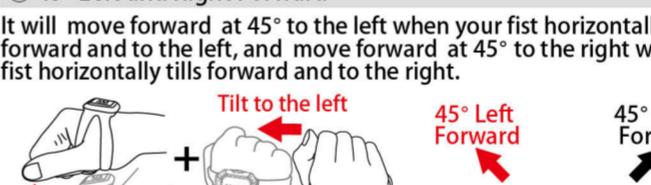


③ Left and Right Sideway (Short Press the Function Button to Switch to Lateral Movement Mode)

It will move laterally to left when your fist horizontally tilts to the left and move laterally to right when your fist horizontally tilts to the right.

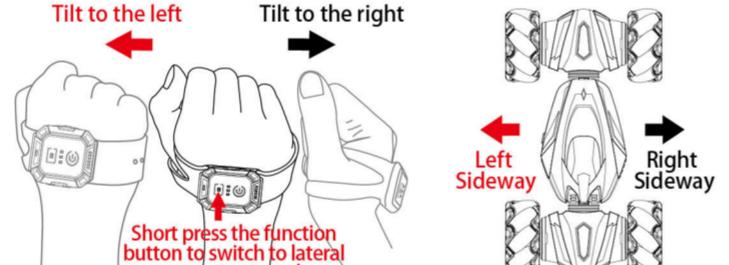


④ Turn Left and Right (Default at Startup)

It will turn left when your fist horizontally tilts forward and to the left, and turn right when your fist horizontally tilts backward to the right.

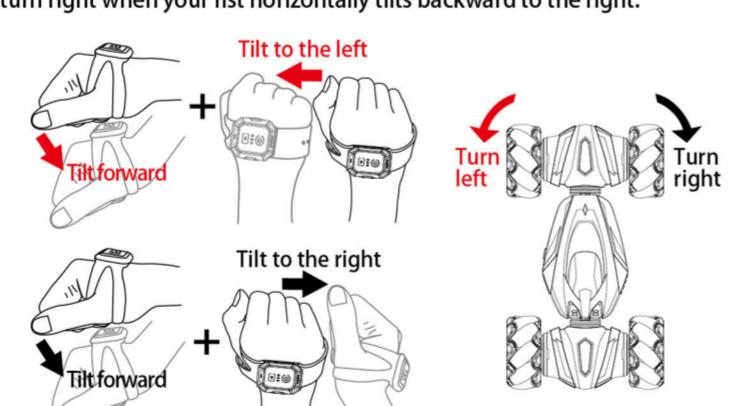


⑤ 45° Left and Right Forward

It will move forward at 45° to the left when your fist horizontally tilts forward and to the left, and move forward at 45° to the right when your fist horizontally tilts forward and to the right.

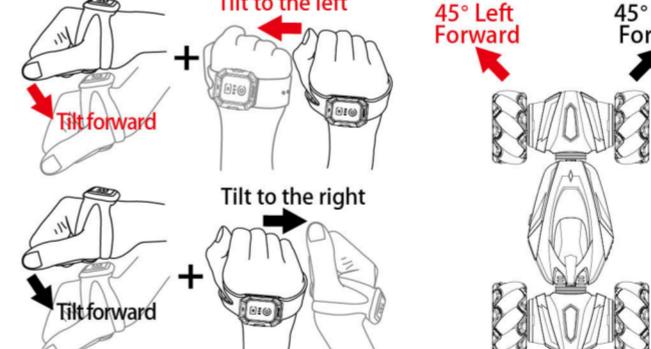

⑥ Twist and Transform

When you level up your arms, the main body ascends vertically to transform to Climbing Mode. When you level down your arms, the main body descends vertically to transform to Racing Mode.

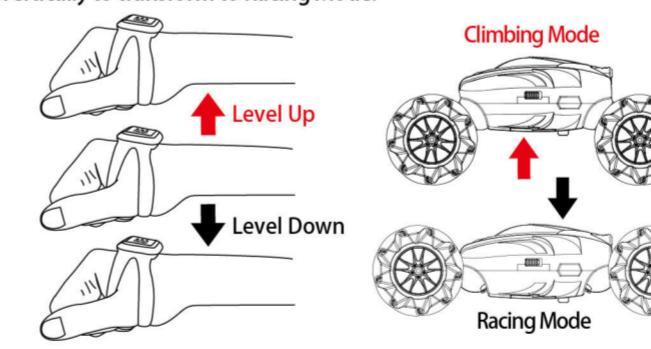

Let's practice! Use angle towers (applicable separately, such as empty bottles) to let the remote control vehicle loop around in wide and spacious space. Basically, it is safe to speed up when driving in the straight line and slow down in corners.




Maintenance

- Remove the battery from the remote control tank when it is not in use.
- Wipe off the sands, muds or dusts.
- Apply the anti-rust oil to the external metal part. (Separate purchase for anti-rust oil is required)
- Place the remote control tank and the battery separately for storage when the remote control tank is not in use.


Battery Storage

- Do not fully charge the lithium battery before keeping it for a long time, otherwise it would result in the passivation, which speeds up the process of self-discharge (see image ①).
- Place the lithium battery in dry indoor space with appropriate temperature between 10° C-30° C (see image ②).
- Conduct a charge cycle every other 3 months to keep it active and perform well (see image ③).

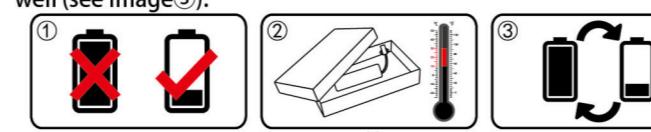

About the Remote Controller

 ① Watch Controller (the battery for the remote control version requires additional purchase)




1. Indicator: The red indicator is for the power and will turn up when power on; the green indicator is for the process of pairing and will turn up at startup and flash when pairing; the blue indicator is for low voltage and will flash when the battery is low.

2. Power Switch: Short press to power on, long press for 3 seconds to power off.

3. Function Button (Switch between rotation and lateral movement modes): Short press to switch between, long press for auto demo (rotation mode has been activated by default at startup).

Note: The watch will power off automatically in 3 minutes in standby mode (i.e. no operations).

② Remote Controller

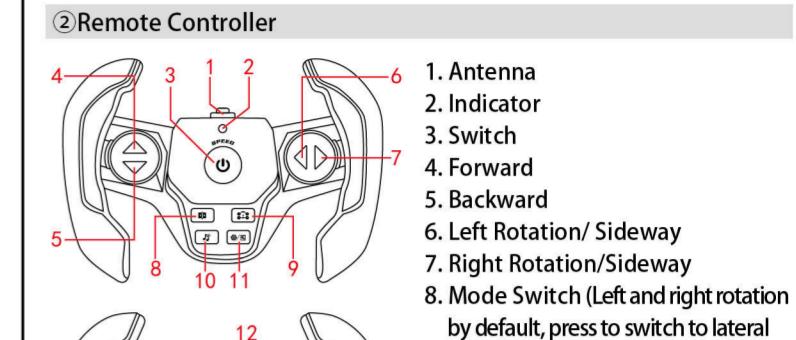

1. Antenna
2. Indicator
3. Switch
4. Forward
5. Backward
6. Left Rotation/Sideway
7. Right Rotation/Sideway
8. Mode Switch (Left and right rotation by default, press to switch to lateral movements mode)
9. Twist and Transfer
10. Sound Switch
11. Short Press for Programming/Demo
12. Battery Compartment

Note:
Please comply with the following steps to avoid losing the remote control tank or losing control of it:
1. Power on the remote controller.
2. Power on the remote control truck.
Follow the reverse steps to turn it off.

▲ Battery Safety Precautions

- There is potential risk of personal injuries and property loss when using batteries. Please be cautious and bear the responsibilities for your own safety.
- If the battery leaks, please avoid direct contact with your skin or eyes. Please immediately wash with soap and running water if it gets on your skin, and wash with plenty of cold water and seek for doctors if it gets on your eyes.
- If the charger smells suspicious or emits smoke, unplug it immediately.

Charging

- Please use the original specific USB charger and do not use ones that are broken or from other brands.
- Do not charge your battery when it is swollen, leaking or worn-out.
- Do not over charge the battery. Please disconnect the charger when the battery has been fully charged.
- Do not charge the battery around flammable materials (such as carpets, wood floors, solid wood furniture, etc.) or on surfaces of conductive objects. Keep the battery in line of sight during charging.
- Do not rush to charge the battery when it does not cool down yet after usage.
- Ensure the charging temperature is between 0°C and 40°C.

Adapter

- Please use the appropriate adapter for charging.
Input: 100-240V~50/60Hz 0.2A, output: 5.0V~500mA 0.5-1.5A

Recycling
This product consists of electric components and batteries. Please follow the local regulations to specifically dispose of the electric wastes and appliances.

7

Play with Remote Controller

1. Watch Controller (the remote control version requires additional purchase)

① Forward & Backward


It will move forward when your fist horizontally tilts forward and move backward when your fist horizontally tilts backward.



8

② Left and Right Rotation (Default Rotation Mode at Startup)


It will implement left rotation when your fist horizontally tilts to the left and right rotation when your fist horizontally tilts to the right.

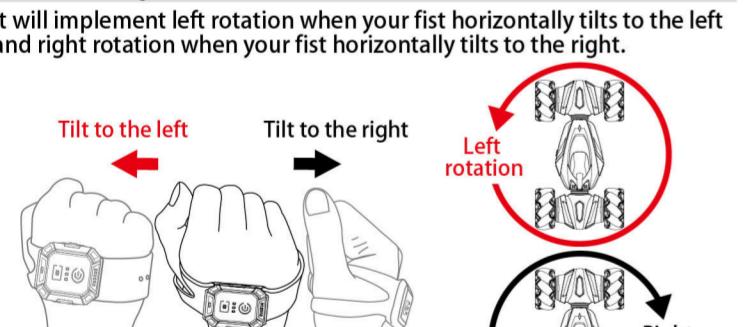

9

③ Left/Right Sideway


Press the sideway/rotation button on the remote controller to switch to Lateral Mode (default mode at startup), and press the left/right button to let it move to the left/right.

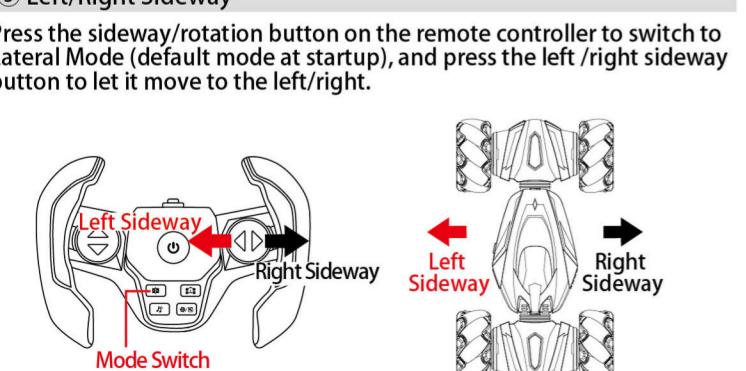

10

④ Twist & Transform


Climbing Mode
Racing Mode

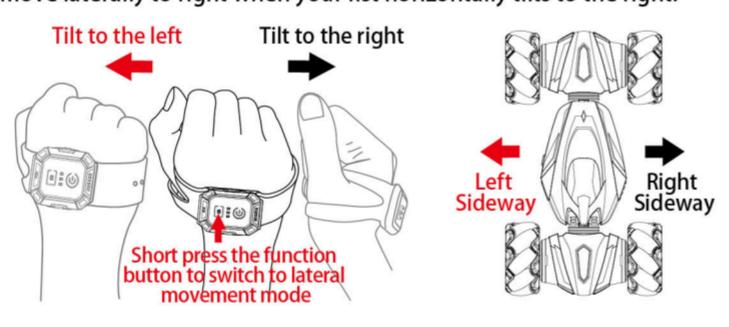

11

⑤ Sound Switch

Press the sound switch button to turn it off and press again to turn it on.

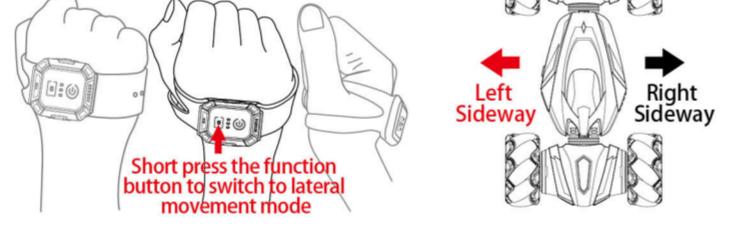

12

⑥ Programming and Auto Demo

Press the programming button to add commands with up to 15 combo besides music, water boom/blaster launch, spray, auto demo. Once done, press again to demonstrate the command one by one.

</div