

User Manual

General Information

Profile

Please read this pamphlet carefully in order to make your machine in perfect condition.

Our company may change this machine without prior written notice and reserves the final right to interpret the performance of this machine.

Due to different software and network operators, display on your iPad may be different, refer to your machine for details.


Safety warning and Attentions

- Please keep the equipment dry. Do not let the equipment, battery and charger contact with water and steam, or use wet water to operate the equipment or charger, so as to avoid short circuit, corrosion caused by equipment failure, etc;
- Do not make the equipment, battery and charger produce strong shock or vibration. Try to avoid disaster or explosion caused by equipment, battery and charger failure;
- Do not place the equipment, battery and charger in areas with excessive or low ground temperature. Otherwise, it may cause equipment, battery and charger failure, disaster or explosion;disaster or explosion caused by equipment, battery and charger failure;
- Do not use unauthorized equipment and accessories, otherwise the equipment and accessories will not be covered by the company's warranty;
- Do not disassemble the machine without permission to avoid danger. If you have any questions, please contact your local dealer

Features

- Mobile screencasting:connected to TV via HDMI HD cable or APPS
- FM: FM Receiver
AM: AM Receiver
- Bluetooth: Bluetooth audio output,and external audio input
- Music playback: Support music format MP3,WMA,APE (lossless compression format)WMA,AAC,LFAC,OGG,AC3,etc
- Video playback: Support 4Kvideo playback PMVB,AVIMp4 FLV,VOB,MKV,WMV and other formats.
- Picture browsing:Supports JPEG and BMP picture browsing
- E-book reading: Supports text document TXT or JAR formats.
- Memory Card support U disk,card reader;TF cardmobile hard disk.
- Karaoke: Playing karaoke videos, you can sing karaoke by plugging in the microphone.
- Microphone Input This unit supports wireless and wired microphones.
- -Internet TV

Panel functions

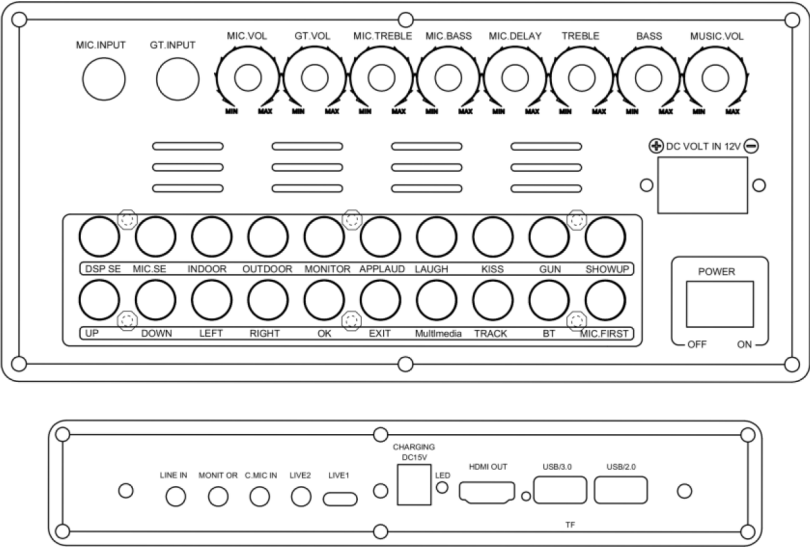

1. Power Switch:One button switch machine

2. Up button: Short press to go back to the previous track or Up-shift cursor
3. Down button: Short press for next song or Down-shift cursor.
4. Left button: Left-shift cursor
5. Right button: Right-shift cursor
6. Enter button: Confirm or open the selected option the selected option.
7. Return button: Return to the previous page.
8. Multimedia: Multimedia Player. (available on some model)
9. Track button: When singing karaoke, the original sound can be either eliminated or accompanied. (available on some model)
10. Bluetooth button: directly enter the Bluetooth music playback state you can connect the phone's Bluetooth play the phone's music
a) (available on some model)
11. MiC priority button: Turn On/Off Microphone Dodge function.
12. DSP sound effect: The accompaniment sound effect adjustment setting menu pops up on the right side of the screen
13. Microphone sound effect: The microphone sound effect adjustment setting menu pops up on the right side of the screen
14. Magic Sound buttons: switch Normal/Male/Female/olita/Warcraft Microphone effect (available on some model)
15. Effect Sound buttons: Example Laughing screaming clapping cheering firework XOXO, kissing yelling whistling etc (available on some model)
16. Main volume knob: adjusting the volume to be small or big
17. Treble knob: treble tone control
18. Bass knob: clockwise to raise the bass counter clockwise to reduce the bass adjustment.
19. Microphone volume knob: Adjust the microphone volume.
20. Microphone reverb knob: Adjust the microphone reverb amount
21. Guitar jack: Guitar input connector
22. Microphone Bass Knob: Adjusting the amount of microphone bass
23. Microphone treble knob: Adjusting microphone treble
24. Microphone jack: Wired microphone input connector.
25. Guitar knob: Adjusting the guitar volume

26. Audio input jack: External audio signal input.(available on some model)
27. Audio output jack: Output audio signal to external equipment
28. Charging jack: Charge the unit and input the customized adapter
29. TF jack: Insert TF card to play TF card video or audio,
30. USB: U-disk jack, play U-disk video or audios
31. C.MIC IN: Microphone input
32. LIVE: Live output

Bluetooth

Press the "Bluetooth" button to enter the Bluetooth mode.


Use the Bluetooth device(mobile phone etc) that needs to be connected to this unit and turn on Bluetooth. On the Device please Scan and search for this device. The local Bluetooth name is "white square" connect to the correct unit. If it cannot be connected,

please restart the unit or try again.

After the mobile phone and the local Bluetooth connection are successful, you can play the music of the mobile device. In order to ensure the stability of the connection of the music signal, please try to keep the unit within the receiving range of the Bluetooth signal. This machine IPAD, IPHONE, Samsung, HTC, Huawei, Xiaomi, etc. (2.1*EDR version) Bluetooth mobile phone to set wireless transmission music support A2DP stereo playback.

The Bluetooth accessibility range of this unit is about 10 meters.


Your Main interface

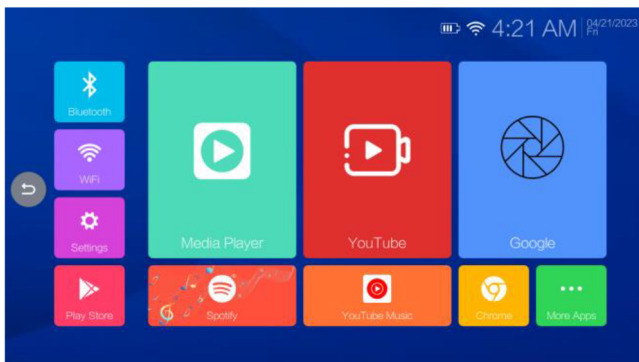

Settings


In the main interface, press the up or down button to select the "Settings" icon, or press the shortcut key "⚙️" on the remote control

Go to Settings interface

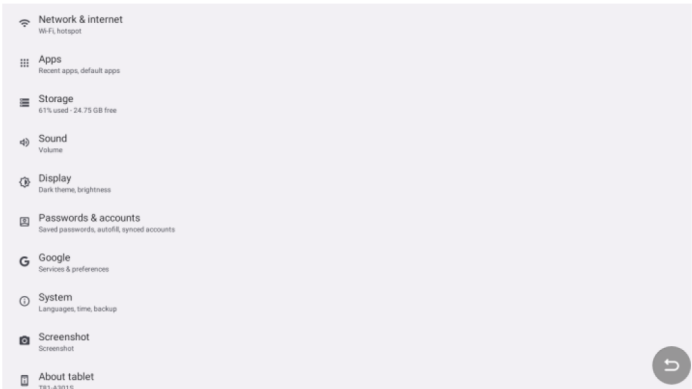


General settings

- ① Network and Internet
- ② Internet

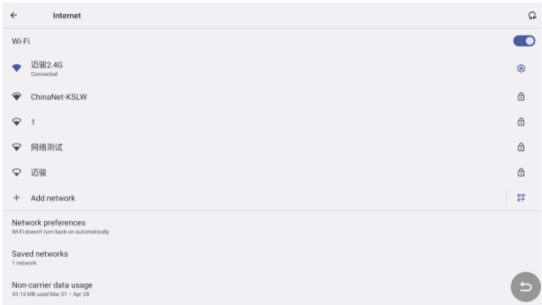


Traffic saving program


2. APPs: View installed apps and uninstall

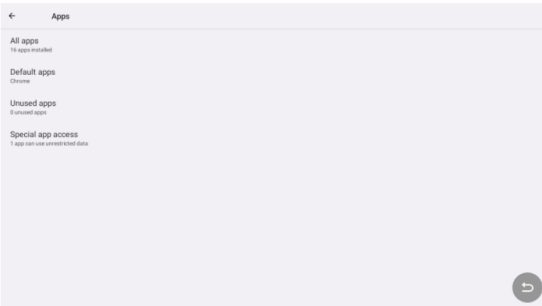


3. Store, view memory and usage.

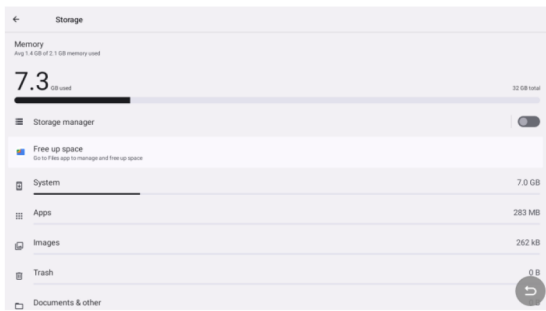


4. Sound settings: Adjust system sound

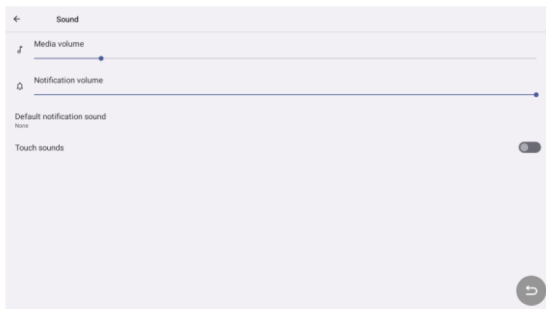


5. Display Settings

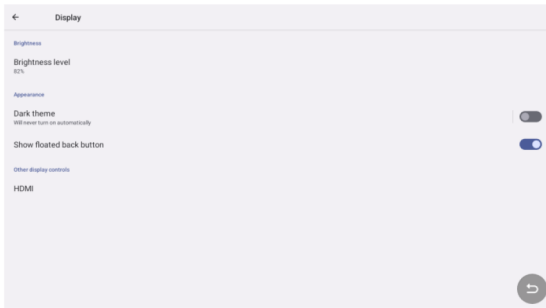


6. Password and Account Settings

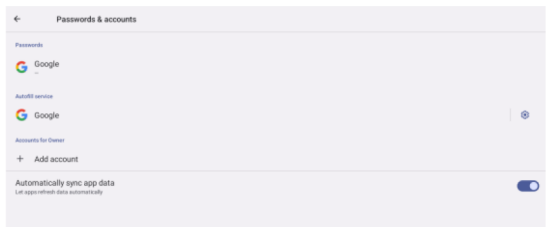


7. google

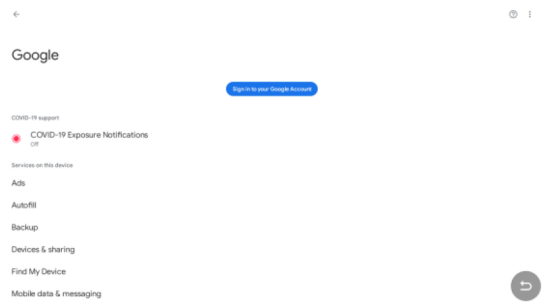


8. System Settings

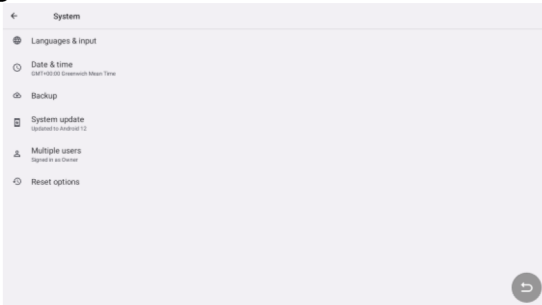

9. Screenshot

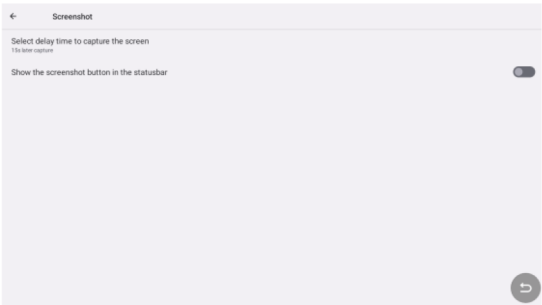

10. About tablets

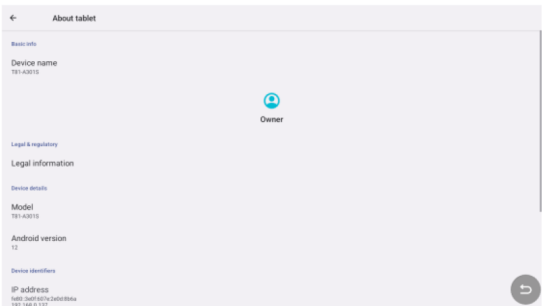

Power management

Backlight brightness: Press the “OK” button to adjust the brightness of the display (Note: the brighter the screen the greater the power consumption)

Exit: Press the Back button to exit and return to the previous menu.

Wireless microphone operation and precautions

1. Open the battery panel, install the battery and pay attention to the positive and negative terminals direction of the battery housing.
2. Open the power switch on the microphone to "ON". If the battery does not flash or is always on, check if the battery is low or the polarity of the battery is reversed.
3. Adjust the microphone consultation knob for the sound volume. When singing, adjust the position of the microphone volume knob according to the required sound volume to achieve the ideal results.
4. The effective distance of the wireless microphone is less than 30 meters. In order not to affect the singing effect, please do not use it outside the valid range. When the battery power drops or the ambient wireless interference signals are too strong, the usage distance will be shortened.
5. When the low battery indicator is prompted, please replace the battery.
6. Do not use the multiple microphones of the same frequency, which may cause silence or interference.

Troubleshooting

1. The music playback cannot play the next song. The menu loop setting of the music mode has been set to "Play one song" and you need to set the playback to play all or sequentially.
2. Why is the song name garbled: Improper characters in title.
3. Power on or off quickly and automatically shut down because the battery is low, please charge or replace battery.
4. The remote control does not work: Point the lighted end of the remote control to the remote control receiver of the unit or replace the battery inside the remote control.

5. No sound from the speaker: The volume knob is turned off and the volume adjustment of the remote control has adjusted the sound too low.
6. There is no sound while displaying pictures: The remote control screen switch has set the display to off and whether the audio and video output is set to on.
7. The button has no function or malfunction: please power off unit and power back on.
8. Karaoke can't turn off the original vocal track: Please press the track button or the vocal button on the remote to turn off the original vocal track, or the video file itself does not support the original singer/song switch function.
9. The wireless microphone has no sound: turn on the wireless
10. microphone or replace the battery of the wireless microphone Song name display code: The song name is traditional Chinese characters or fonts of other countries. The body only supports the display of simplified Chinese and English song names.
11. The next track cannot be played automatically The mode has been set to "Play one song Bluetooth has no sound:
12. Bluetooth has no sound: Please turn on the device and turn the volume of mobile device and set to the maximum volume.
13. During karaoke, only the microphone has sound; no track sound the microphone priority function is turned on please turn off the microphone priority function.
14. The wireless network cannot be connected properly. Please check the distance between the router and the machine and restart the router

Charging instructions

1. The music playback cannot play the next song The menu loop setting of the music mode has been set to "Play one song and you need to set the playback to play all or sequentially.
2. Why is the song name garbled: Improper characters in title.
3. Power on or off quickly and automatically shut down because the battery is low, please charge or replace battery
4. The remote control does not work: Point the lighted end of the remote control to the remote control receiver of the unit or replace the battery inside the remote control.

FCC warning statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

WARRANTY CARD

Product Name: _____

Date of purchase _____

Product model: _____

End user: _____

1. The product is self purchased, 30 days warranty (from the day it is purchased), and 3 years of maintenance (on chargeable basis) depending upon the availability of spare parts and raw materials.

2. Warranty service is valid only for normal use.

3. All damage caused by man-made damage, self-disassembly, unpacking, improper use, etc. is not covered by the warranty. This card must be provided during the warranty period. If the card is not provided or the card is altered, the company has the right to make non-warranty treatment.

The following conditions are not covered by the free

warranty:

1. The user is repaired by himself or caused damage.

2. No purchase invoice (receipt) to change the invoice (receipt).

3. Damage caused by external factors such as water, electricity, fire, etc. due to abnormal voltage.

4. Damage caused by failure to comply with the instructions.

5. Damage caused by Acts-of-God.

6. Damage is caused by operating unit not according to the specified temperature and humidity requirements.

7. Wooden box, speaker, battery remote, wires, packaging box and wireless mic do not cover in warranty.

If it is not covered by the free warranty service, our company will continue to provide you with paid services.

Note: Do not use other manufacturers' adapters to charge the unit so as to avoid the voltage mismatch and burn the unit!

Please read the instructions carefully before using this product and keep it for your reference!