


USE QUALITY EQUIPMENT Use authorized equipment to avoid danger. Give full attention while driving, park before using your phone. Please follow local traffic rules.

OUT OF CHICDREN'S REACH

Keep your phone, phone parts and accessories out of childrenús reach.

ROAD SAFETY COMES FIRST

All wireless devices may to cause interference, which could affect performance. SWITCH OFF IN AIRCRAFT ONE SIM NEEDLE

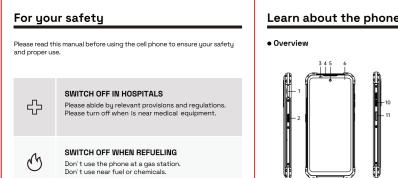

1 Card Tray 10 Volume Key 2 IIIF150 Key Power Fingerprint/ Key 3 Light Sensor Photo Flashlight 4 Receiver Rear Camera(64M) Front Camera(32M)
Pickup Lights 6 Touch Screen 6 Infrared Thermometer 7 Microphone 16 Infrared Lamp 8 Headset/USB interface
Night Vision Camera(24 M)

Waterproof test hole
Speaker Function Keys Press to turn on/off the screen. POWER KEY Press and hold to reboot, power off the phone.

 Basic Function HOME KEY (ON THE SCREEN) Tap to return to Home screen. BACK KEY (ON THE SCREEN) Tap to return to the previous screen. FINGERPRINT KEY Press to unlock the phone. IIIF150 KEY(SOS) Click 5 times to enter SOS mode. 5. Unlock the screen
Press the power key for unlocking.

The phone is a Dual SIM mobile that allows you to use two mobile networks.

• Operational Warnings Insert SIM cards and TF card Plug-free design, take out the sim tray without any tool.

Charge the Battery

Charge the battery before using it.

operation of your phone, observe these guidelines: Potentially Explosive at Atmospheres: Insert the Nano SIM cards and TF card to the card slots correctly. Card 1 supports Nano SIM1 card. Card 2 supports Nano SIM2 card or TF card. Turn off your phone when you are in any areas with a potentially or particles (Such as metal powders, grains, and dust) in the air. • Interference to Medical and Personal Electronic Devices: Most but not all electronic equipment is shielded from RF signals and certain electronic equipment may not be shielded against the RF signals from your phone. Audio Safety: This phone is capable of producing loud noises which may damage your hearing. When using the speaker phone feature, it is recommended that you place your phone at a safe distance from your ear.

If you use any other personal medical device, consult the manufact of your device to determine if it is adequately shielded from externa energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any 1.Do not remove the cards while the device is transferring data.
 It so may cause data to be lost or damage to the cards and davice. regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy. 2.The SIM cards and TF card are small parts. Please keep away from children to avoid accident. Product Statement on Handling and Use: You alone are responsible for how you use your phone and any

Other Medical Devices, Hospitals:

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Always treat your phone and its accessories with care and keep it in a clean and dust-free place. t expose your phone or its accessories to open flames or lit ot expose your phone or its accessories to liquid, moisture, or high not drop, throw, or try to bend your phone or its accessories. authorized personnel can do so.

Do not expose your phone or its accessories to extreme temperatures, minimum -4 Fand maximum 158 F(-20°C to 70°C). Your phone includes an internal lithium-ion or lithium-ion polymer battery. Please note that use of certain data applications can result in heavy battery use and may require frequent battery charging. Any disposal of the phone or battery must comply with laws and regulations pertaining to lithium-ion or lithium-ion polymer batteries.

 Faulty and Damaged Products: Do not attempt to disassemble the phone or its accessory. Only qualified personnel can service or repair the phone or its accessory.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the If your phone or its accessory has been submerged in water, Punctured, highest certified power level, the actual SAR level of the phone while or subjected to a severe fall, do not use it until you have taken it to be operating can be well below the maximum value. Before a new model phone is a available for sale to the public, it must be tested and certified checked at an authorized service center. to the FCC that it does not exceed the exposure limit established by the Safety Information FCC, tests for each phone are performed in positions and locations as Do not use the mobile phone in the environment at too high or too low required by the FCC. For body worn operation, this model phone has been temperature, tested and meets the FCC RF exposure guidelines when used with an never expose the mobile phone under strong sunshine or too wet accessory designated for this product or when used with an accessory environment. that contains no metal and that positions the handset a minimum of 10mm The maximum operating ambient temperature of the equipment is 70 °C. from the body. Non-compliance with the above restrictions may result in

violation of RF exposure guidelines.

6. The plug consicered as disconnect device of adapt ≆r.

on the market in Belgium (BE), Bulgaria (BG), the Czech Republic

Slovakia (SK), Finland (FI), Sweden (SE), Turkey (TR), Norway(NO),

The WLAN function for this device is restricted to indoor use only when

Switzerland (CH), Iceland (IS), and Liechtenstein (LI).

operating in the 5150 to 5250 MHz frequency range.

(CZ), Denmark (DK), Germany (DE), Estonia (EE), Ireland (IE), Greece (EL),

with the requirements.

Restrictions in the 5 GHz Band:

FCC ID: 2A8X4-AIR1ULTRAPRO Excessive sound pressure from earphones and headphones can cause hearing loss. Accessory Information To prevent possible hearing damage, do not listen at high Battery: 7000mAh Typical volume levels for long periods. are still compliant with the related rules. Waste Electrical and Electronic Equipment (WEEE) This symbol means that according to local laws and regulations your product and/or its battery shall be

disposed of separately from household waste. When this product reaches its end of life, take it to a collection point

1. Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss. designated by local authorities. Proper recycling of your 2. CAUTION: RISK CF EXPLOSION IF BATTERY IS REPLACED BYAN INCORRECT product will protect human health and the environment. TYPE, DISPOSE (F USED BATTERIES ACCORDINGTO THE INSTRUCTIONS, FCC Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC may not cause harmful interference, and (2) this device must accept any
5. Operation temperature:-20~70°C. interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC 7. SAR: The device complies with RF specifications when the device used at harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no 8 guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: öReorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to

which the receiver is connected. öConsult the dealer or an experienced

7 Micrófono Cámara de visión nocturna (24M)

8 Auriculares/interfaz USB (8 Altavoz

radio/TV technician for help. Specific Absorption Rate (SAR) information

NO CH IS LI Do not disturb mode. How to set the IIIF150 RGB Rhythm Light?

>2 Click IIIF150 Lights >3 Turn ON the Rhythm Lights swicth and Click the Rhythm Lights >4 Choose the Mode you like 1. There are three flashing modes to be offered. The Rhythm light will flash randomly when playing music or video. 2. If the Rhythm Light cannot works when you play music or video, please >3 Advanced

check the following settings:

>1 Please check whether you have Turn ON the Rhythm Light >2 Please check if the time you play music or video is between the start time and the end time you set. 3. The product shall only be connected to a USB interface of version USB2.0. Saving mode. Rules. Operation is subject to the following two conditions: (1) This device

4. Adapter shall be installed near the equipment and shall be easily accessible.

>4 When the phone's battery is lower than 30%, the Rhythm light >5 lf it still cannot work after all setting above is correct, please try to Rules. These limits are designed to provide reasonable protection against 0.5cm from your body (SAR limit 2.0 W/Kg). The devive is in compliance How to set the IIIF150 Breathing/Notification LED? >1 Click Settings According to Article 10 (10) of Directive 2014/53/EU, the packaging shows >2 Click IIIF150 Lights

that this radio equipment will be subject to some restrictions when placed >3 Turn ON the Breathing(Notification) LED and Click it >4 Choose the color of LED you like and choose the apps you need to be notified when receiving an incoming calls or messages. Spain(ES), France (FR), Croatia (HR), Italy (IT), Cyprus (CY), Latvia (LV), Note: Lithuania(LT), Luxembourg (LU), Hungary (HU), Malta (MT), Netherlands

1. The Breathing LED will work when you received an incoming call or a (NL), Austria(AT), Poland (PL), Portugal (PT), Romania (RO), Slovenia (SD, message/notification. 2. The LED will not light up when you are using the camera, even if you set the standard mode(always light on). The breathing LED will stop after 5 minutes of operation until a new message/notification comes.

Tasto Home (sullo schermo) Tocca per tornare alla schermata Home.

ES LU RO CZ FR HU SI 4. If the Breathing (Notification) LED will not light up, please check whether the following setting is correct or not: DK HR BE BG DE EE IE >1 Please check whether you have Turn ON the Breathing(Notification) EL IT Cy LV LT SK MT LED >2 Please check if the time you received incoming calls or messages/noti->4 When the phone's battery is lower than 30%, the IIIF150 light (Rhythm light & Breathing light) will automatically turn off. >5 Please check if the Apps you need to be notified when receiving

NL AT PL PT FI SE TR fications is between the start time and the end time you set. >3 Please check whether you have Turn 0N the Power saving mode and messages are set as "Support notification Light effect", you can check it in the following way: Settings>IIIF150 Lights>Breathing LED>Apps supporting notification light effect. Please Turn ON the Standard Mode when you choose the color of LED, so

> you can choose to Turn it ON/OFF to make the light always on/off. How to set the 120Hz Refreshing Rate? >4 Screen Refresh Rate >5 Choose the refresh Rate you prefer Lernen Sie das Telefon kennen

> > Das Telefon ist ein Dual-SIM-Handy, mit dem Sie zwei Mobilfunknetze nutzen können. SIM-Karten und TF-Karte einlegen Stechen Sie mit der Auswurf-Nadel in das Stiftloch hinein, um das Kartenfach aus dem Telefon heraus zu holen. Setzen Sie die Nano-SIM-Karten und die TF-Karte richtig in die Kartensteckplätze ein. Karte 1 unterstützt die Nano-SIM1-Karte.

4 Empfänger

1 Kartenfach 10 Lautstärketaste IIIF150-Schlüssel
 Power Key/Fingerabdruck
 Grundfunktion Rückfahrkamera (64 M) 6 Frontkamera (32M)
Pickup Lichter 6 Touchscreen 6 Infrarot Thermometer 7 Mikrofon (6 Infrarotlampe 3 Headset/USB-Schnittstelle

Nachtsichtkamera (24M)

you can check how it looks like directly. After you finish the setting, Funktionstasten Power-Taste Drücken, um den Bildschirm ein-/auszuschalten.
Gedrückt halten, um die Optionen Neustart/Ausschalten Lautstärke-Taste Drücken, um die Lautstärke des Geräts einzustellen. Home-Taste Tippen, um zum Startbildschirm zurückzukehren. Zurück-Taste (auf Bildschirm) Tippen, um zum vorherigen Bildschirm zurückzukehren. Fingerabdruck-Taste Drücken, um das Telefon zu entsperren. IIIF150-Taste (SOS) 5-mal drücken, um den SOS-Modus aufzurufen.

Wasserdichtes Testloch
 Lautsprecher

Karte 2 unterstützt die Nano-SIM2-Karte or TF-Karte.. Aufladen des Akkus Laden Sie den Akku auf, bevor Sie ihn verwenden.

© Lichtsensor Protoblitz

1. Einschalten des Telefons

Drücken und halten Sie die Power-Taste für kurze Weile, um das

3 доминистия отверстие Звуковые клавиши

2. Ausschalten des Telefons Drücken und halten Sie die Power-Taste so lange, bis ein Menü erscheint. Wählen Sie "Ausschalten", um das Telefon auszuschalten.

• Функциональная клавиши erscheint. Wählen Sie "Neustart", um das Telefon neu zu starten. Option 2: Drücken und halten Sie die Power-Taste bis zu 13 Sekunden lang, um das Telefon automatisch neu zu starten. 4. Sperren des Bildschirms
Option 1: Power-Taste kurz drücken, um den Bildschirm
auszuschalten und zu sperren.
Option 2: Der Bildschirm wird automatisch gesperrt, wenn das
Telefon eine Zeit lang nicht benutzt wird.


5. Entsperren des Bildschirms Power-Taste kurz drücken, um den Bildschirm zu entsperren.

Парточный лоток
Энергетические клавиши / отпечатки пальцев Клавиша IIIF150
Фотовспышки Задняя камера (64M) приемник
Подсветка

фронтальная камера (32M)

 ф инфракрасный термометр 6 сенсорный экран
Инфракрасный свет Микрофон
Камера ночного видения (24M) в наушники / USB интерфейс
Громкоговорители

Нажимите, чтобы включить / выключить акран.
Клавища питания Нажимите и удерживайте, чтобы перезагрузить, выключить телефон. Клавиша громкости Нажмите, чтобы отрегулировать громкость устройства. Клавиша Главная (на экране) Нажмите, чтобы вернуться на главный экран. Клавиша назад (на экране) Нажмите, чтобы вернуться к предыдущему экрану. Клавиша отпечатка пальца Нажмите, чтобы разблокировать телефон. Клавиша IIIF150 (SOS) Нажмите 5 раз, чтобы войти в режим SOS. Перед использованием • Вставьте SIM-карты и ТF-карту • Вставьте инструмент для извлечения в отверстие для булавки, тогда лоток для карт выйдет из телефона. Правильно вставьте Nano SIM-карты и TF-карту в слоты для карт. Карта 1 поддерживается карта Nano SIM1. Карта 2 поддерживается карта Nano SIM2 or TF-карта. • Зарядите батарею Перед использованием зарядите батарею. Базовые функции 1. Включение телефона Нажмите и удерживайте кнопку питания некоторое время, чтобы включить телефон. 2. Выключение телефона Нажмите и удерживайте кнопку питания, пока не появится меню. Выберите «Выключить», чтобы выключить телефон.

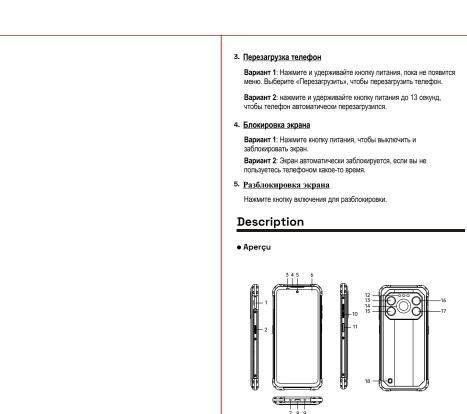

 Bac à cartes
 Touche d'alimentation/
 Empreinte digitale S Capteur de luminosité
P Flash photo
récepteur
C améra arrière (64M) 5 caméra avant (32M) 4 Capteur 6 écran tactile 6 Thermomètre infrarouge 9 trou de test étanche (B) Haut-parleur Touche de volume Détails des touches physiques et tactiles WWW. IIIF150. COM

4. Verrouiller Işécran
Option 1: Appuyez sur la touche marche / arrêt pour éteindre
l'écran et le verrouiller.
Option 2: L'écran se verrouille automatiquement si vous n'utilisez
pas le téléphone pendant un certain temps. Déverrouiller lşécran
 Appuyez sur la touche marche / arrêt pour déverrouiller.
 Appuyez sur cette touche pour allumer ou éteindre l'écrai Appuyez et maintenez cette touche pour redémarrer, éteindre le téléphone.

LECTURE D'EMPREINTE DIGITALE Appuyez sur le lecteur pour déverrouiller le téléphone. TOUCHE IIIF150 (SOS) Cliquez 5 fols pour passer en mode SOS. **①** カードトレイ

La fonction Dual SIM vous permet d'utiliser deux cartes SIM simultanément. 🌃 電源キー/指紋 🕜 フォトフラッシュ Insérez les cartes SIM et la carte TF ⑥ 背面カメラ (64M) Dşabord insérer lşépingle fournie dans le trou à cet effet, 🕻 光ピックアップランプ puis le support de la carte sortira du téléphone. 5 フロントカメラ(32M)6 赤外線温度計 Insérez correctement les cartes Nano SIM et la carte TF dans les emplacements pour cartes

La carte 1 prend en charge la carte Nano SIM/1.

La carte 2 prend en charge la carte Nano SIM/2 or carte TF. ⑤ タッチスクリーン ⑥ 赤外線ランプ Charger la Batterie ⑨ 防水テストホール ● スピーカー Charger la batterie avant utilisation. ● 音量キー

電源キー 押して画面をオン/オフにします 長押しして電話を再起動、電源オフお。 タップしてホーム画面に戻ります。 タップして前回の画面に戻ります Fingerprint key指紋キー 押して電話をロック解除します。

本電話機は2つのモバイルネットワークを使用することができるデュアル SIM モバイルです。 サードおよび TF カードを挿入する

 Bandeja de tarjetas
 Tecla de encendido/huella digital 2 Tecla IIIF150 Plash de fotos Sensor de luz Sémara trasera (64M) Receptor
 Lámpara de recogida
 Cámara frontal (32M)
 Termómetro infrarrojo 6 Pantalla táctil 6 Luz infrarroja

カードおよび IT カードをカードスロットに 正しく挿入します。 カード I LisNano SIMI カードをサポートします。 カード Z はNano SIM2 カードをサポートしますor TF カードをサポートします。 3 Agujero de prueba impermeable Tecla de volumen ● バッテリーの充電 本機のご使用前にバッテリーを充電します。 Botones de función Botones Funciones

イジェクトツールでピンホールに差し込むと、カードトレイが電話から出てきます。

Botón de encendido
y apagado
Pulsar para encender/apagar la pantalla.
Pulsar y mantener pulsado para reiniciar, apagar el teléfono. Botón de volumen Pulsar para ajustar el volumen del dispositivo.
 2. 電話をオフにする
 Tecla de inicio (en la pantalla)

 電源キーをメニューが表示されるまで長押しします。「電源オフ」を選択して電話をオフにします。
 Tecla de inicio (en la pantalla)
 Teola Volver
(en la pantalla)

Pulsar para volver a la pantalla anterior. 3. 電話の再起動 オプション1: 電源キーをメニューに と表示されるまで長押しします。 「再起動」を選択して電話を再起動します。 オプション2:電源キーを 13秒間まで長押しして 電話を自動的に再起動 します。 Tecla de huella dactilar Pulsar para desbloquear el teléfono. 4. 画面をロックする オプション1:電源キーを押して画面をオフにしてロックします。 オプション2:電話を長期間使用しないと画面は自動的にロックされます。 **5. 画面のロック解除** 電源キーを押してロック解除します。 Información sobre el teléfono

 Introduzca tarjetas SIM y tarjeta TF Inserte un objeto puntiagudo en el orificio y la bandeja de la tarjeta se abrirá.
 Inserte correctamente las tarjetas Nano SIM y la tarjeta TF en las ranuras para tarjetas. Tarjeta 1 para tarjeta Nano SIM1. Tarjeta 2 para tarjeta Nano SIM2 or para tarjeta TF. Carga de la batería
 Cargue la batería antes de usarla.

 Funciones básicas Apagar el teléfono
 Mantenga pulsado el botón de encendido hasta que aparezca el menú.
 Seleccione "Apagar" para apagar el teléfono. 4. Bloquear la pantalla




Tasti funzione


 Ricarica della batteria Ricaricare la batteria prima dell'uso. 2 Chiave IIIF150 Power Key/Fingerprint Funzioni di base Sensore di luce Poto flash 1. Accensione del telefono 4 Ricevitore

Telecamera posteriore (64M) 5 Fotocamera frontale (32M) Pickup luci 6 Touch screen

 Termometro infrarosso 2. Spegnimento del telefono 7 Microfono (6 Lampada infrarossa 3 Cuffia / Interfaccia USB 🍎 Telecamera di visione notturna 3. Riavvio del telefono Foro di prova impermeabile
 Altoparlante

Tenere premuto bevemente il tasto di accensione per accendere il telefono. Tenere premuto a lungo il tasto di accensione finché non com un menù. Scegliere üSpegniù per spegnere il telefono. Opzione 1:Tenere premuto a lungo il tasto di accensione finché non compare un menù. Scegliere "Riavvia" per riavviare il telefono. Opzione 2: Tenere premuto a lungo il tasto di accensione per 13 secondi per riavviare automaticamente il telefono. 4. Blocco dello schermo Opzione 1: Premere il tasto di accensione per spegnere lo schermo e bloccarlo. Opzione 2: Lo schermo si bloccherà automaticamente se non si usa il telefono per un poú. Tasto di accensione tPremere per accendere/spegnere lo schermo.
Tenere premuto per riavviare, spegnere il telefono 5. Sblocco dello schermo
Premere il tasto di accensione per sbloccare.

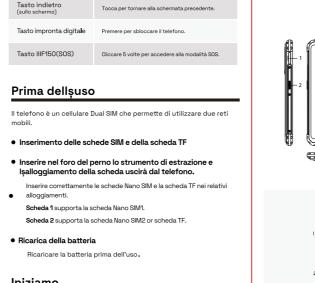

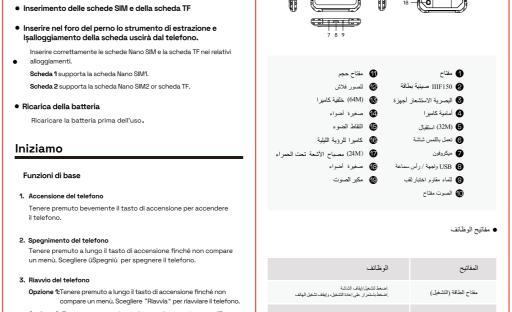







.3 Tasta de pornire Apăsați pentru a pornijopri ecranul. Apăsați lung pentru a reporni, opriți telefonul.

Tasta Acasă (pe ecran) Atingeți pentru a reveni la ecranul de pornire. Cheie de amprentă Apăsați pentru a debloca telefonul. Tasta IIIF150 (SOS) Faceți clic de 5 ori pentru a intra în modul SOS.

Înainte de utilizare Telefonul este un mobil Dual SIM care vă permite să utilizați două rețele mobile. Introduceți cartelele SIM și cardul TF Lipiți în orificiul pentru știft cu instrumentul de evacuare, iar apoi tava pentru carduri va fi scoasă din telefon. Introduceți corect cardurile Nano SIM și cardul TF în sloturile pentru carduri. Cardul 1 acceptă cardul Nano SIM1. Cardul 2 acceptă cardul Nano SIM2 sau cardul TF. Incarca bateria


Încărcați bateria înainte de a o folosi.

Noțiuni de bază 2. Opriți telefonul Apăsați lung tasta de pornire până când apare un meniu. Alegeți / Oprireù pentru a opri telefonul. 3. Reporniți telefonul Opțiunea 1: apăsați lung tasta de pomire până când apare un meniu Alegeți "Repomiți" pentru a reporni telefonul. Opțiunea 2: apăsați lung tasta de pornire până la 13 secunde pentru a reporni automat telefonul. 4. Blocați ecranul Opțiunea 1: apăsați tasta de pornire pentru a opri ecranul și a-l bloca. Opțiunea 2: Ecranul se va bloca automat dacă nu utilizați telefonul o perioadă. Deblocați ecranul Apăsați tasta de pornire pentru deblocare.


The E-label information


Scroll through the menu to find and select Settings

Scroll down in Settings to find and select About phone

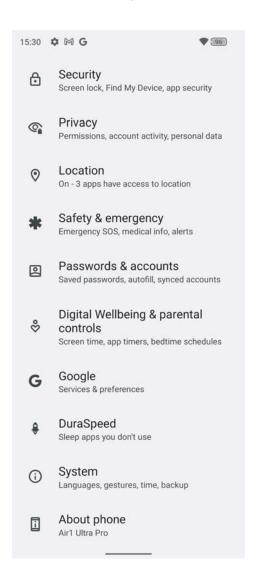

Scroll down in Settings to find and select Regulation

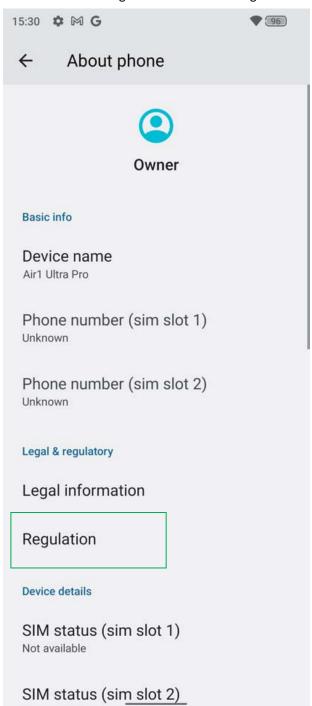

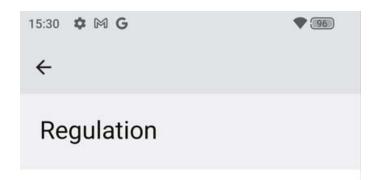

Manufachurer:

HONG KONG YO YOUNG INTELLIGENT CO,.LIMITED

Manufacturer address:

19H MAXGRAND PLAZA NO.3 TAI YAU STREET SAN PO KONG, KOWLOON HONG KONG

> Google certification: GMS

EU certification:

C€RoHS<u>ℤ</u>

F©

FCC ID:2A8X4-AIR1ULTRAPRO

Battery certification:

IEC:62133 UN38.3 MSDS

Jate TELEC

