


FRONT AND BACK CARD FOR GAMEPAD. SIZE IS 2.25" X 6".
FOLDED IN HALF TO FIT INTO CLAMSHELL PACKAGING IS OK.

FRONT

Transmitter and Receiver Connection Procedure:

The wireless gamepad transmitter must be linked to the receiver with a unique ID code in order to function properly. To do this, follow these steps.

1. Make sure the transmitter is switched OFF.
2. Install batteries in transmitter. Connect the battery pack to the receiver – RED LED will be flashing.
3. Press the CONNECT button on the side of the receiver – RED LED will change to a rapid flashing rate.
4. Press and hold down the CONNECT button on the transmitter.
5. While pressing the transmitter CONNECT button, switch the transmitter ON.
6. The RED LED on the receiver will change to solid. Release the transmitter CONNECT button.
7. The transmitter and receiver are now connected and ready for operation.

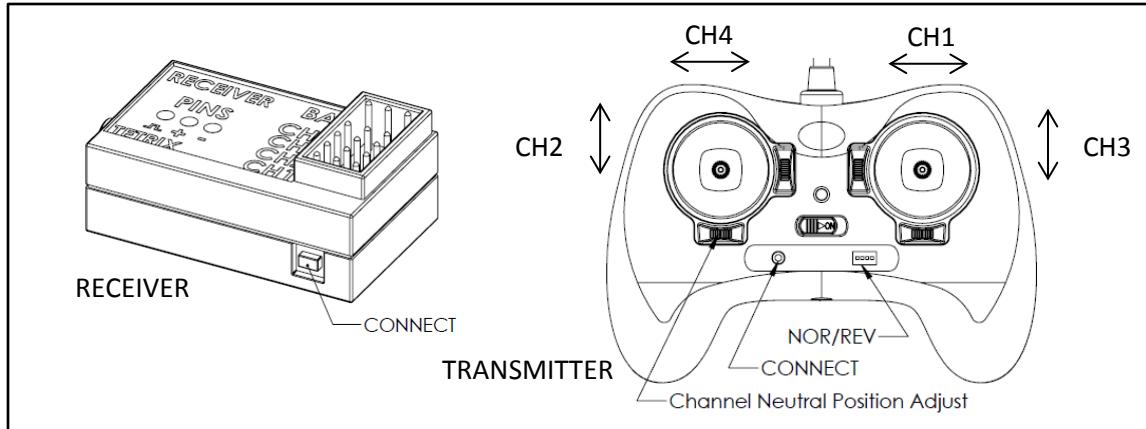

BACK

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.