# **USER'S MANUAL**

MC330



Please read this manual carefully before using the product and keep it in a safe


Thank you for purchasing and using this product!

To ensure a better operating experience for you, please refer to your product manual.

### **Product Features**

- 1. Music playback function: Built-in 39 types of sleep-soothing music, including white noise, ocean waves, birdsong, running water, thunder wind, and more. Covers most people's sound preferences.
- 2. Bluetooth function: both can play the built-in sound source of the machine, the user can also connect Bluetooth to play songs.
- 3. Time function: lightly press the " T " key to display the time.
- 4. Timing function: Timing can be selected: 30, 60, 90 minutes.
- 5. Durable battery life: built-in 1500mAh lithium battery, standard Type-C
- 6. Memory function: After power off, it can save the previous setting function, and after power on, it can restore the brightness of the night light before the last power off. The night light brightness, volume setting, and white noise playing automatically before the last power off

# **Products**

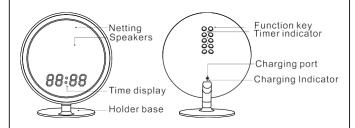


#### Instructions for use

### Batterv

 Use the Type-C charger to charge the speaker, when charging, the speaker indicator light is red. When charging is complete, the speaker's indicator light will turn green.





### Connect Bluetooth to play music

- 1. Long press the "Music/Bluetooth button" for 3 seconds to open Bluetooth, long press again for 3 seconds to enter pairing mode, after pairing successfully you can use Bluetooth to play music.
- 2. Open the Bluetooth of your cell phone, search and connect the Bluetooth device that starts with "MC330-\*\*\*". speaker.
- \* Bluetooth Music Priority, when local music is playing, the phone plays music and the speaker automatically switches to Bluetooth music mode

### Setting the clock

places, keep it dry. Keep it dry.

4. Do not press the button too hard.

Troubleshooting

pressed.

table to solve the problem.

3. Do not place any objects on this product.

5. Do not disassemble, puncture or crush the product.

1. Press and hold down the "M" key, the time display "hour" flashes, press the "S " key to set the time.

2. This product is not waterproof, avoid placing the device in rainy or wet

If an abnormality is found during use, please refer to the following

The machine does not work / does not respond even when the button is

Reason: The power is not on because you didn't long press the power

Countermeasure: Don't short press, long press for about 3 seconds to

Press the " M " key again, the time display "minute" blinks press the "S" key to set the time and then press the "M" key. After setting the time, press the "M" key.

\*Connect the bluetooth speaker to synchronize the time of car phone automatically.

## Timer button setting instructions

Turn on your device or light in continuous play, until the timer isturned on. Press Timer button to set timer for 30/60/90 min. corresponding indicator for different timers setting will light up. Note: If no indicator lights up, device is in continuous working. Default mode is continuous working.

### **Technical Information**

Model No: MC330 Operating Temperature: \_10°C-40°C

Charging Voltage: 5V Weight: 242g±5g Battery Capacity: 1500mAh Size: 142\*84\*161mm Working Distance: 10m (open environment without obstacles)

## Packing List



White Noise Bluetooth Speaker







Type-C Charge Cable User Manual

### Function Introduction ON/OFF

Short press: Play/pause music

Long press: Turn ON/OFF

#### White noise level

IIIII Short press: Play next song

#### Music/Bluetooth

Short press: Play the next

Long press: Connect/pair Bluetooth

#### Natural sounds

Short press: Play next song

### Time setting

Long press: enter setting time Short press: Setting is complete

#### Attention

1. Please place the device at least about 1 meter away from you or your baby so that it can This allows the sound to fill your space properly and is good for your hearing.

### Time display

T Short press: display time

### Timer

30/60/90 min Short press: Set timer

### Volume up

+ Lncrease music volume

#### Volume down

- Reduce music volume

#### Time adjustment

Short press: increase time

turn the power on or off The machine is powered on but does not make a sound

Cause: Volume set to minimum

Countermeasure: Press the Volume Up button before the volume is appropriate.

#### Charging indicator does not light up green even when charging for a ong period of time

Cause: Charging with a USB cable / incompatible with the charger you

Countermeasure: Please use another 5V / 1A USB power adapter or your computer's own USB port, etc. for charging.

# **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receivingantenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement

The device can be used in portable exposure condition, compliance with exposure requirements.