

13.625"



Model No. 23LE11055
SKU No. 1009125206

INDOOR/OUTDOOR

LED PUMPKIN DISC LIGHT

Please follow the instructions below to properly assemble and store your LED Pumpkin Disc Light.

USER MANUAL

(LED Pumpkin Disc Light with Magnet, Suction Cup, RF Remote)



13 LEDs



Magnet



Suction Cup



RF Remote




AA Battery



16 Colors

Feature

Power	0.3-1.3W	Timer	2H,4H,6H, time off
LED	13LED	Light Battery	3 x AA (for 3.38 inch, not included)
		Remote Battery	1 x CR2025 Button Cell (included)
Dimmable	Yes	Best Remote Range	30M/100FT
Control by	Radio Frequency	Max Remote Range	1M/3.3FT (Water) 30M/100FT (Air)
		Battery Life	over 72 hours
Color	16 colors	Upgrade	Magnets, Suction Cups
Function	Flash, Fade, Smooth		

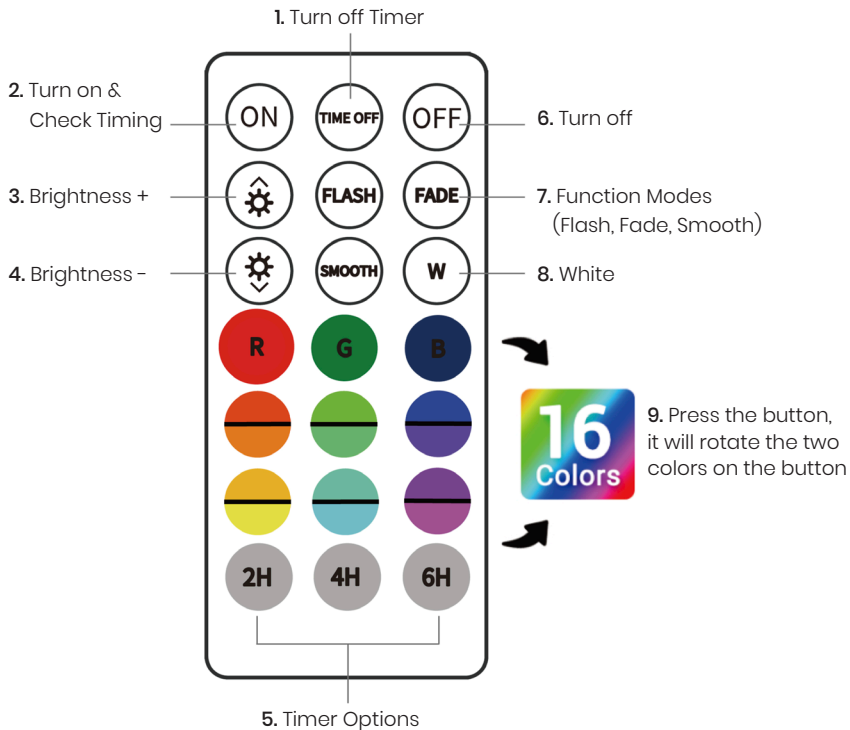

LED23

Timer Option Buttons

- 1. "2H hour"**
(ON for 2 hours, OFF for 22 hours.)
Step: Press the 2H button - the light ARE NOW SET 2 hours. They will automatically turn OFF after 2 hours. The lights will automatically turn ON in 22 hours and stay ON for 2 hours. The cycle will repeat every 24 hours (until the "Timer OFF" button is Pushed)
- 2. Other timer options**
"4H": ON for 4 hours, OFF for 20 hours;
"6H": ON for 6 hours, OFF for 18 hours;
"TIME OFF": When the timer is on the indicator light will stay on. To turn OFF the timer, push the "Timer OFF" button and the indicator light will turn off.

CLOSING THE LIGHT DISC

- 1.** Do not remove the seal rings. Make sure the seal rings are in the correct position.



- 2.** Tighten the 2 halves by holding the base and turning the top clockwise until it is tight.
3. Please keep the remote control away from water, because it is not waterproof, water will make it stop working.
4. Avoid looking directly at the bulb when starting.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Responsible Party- U.S. Contact Information:
Company: HOME DEPOT INC
Address: 2455 PACES FERRY ROAD ATLANTA, GA 30339
Customer service toll-free Number : For Home Accents Holiday call 1-855-HDHoliday (1-855-434-6543)

BATTERY INSTALLATION:

- Carefully remove the remote from the packaging.
- Remove the slide plate located on the back of the remote control.
- Insert 1 x CR2025 battery by aligning the appropriate (+/-) markings accordingly. (Battery included)
- Replace the slide plate on the back of the remote control.

CAUTION:

- Do not operate this product while it is still in the packaging.
- Never mix old and new batteries (OR different types of batteries).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-MH, Ni-CD, etc.) batteries or equivalen.
- Battery is to be inserted with the correct polarity.
- Remote with 1 x CR2025 battery.
- Exhausted battery is to be removed from the battery holder.
- The supply terminals are not to be short circuited.
- Do not throw battery into fire.
- Battery should never be left in the product when not in use for long periods of time.
- Never allow any plastic part to come in contact with a source of heat or flame.
- This is not a toy. Keep out of the hands of small children.
- Risk of injury is associated with the ingestion of battery.
- Keep all new and used batteries out of the reach of children.
- Seek immediate medical attention if battery is ingested.

DISPOSAL AND RECYCLING:

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. This is applies to the battery also.

Battery

- 1.** Use 3 x AA batteries. We recommend using only alkaline batteries.
2. When not in use, remove the batteries from both the Disc Light and remote control. This will help prevent any damage to both.

Remote Control

- 1.** Before use, please remove the plastic protector from the bottom of the remote control.
2. The maximum remote range of the RF remote control is 100ft/30m.
When not in use, press the "OFF" button to power off.

Suction Cups & Mangnet

- 1.** Suction Cups can be used on a flat and smooth surface. (Please clean the surface before installation, make sure there is nothing between the surface and the suction cup.
(1) Magnets can be used on any ferromagnetic metal, like steel and iron, the magent strength is 5000 Gauss.

Made in China
Printed in China
This is not a toy, for decorative use only.

DISTRIBUTED BY HOME DEPOT U.S.A., INC. 2455
PACES FERRY RD., N.W. Atlanta, GA 30339 All rights reserved.

16"