



INVA-S Bluetooth Earbuds

USER MANUAL

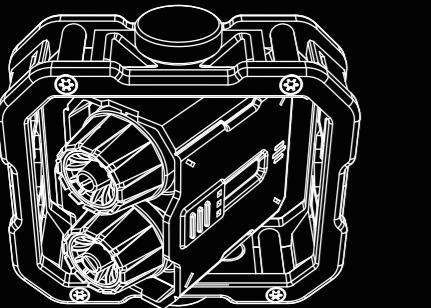

In the Box: Earbuds / Charging Case / Protecting bag / Earbud tips / Charging cable / User manual

[DO NOT PUT THE PRODUCT IN THE FIRE OR HIGH TEMPERATURE ENVIRONMENT AS THERE IS LI-ION BATTERY INSIDE]

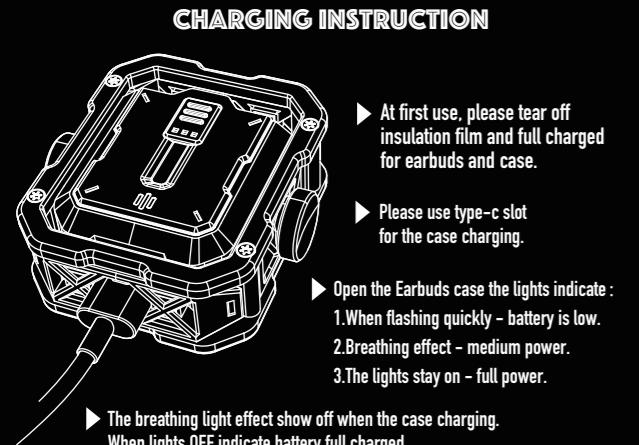

CHARGING INSTRUCTION

- At first use, please tear off insulation film and full charged for earbuds and case.
- Please use type-c slot for the case charging.

- Open the Earbuds case the lights indicate:
 - 1. When flashing quickly - battery is low.
 - 2. Breathing effect - medium power.
 - 3. The lights stay on - full power.
- The breathing light effect show off when the case charging. When lights OFF indicate battery full charged.
- Earbuds charging from charging case. The red light ON when charging and light OFF when full charged. When the earbuds battery low, the voice prompts "Low battery". While the red light flashing once every five seconds.


PRODUCT INTRODUCE

Earbuds

Product Model: YZ2103
Bluetooth Version: V5.3
Bluetooth Ranges: 10m
Noise Cancellation: ENC tech
Charging Time: 1.5-2hrs
Battery Capacity: 35mAh

Charging Case

Input: 5V=500mA
Output: 5V=200mA
Charging Time: 2hrs
Battery Type: Li-polymer
Battery Capacity: 220mAh
Type Slot: Type-C

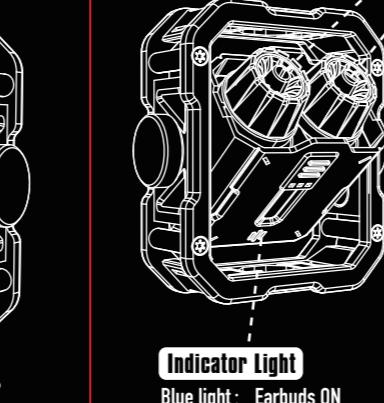

PRODUCT INTRODUCE

< Please tear off insulating film before using >

ON/OFF Bottom

Hold for 5 seconds to forced ON/OFF

Earbuds Charging

The earbuds put back charging case. Red light ON for Charging. If not, pls adjust the earbuds and make sure it is charged.


Revolving Charging Case

Push the middle charging case will turn on earbuds and connected automatically. Earbuds will connected device which connected before. Turn back the case, earbuds disconnected.

Indicator Light


Blue light: Earbuds ON
Red light: Charging case in charging and off for full charged

PRODUCT INTRODUCE

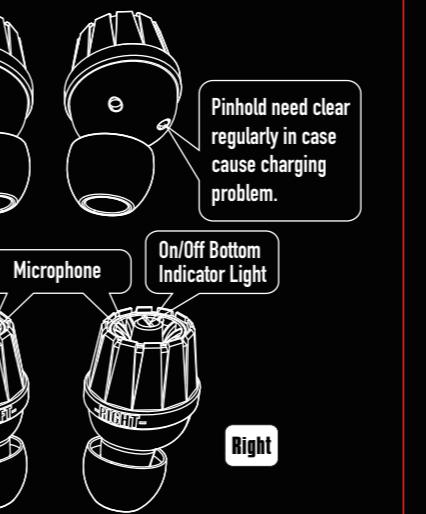

Pinhold need clear regularly in case cause charging problem.

FUNCTION DESCRIPTION

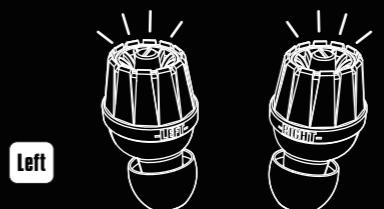

Left

- Play/Pause Answer/hang up the phone **Press once**
- Last song **Press Twice**
- Call Siri **Press Three Times**
- Switch Chinese/English **Press Four Times**
- Transparency/Music mode **Hold for 1.5second**

Right



- Play/Pause Answer/hang up the phone **Press once**
- Next Song **Press Twice**
- Call Siri **Press Three Times**
- Switch Chinese/English **Press Four Times**
- Transparency/Music mode **Hold for 1.5second**

WARNING METHOD

► Take out the earbuds from charging case and put in ear canals gently, adjust the earbuds perfectly fit your ear canal and not more shake. If not successful, pls try another size of earbuds tips.




► Please pay attention to the microphone hole when answering a phone call, if cover by hand or anything will affect voice quality.

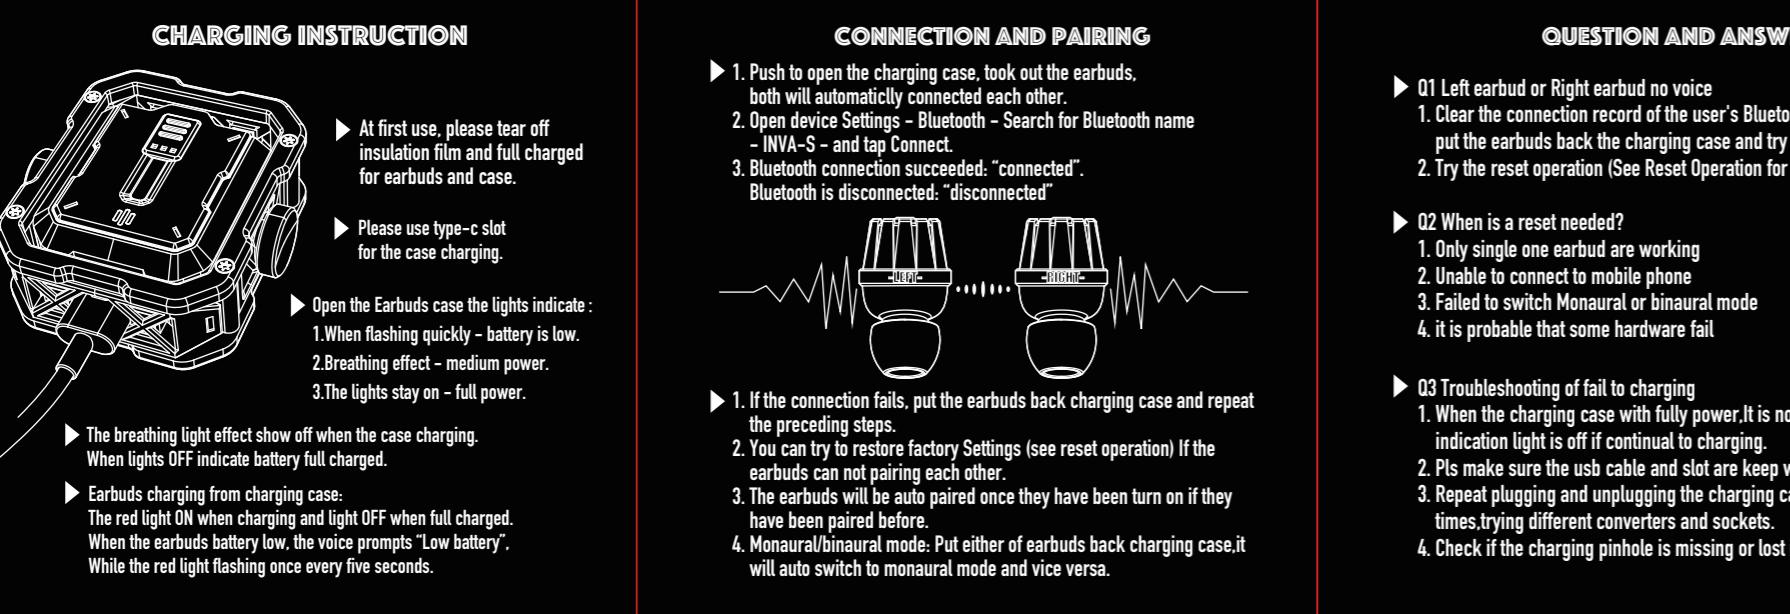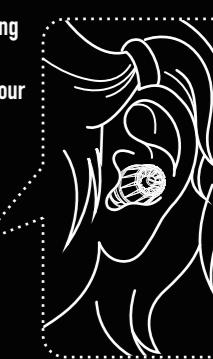

CONNECTION AND PAIRING

- 1. Push to open the charging case, took out the earbuds, both will automatically connected each other.
- 2. Open device Settings - Bluetooth - Search for Bluetooth name - INVA-S - and tap Connect.
- 3. Bluetooth connection succeeded: "connected". Bluetooth is disconnected: "disconnected"

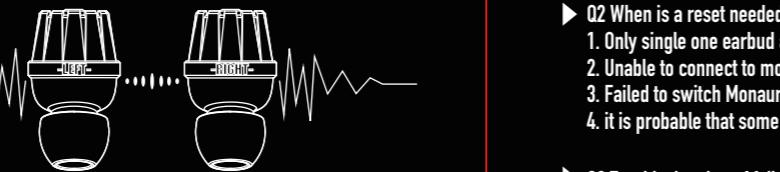

- 1. If the connection fails, put the earbuds back charging case and repeat the preceding steps.
- 2. You can try to restore factory Settings (see reset operation) If the earbuds can not pairing each other.
- 3. The earbuds will be auto paired once they have been turn on if they have been paired before.
- 4. Monaural/binaural mode: Put either of earbuds back charging case, it will auto switch to monaural mode and vice versa.

QUESTION AND ANSWER

- Q1 Left earbud or Right earbud no voice
 1. Clear the connection record of the user's Bluetooth device, put the earbuds back the charging case and try pair it again.
 2. Try the reset operation (See Reset Operation for details)

- Q2 When is a reset needed?
 1. Only single one earbud are working
 2. Unable to connect to mobile phone
 3. Failed to switch Monaural or binaural mode
 4. It is probable that some hardware fail

- Q3 Troubleshooting of fail to charging
 1. When the charging case with fully power. It is normal that the indication light is off if continual to charging.
 2. Pls make sure the usb cable and slot are keep working.
 3. Repeat plugging and unplugging the charging cable several times, trying different converters and sockets.
 4. Check if the charging pinhole is missing or lost its elasticity.

RESET OPERATION

1. Turn on charging case, hold earbuds button for 10 seconds and release when you heard the prompt tone of power off, and the indicator light goes off.
2. Press again and release it you heard the prompt tone of power on, and indicator light goes on.
3. Take out the earbuds and pair with bluetooth device. If the connection fails, repeat the preceding steps.

PRODUCT CARE

1. Do not disassemble, repair or modify the product for any reason, otherwise it may cause danger or even completely damage the product.
2. Do not put the product in an environment where the temperature is too low or too high.
3. Please keep product in a dry environment, and do not close to the fire source, which will affect the function of the product.

PRODUCT CARE

4. Do not use alcohol or other volatile liquids to clear the product.
5. Please read this user manual carefully before using the product.
6. Please full charged it if it's not used for a long time.
7. Chargers must be selected from regular manufacturers and certified by the national ccc.
8. It may be damage your hearing if using for a long time. Please control the use time and volume properly.
9. It may be damage your hearing if using for a long time. Please control the use time and volume properly.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.