

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any manner, when the power-supply cord or plug is damaged, liquid has been spilled on the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING:** Shock hazard - Do Not Open.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Do not ingest battery, chemical burn hazard.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Lithium batteries, all like rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.

 
 
 
 
 



Diagram illustrating the components of the SoundBar system:

- SoundBar
- User manual
- Remote Control
- Stereo RCA to 3.5mm audio cable
- Power adapter
- Subwoofer

Speakers	Full-Range Driver: 45°66mm*4
	Bass: 6.5 Inch*1
Power	100W RMS
Frequency	35Hz-20KHz
Separation	45dB
S/N Ratio	≥70dB
Interface	HDMI(ARC), BT, COX, OPT, AUX, USB
Input Voltage	Soundbar DC 15V ± 2A
	Subwoofer AC 100V-240V 50/60Hz

1. Ports

 - 1 **ARC:** Using the HDMI cable, connect the HDMI(ARC) connector on the sound bar to the HDMI ARC connector on the TV.
- 2 **USB:** Automatically identifies and plays tracks from a storage device.
- 3 **AUX:** Connect to the RCA jack of the source device using a 3.5 to RCA cable.
- 4 **OPT:** Connect to the OPT OUT jack of the source device using a optical cable.
- 5 **COX:** Connect to the COX OUT jack of the source device using a coaxial cable.
- 6 **Power:** Connect to 100~240V power supply.

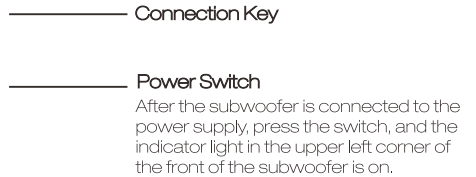

U 30

Audio input: Select the audio source to input through touch screen or remote control, the corresponding icon will light up once this audio source enter successful.

ARC: ARC input (your device must support HDMI ARC output)

BT: Bluetooth input

AUX: Stereo aux input

OPT: Digital optical input

COX: Coaxial input

USB: USB input, the playback time will display on volume area

Volume: The volume level can be set between 1 and 30, 18~20 is advisable. The screen will show volume for 3s, and then back to audio.

④ Press to adjust the volume up or down

③ Press to adjust the volume up or down

① ON/OFF

② Input selection

① ON/OFF: Press to Switch to 3s to turn on/off.

② Input selection: Press to select an input: "BT/AUX/OPT/COX/ARC/USB" icons will light up if the corresponding audio source is connected. And long press the button the enter a mode for pairing with the wireless subwoofer.

1. Press and the rear cover to open the battery compartment.
2. Insert 2 x AAA size batteries (Included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends as indicated.
3. Close the battery compartment accordingly.

	Power: Press to switch the unit on
	Mute: Press to mute the volume
AUX	AUX: Press to switch to AUX mode
COX	COX: Press to switch to COXIAL mode
OPT	OPT: Press to switch to OPTICAL mode
HDMI (ARC)	HDMI(ARC): Press to switch to HDMI(ARC) mode
USB	USB: Press to switch to USB mode
BT	BT: Press to switch to Bluetooth mode
VOL +/-	VOLUME +/-: Press to adjust the volume up or down
 	Skip: In Bluetooth/USB mode, Press to skip for ward or back one track
	Play/Pause: In Bluetooth/USB mode, Press to skip play or pause a track
RST	RST: Press this button back to initiate setting
PAIR	PAIR: long press this button to Disconnect the paired BT device under Bluetooth Mode; pair wireless subwoofer under other mode
TREBLE +/-	TREBLE +/-: Press to adjust the treble up or down
BASS +/-	BASS +/-: Press to adjust the bass up or down
MUSIC	MUSIC: Press to switch to the EQ optimized for MUSIC
MOVIE	MOVIE: Press to switch to the EQ optimized for MOVIE
NEWS	NEWS: Press to switch to the EQ optimized for NEWS
3 D	3D: Press to switch to the EQ optimized for 3D

Plug into the power supply, the display screen will show "-" which means the soundbar is standby mode (do not turn on until audio connection completed).

There are five ways to connect the soundbar and the audio source: AUX, OPT, COX, USB, HDMI(ARC). Select one according to the device you are trying to connect, the corresponding icon will light up once this audio source enter successful.

1. The default audio output mode of most TVs is self-contained speaker, so after connect this soundbar with your TV by OPT, COX, ARC, please set the TV audio output mode manually according to the audio cable connect with the soundbar.
2. If you choose HDMI(ARC) connection, please make sure your TV or devices support the HDMI ARC feature.
TV's HDMI ARC is disabled by default, so please set TV for ARC mode. HDMI ARC port and mode on TV may be differently, please check the TV user manual for details.
If your TV doesn't support HDMI ARC, you can use the optical audio cable (Not Included) to connect to the optical port on your TV.

1. Turn on the device, touch the icon on the control panel or press the button on the remote control, the "BT" icon will flash slowly on the screen indicating the soundbar has entered pairing mode.
2. Search for "**S-900X**" on your bluetooth device and then pair to the soundbar. The BT icon will illuminate, and the soundbar will make an audible beep to indicate the connection is complete.

1. If your device asks for a password during the pairing process, please use "0000"
2. If you can't find or pair to this bluetooth, turn off the soundbar, then 5s later turn it on and try to connect by following the instructions above.
3. The soundbar can only pair to one device at a time, if you can't pair your device, please check that no other device is already paired with the soundbar. A previously paired device will automatically reconnect.
4. Bluetooth connection range is 10 m, but it will be shorter by some causes-radio interference such as WiFi routers, induction cookers and smart air cleaners; too much bluetooth your device paired and reserved.

To save power and extend the working time of the speaker, it will automatically switch to Standby mode if there is no input signal for over 15 minutes, and will turn back on then an input signal is detected.

Part Name	Toxic or harmful substances or elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Diphenyl (PBB)	Polybrominated Diphenyl Ether (PBDE)
PCB part	X	O	O	O	O	O
Plastic part	O	O	O	O	O	O
Metal part	X	O	O	O	O	O
Speaker	O	O	O	O	O	O
Power adapter	X	O	O	O	O	O

This form was prepared in accordance with the provisions of SJ/T 11364.

O :Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in accordance with the GB/T 26572.

X :Indicates that the content of the hazardous substance in all homogeneous materials of the part is exceeding the limit requirement specified in accordance with the GB/T 26572. There is no mature alternative solution that meets the requirements of RoHS.

The numbers in this mark indicate that the environmental protection use period of the product under normal use is 10 years. Some components may also have an environmental protection use period indication, and the environmental protection use period is subject to the figures in the indication. Due to different product models, the product may not include all the above parts except the host, please refer to the product packaging.

Only suitable for areas below altitude of 2000m.

Only for use in non-tropical climates.

Please read all instructions before first use.
Keep this manual in a safe place for future reference.