

## **Antenna Kitting Information**

- (1)Usage of unauthorized antennas, cables, and/or coupling devices may result in poor effect and, in severe cases, equipment damage.
- (2)a complete list of authorized antennas, cables, and/or coupling devices:
- (3)the default antenna, cable, and/or coupling device that are shipped with the booster  
Log-periodic Antenna, Panel Antenna and Coaxial Cable.
- (4)The antenna is equipped with a U-shaped mounting bracket. The log-periodic antenna should be installed in a place with good outdoor signal. The panel antenna should be installed indoors and near the main device. If the amplification effect is not good after the installation is completed, the direction of the log-periodic antenna can be gradually adjusted to achieve better effect.

| Name               |  | Model           | Gain/Loss                                  | Photo   |
|--------------------|--|-----------------|--|---|
| Indoor<br>Antenna  | Panel Antenna<br>(default)                             | IBG-8NK-80/250  | 5dbi @824-894MHz<br>5dbi @1850-1990MHz     |    |
|                    | Ceiling Antenna  | IXD-3NK-80/250  | 3.5dbi @824-894MHz<br>3.5dbi @1850-1990MHz |    |
| Outdoor<br>Antenna | Log-periodic<br>Antenna<br>(default)                   | ODS-10NK-80/250 | 5dbi @824-894MHz<br>5dbi @1850-1990MHz     |    |
|                    | Yagi Antenna   | OBM-5NK-82/96   | 3dbi @824-894MHz<br>3dbi @1850-1990MHz     |   |
| cable              | Coaxial cable<br>with N male<br>cennector<br>(default) | PTE-3D-FB-5NB   | 3dbi @824-894MHz<br>3dbi @1850-1990MHz     |  |