

COMBIER

SMART TOILET SEAT
USER'S MANUAL
Please read this instruction carefully before using

Model CMA102 / CMA102S-B / CMA105 / CMA105S

North American Version 2021.10-1

3 Installation ways

Precaution before installation

1.Ensure that the water pressure range of the inlet is between 0.05-0.75Mpa.
2.Be sure to use the original accessories and consumables.
3.Please do not switch on the power until the installation is completed to avoid failure.

Method of mounting base

1.Draw the mounting base from the machine.

2.Install the accessories as shown in the diagram.

Screw

Gasket

Steel disc

Mounting base

Anchoring rubber

4

1 Components

CMA102

CMA102S-B

CMA105

CMA105S

1

Lid

Water inlet

Warm air

Posterior wash

Skin sensor

Warm seat

Feminine wash

Anion

Side panel

2

2 Accessories

A

B

C

D

E

F

	Name	Quota
A	Three-way valve	1 PCS
B	PE pipe	1 PCS
C	Screw	2 PCS

	Name	Quota
D	Steel disc	2 PCS
E	Anchoring rubber	2 PCS
F	Gasket	2 PCS

3

Connection of external water pipes

Water tank

PE pipe

Three-way valve

Main unit

1

2

3

4

5

6

1

2

3

4

5

6

5

4 Installation and removal

1.Push with two hands when install the machine onto the toilet, and make sure the installation is in place.

2.Pull outward with two hands when separate the machine from the toilet.

6

CMA102

CMA105

STOP

CLEANING

BIDET

DRY

AUTO

HI

WATER-DRY

LO

SAVE ELE

LIGHT

POWER

7

CMA102S-B

CMA105S

STOP

CLEANING

BIDET

DRY

DEFECATION

AUTO

CHILDREN

POSITION

PRESSURE

AIR TEMP

WATER TEMP

SEAT TEMP

POWER

LIGHT

SAVE ELE

INTELLIGENT TOILET REMOTE CONTROL

8

5 Operation (detailed)

Preparation

1.When you sit on the unit, please sit down on the central position in order to activate the sensor.
2.When you sit down on the seat, the buzzer will end with One Solid Beep. You can use it normally.
3.When the unit is occupied the deodorizer will start working automatically.

CLEANSING

1.CLEANSING 1. (CLEANING)

2.CLEANSING 2. (BIDET)

3.CLEANSING (Model CMA102S-B/CMA105S) 3. (DEFECATION)

4.CLEANSING 4.

9

NOZZLE POSITION ADJUSTMENT

Position is adjustable to the desired position by pressing " POSITION " () button.

WATER PRESSURE ADJUSTMENT

Press " WATER pressure-high & Low button" (H/LLO) to adjust the water pressure.

WARM AIR DRYER

1.WARM AIR DRYER 1. (DRY)

2.WARM AIR ADJUSTMENT 2. (AIR TEMP)

CHILDREN

For child use , press " CHILDREN " () buttonfirst, nozzle position water pressure and seat temperature will be adjusted.

AUTO

Press " AUTO " () this button to start the automatic cleaning, which automatically running by the sequence of " cleaning-massage-dry-stop"

10

WATER TEMP ADJUSTMENT (Model CMA102S-B/CMA105S)

Press "WATERTEMP-high & Low button " () to adjust the temperature of water.

(Level1~3)

AIR TEMP ADJUSTMENT (Model CMA102S-B/CMA105S)

Press " AIR TEMP " ()-high & Low button to Adjust the warm air temperature, The dryer automatically stop in 3minutes.

(Level1~3)

SEAT TEMP ADJUSTMENT (Model CMA102S-B/CMA105S)

The temperature of seat can be adjusted to the desired level by () button

(Level1~3)

11

LIGHT

Press " LIGHT " () this button to turn on / off the night light.

SAVE ELE

Press " SAVE ELE " () the button to save electricity, Press again to recover to theoriginal state.

STOP

Press" STOP " ()this button to stop all operations.

POWER

It refers to the power switch.

BUZZER SOUND

Press the "POWER"button to turn off, then press the "STOP" button hear a "beep", you can set the buzzer sound to be off or on.

SENSOR

In the boot state press the "STOP" button hear a "beep", you can set the sensor to off or on.

12

6 Pilot run

Tips : the spraying time will be delayed by 5-10 seconds for the first time using after installation which is normal phenomenon,not a fault.

For operation

1.Connect the power plug to the socket of 110V/220V voltage.At this time, the floodlight and water temperature light flash.
2.Turn on the water source, and the water temperature light flashes. After 30 seconds, the water temperature light stops flashing and stays on, indicating that the machine has completed the self-test.

Function confirm

1.infirm the functions accroding to the instructions.

13

7 Maintenance

A drainage when not in use for a long time

1.Please unplug the power supply

2.Turn off the water supply

3.Pull the machine outward from the toilet

4.Screw out the WATER SCREW(the positon indicated on the diagram) to drain the water

5.Tighten the WATER SCREW and replace the machine

Pull outward

External body cleaning method

1.Main surface should be wiped with sponge or soft dishcloth or the dishcloth with sticky neutral detergent.

2.Note: do not use diluent, light gasoline, detergent or chemical to wipe, do not use pesticides, aromatic agents, deodorant,etc.

14

8 Quick Guide Q & A

Q1

A1

Q2

A2

Q3

A3

15

Q4

A4

Q5

A5

Q6

A6

Q7

A7

Q8

A8

16

9 Maintenance

Please follow the safety information below

Please use the new pipe attached in the product

It away from wet place and avoid being showered

Self-disassembly or Self-repair are forbidden

Make sure the voltage is appropriate

Leaving water or detergent on the product or plug is forbidden, in case of accident or breakdown

Please use the plug-in whose load is over 1400W

In case of accident, do not touch the plug with wet hands

If the power line is damaged, please inform the manufacturer to renew it

Ensure the water is pure and clean

17

! WARNING

1.Don't use the lacquer thinner,gasoline,medicine,medicine,detergent or pesticide to clean this product.

2.Don't put any aromatic or medicine in water tank.

3.When sitting on this smart toilet for a long period of time,please regulate the seat temperature to the lower grade.

4.In case the product is electrified,but no water was supplied to it,don't place it upside down, otherwise it may result in troubles of heating pipe.

5.When the product is used by persons(including children)with body,sensory,mental deficiency, or lack of common sense,please pay your attention and prevent them from low temperature burning.

6.It's strictly prohibited to step on the cover plate,seat ring,or operation panel,it's not very suitable for children to use it.

7.Cables and sockets used in the house must meet the requirements of national standards, all lines must be grounded reliably.It's strictly prohibited to use the patch board with two-hole or insufficient power to work as the extension line.

This product si prohibited in the high temperature or place in storage and use of flammable and explosive.

18

10 Self-trouble-removal \ Technical parameter

Troubles	Inspect ways	Solutions
Not activated	Water pressure	Insert the power plug into the socket
	Water pressure	Pull out the power plug from the socket and insert it again
No water or a little	Water pressure	Ensure the water supply
	Water pressure	Is working normally
Leakage of water	Inspect all the joint of pipes	Clean the nozzle by toothbrush
	Inspect all the joint of pipes	Back up all the joint of pipes
Cold water or cold seat	Check the states of product	Adjust the temp of water and seat to higher levels

Specifications	AC 110V 50Hz 1500W	
Water supply	Way Connect to water pipe (0.5-0.75Mpa)	
Cleaning	Water pressure	0.05-0.75Mpa
	Water pressure	0.05-0.75Mpa
Heater	Water pressure	0.05-0.75Mpa
	Water pressure	0.05-0.75Mpa
Warm air dry	Water pressure	0.05-0.75Mpa
	Water pressure	0.05-0.75Mpa
Leakage of water	Water pressure	0.05-0.75Mpa
	Water pressure	0.05-0.75Mpa
Cold water or cold seat	Water pressure	0.05-0.75Mpa
	Water pressure	0.05-0.75Mpa

19

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.