

尺寸:70\*100mm

T7

复古收音机蓝牙音箱

 



使用说明书

规格及参数

|      |              |      |              |
|------|--------------|------|--------------|
| 产品型号 | T7           | 输入电源 | Type-C 5V/1A |
| 蓝牙版本 | 5.1          | 频响范围 | 60Hz-18KHz   |
| 蓝牙范围 | 18M(无阻隔)     | 喇叭规格 | 2*52mm       |
| 喇叭功率 | 2*10W        | 播放时间 | ≥10H         |
| 电池容量 | 3.7V/2400mAh | 充电时长 | ≤4H          |

配件

AUX 音频线\*1

 Type-C线\*1

连接及播放

●蓝牙模式

长按开关开机, 开机后, 音箱发出开机提示音, 彩灯慢闪, 音箱进入蓝牙待配对状态; 打开手机蓝牙并找到蓝牙名“T7”点击连接; 连接成功彩灯快闪两下。

●免提通话

支持蓝牙免提通话功能。蓝牙听音乐时可接听电话, 挂断电话后继续播放音乐, 短按暂停键接听/挂断电话, 双击重拨上一个电话。

●TWS互联

两台“T7”近距离下同时进入蓝牙待配对状态(确保蓝牙已断开其他设备); 选择其中一台为主音箱并长按其“M”键2秒, 进入TWS两台互连播放模式; 打开蓝牙, 找到蓝牙名“T7”点击连接。

●AUX模式

将AUX线分别插入手机和音箱, 连接成功彩灯快闪两下。

●TF卡/U盘模式

开机蓝牙模式下插入TF-卡或U盘自动进入TF卡或U盘播放, 如果音箱插有TF卡或U盘, 开机后则直接进入TF卡或U盘播放模式。

 
●FM模式

短按“M”键, 进入FM收音模式, 旋钮手动搜台。


●充电模式

将Type-C线插入音箱连接5V充电器或电脑即可对音箱内置电池充电; 充电时指示灯红灯亮, 充满后红灯灭。


按键功能图示

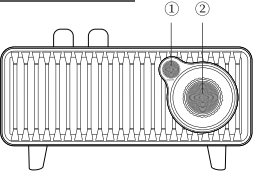

① 开关机/灯光开关  
② 旋转搜索电台

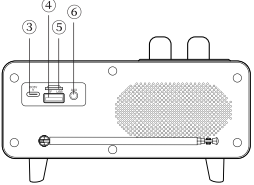 

③ 充电口  
④ U盘插口  
⑤ TF卡插口  
⑥ AUX音频线插口

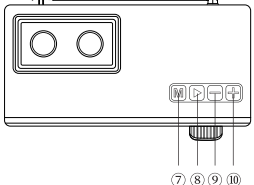 

⑦ 模式切换/TWS互联  
⑧ 播放/暂停; 接听/挂断  
⑨ 长按上一曲; 短按减音量  
⑩ 长按下一曲; 短按加音量

按键

功能

功能操作

开/关机

长按“POWER”键3秒开机, 音箱自动进入蓝牙模式搜索状态; 开机状态下, 长按“POWER”键3秒, 关闭蓝牙音箱。

灯光开关

短按关闭/打开彩灯

模式切换/TWS互连

短按一下“MODE”键可以切换蓝牙/U盘/TF/AUX/FM等工作模式。两台开机状态下, 默认为蓝牙模式, 长按其中一台2秒“MODE”键可以进入TWS两台互连播放模式

播放/暂停  
接听/挂断

在蓝牙/TF/U盘/AUX播放状态下短按一下“PLAY/PAUSE”键, 暂停播放。有电话呼入短按一下“PLAY/PAUSE”键, 可以接听电话。

减音量/  
上一曲

短按“V-/Next”键, 音量减小。  
长按“V-/Prev”键, 切换到上一首歌曲。

加音量/  
下一曲

短按“V+/Next”键, 音量增大。  
长按“V+/Next”键, 切换到下一首歌曲。

搜索电台

旋转旋钮手动搜索电台

温馨提示

1. 当机器超过3个月未使用时, 需要给机器充电后再使用;  
2. 长期不使用时, 建议每3个月为机器充一次电, 能更有效的保护电池的使用;  
3. 建议收到机器充满电后使用。

保修卡

尊敬的客户, 感谢您购买本公司的产品。为了能更好的为您服务, 在购买产品后, 请您认真阅读并妥善保管此保修卡。

保修说明

1. 本保修卡请用户妥善保管, 以做维修凭证  
2. 本产品自购买日起, 保修一年  
3. 保修设备在保修期内, 在正常使用和维护的情况下, 机器本身机件材料及工艺出现问题, 发生故障, 经查属实本公司将免费提供维修服务。  
4. 在保修期间, 如发生以下事项, 本公司有权拒绝服务或酌情收取材料、服务费  
(1) 不能提供此保修卡及有效购买凭证  
(2) 用户使用不当所造成的产品故障及损坏  
(3) 人为的非正常外力损坏  
(4) 非我司授权的维修服务者拆修造成的损坏  
(5) 自然灾害或其它不可抗力因素造成故障或损坏  
(6) 其他人为故意损坏  
5. 本公司保留对所有内容的修改权及解释权

产品信息

|      |    |           |
|------|----|-----------|
| 维修记录 | 日期 | 故障原因及处理情况 |
| 产品名称 |    |           |
| 产品型号 |    |           |
| 客户名称 |    |           |
| 客户电话 |    |           |
| 购买日期 |    |           |
| 客户地址 |    |           |

T7

bluetooth speaker





Manual

Parameter

|            |                 |               |              |
|------------|-----------------|---------------|--------------|
| Model      | T7              | Input         | Type-C 5V/1A |
| BT version | 5.1             | F.R           | 60Hz-18KHz   |
| BT range   | 18M(Open field) | Specification | 2*52mm       |
| Speaker    | 2*10W           | Play time     | ≥10H         |
| Battery    | 3.7V/2400mAh    | Charging time | ≤4H          |

 Accessories

AUX cable\*1

 Type-C cable\*1

Connect and play

●BT wireless

Press and hold the switch to turn it on. After turning it on, the speaker emits a power-on prompt sound, the colored lights flash slowly, and the speaker enters the wireless pairing state; turn on the wireless of the mobile phone and find the wireless name "T7" and click to connect; if the connection is successful, the colored lights flash twice quickly.

●Handsfree call

Support wireless hands-free calling function. You can answer the call while listening to music on wireless, continue to play music after hanging up the call, short press the pause button to answer/hang up the call, and double-click to redial the last call.

●TWS Interconnection

Two "T7" are in the wireless pairing state at the same time at close range (make sure that the wireless is disconnected from other devices); select one of the main speakers and press and hold the "M" button for 2 seconds to enter the TWS two interconnected playback mode; Turn on wireless, find the Bluetooth name "T7" and click to connect.

●AUX mode

Plug the AUX cable into the mobile phone and the speaker respectively, and the lights flash twice quickly when the connection is successful.

●TF card/U disk mode

Insert TF-card or U disk into TF-card or U-disk when booting on wireless mode, it will automatically enter TF-card or U-disk playback.

 
●FM mode

Short press the "M" key to enter the FM radio mode, and turn the knob to manually search for stations.


●Charging mode

Plug the Type-C cable into the speaker and connect it to a 5V charger or computer to charge the built-in battery of the speaker; the indicator light is red when charging, and the red light is off when fully charged.


Button Function Icon

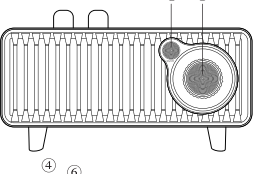

 ① Switch / Light Switch  
② Rotate to search for stations

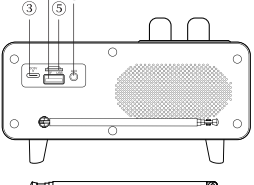

 ③ Charge port  
④ U disk socket  
⑤ TF card socket  
⑥ AUX audio cable jack

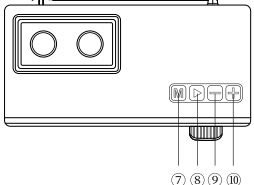

⑦ Mode switching/TWS interconnection  
⑧ Play/Pause;  
Answer/Hang up  
⑨ Long press the previous song; Short press to decrease volume  
⑩ Long press next song; Short press to increase volume

Button

Function

Functional operation

On/Off

Press and hold the "POWER" button for 3 seconds to turn on the speaker, and the speaker will automatically enter the wireless mode search state;  
In the power-on state, long press the "POWER" button for 3 seconds to turn off the wireless speaker.

Light switch

Short press to turn the lights off/on

Mode switching/TWS

Short press the "MODE" key to switch between Wireless/USB stick/TF/AUX/FM and other working modes. When the two sets are powered on, the default mode is wireless mode. Long press the "MODE" key for 2 seconds on one of the sets to enter the TWS two sets interconnection playing mode

Play/Pause  
Answer/end

In the Wireless/TF/U disk/AUX playback state, briefly press the "PLAY/PAUSE" button to pause the playback. When there is an incoming call, short press the "PLAY/PAUSE" button to answer the call.

Volume reduction/  
Previous song

Press the "V-/Next" key briefly to decrease the volume. Long press the "V-/Prev" key to switch to the previous song.

volume up/  
next track

Press the "V+/Next" key briefly to increase the volume. Long press the "V+/Next" key to switch to the next song.

Search station

Turn the knob to manually search for a station

Kind reminder

1. When the machine has not been used for more than 3 months, the machine needs to be charged before use;  
2. When not in use for a long time, it is recommended to charge the machine once every 3 months, which can more effectively protect the battery;  
3. It is recommended to use the machine after it is fully charged.

Warranty Card

Dear customer, thank you for purchasing our products. In order to better serve you, after purchasing the product, please read carefully and keep this warranty card carefully

Warranty description

1. Please keep this warranty card properly for maintenance certificate  
2. This product is warranted for one year from the date of purchase  
3. Warranty equipment during the warranty period, in the state of normal use and maintenance, there are problems and failures in machine materials and processes. Upon verification, we will provide repair services free of charge  
4. During the warranty period, if the following events occur, the company has the right to refuse service or collect materials and service fees according to the situation  
(1) Cannot provide this warranty card and valid proof of purchase  
(2) Product failure and damage caused by improper use by users  
(3) Man-made abnormal external force damage  
(4) Damage caused by disassembly by maintenance service personnel not authorized by our company  
(5) Failure or damage caused by natural disasters or other force majeure factors  
(6) Others intentionally damaged  
5. Our company reserves the right to modify and explain all content

Product information

|                     |      |                                |
|---------------------|------|--------------------------------|
| Maintenance records | Date | Cause and treatment of failure |
| Product name        |      |                                |
| Product model       |      |                                |
| Customer name       |      |                                |
| Customer phone      |      |                                |
| Purchase date       |      |                                |
| Customer address    |      |                                |

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.