

## X1S-Golf

便携式音箱



# 使用手册

## X1S-Golf

Portable speaker




# Manual

### 规格及参数

产品型号 X1S-Golf	输入电源 Type-C 5V/2A
蓝牙版本 5.3	响应频率 115Hz~15KHz
蓝牙范围 ≥18M (无障碍)	失真度 ≤1%
喇叭规格 φ58MM 15W*1	播放时间 ≥12H
电池容量 3.7V/2500mAh	充电时长 ≤3H

### 配件

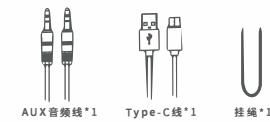

### 连接及播放

- 蓝牙**  
开机后蓝色指示灯闪，音箱进入蓝牙待配对状态；打开手机蓝牙并找到蓝牙名“X1S-Golf”点击连接，连接成功后蓝色指示灯快闪。
- TWS互联**  
音箱“X1S-Golf”近距离下同时进入蓝牙待配对状态（确保蓝牙已断开其他设备），选择其中一设备为主音箱并双击其“”键，此时主音箱黄色指示灯快闪，进入TWS自动配对；  
当主音箱黄灯快亮且蓝灯快闪，副音箱黄灯长亮，则TWS配对成功；  
找到蓝牙名“X1S-Golf”点击连接，连接成功后主音箱蓝灯慢闪。
- AUX音频线**  
将AUX线分别插入手机和音箱，连接成功则蓝色指示灯慢闪。
- Type-C线（支持边冲边放）**  
将Type-C线分别插入电脑和音箱，连接成功则蓝色指示灯长亮。
- TF卡（最高支持64G）**  
将TF卡插入音箱后，音箱自动读卡并播放卡中歌曲，此时蓝色指示灯慢闪；  
TF卡支持APE/FLAC/WAV/WMP3格式播放

### 按键及功能

- ①电源开/关机/TWS
- ②播放/暂停；接听/挂断
- ③音量减/上一曲
- ④音量加/下一曲
- ⑤充电端口
- ⑥TF卡槽
- ⑦AUX音频输入

按键	操作	功能说明
短按	模式切换。	
长按	开/关机：长按1S/3S； 复位：长按8S。	
双击	进入/断开TWS；断开蓝牙	
短按	播放/暂停；音乐播放状态下短按； 接听电话：来电状态下短按； 挂断电话：电话状态下短按； 未果重播：蓝牙已配对状态下快速双击。	
长按	拒接来电：长按2S。	
短按	音量减，共16级	
长按	上一曲：长按2S	
短按	音量加，共16级	
长按	下一曲：长按2S	

### 三包服务

依据《中华人民共和国消费者权益保护法》、《中华人民共和国产品质量法》实行售后三包服务，服务内容如下：

1. 自您签收次日起7日内，本产品出现《音箱性能故障表》所列性能故障的情况，经由检测确定，可免费享受退货或换货服务；
2. 自您签收次日起8日-15日内，本产品出现《音箱性能故障表》所列性能故障的情况，经由售后服务中心检测确定，可免费享受换货或维修服务；
3. 自您签收次日起12个月内，本产品出现《音箱性能故障表》所列性能故障的情况，经由售后服务中心检测确定，可免费享受维修服务。

### 音箱性能故障表

1. 电源无法充电，或充电后无法正常开机；
2. 按键无法正常使用；
3. 播放无法正常发出声音；
4. 其他部件故障导致的设备功能无法正常使用。

以下情况不属于三包范围：

- 1.未经授权的维修、误用、碰撞、疏忽、滥用、进液、事故、改动；
- 2.不正确的使用本产品配件，误拆毁、涂改贴标；
- 3.已超过三包有效期；
- 4.火灾、水灾、雷击等不可抗力造成的损坏；
- 5.不符合《音箱性能故障表》所列性能故障的情况；
- 6.因为原因导致本产品及其配件产生《音箱性能故障表》所列性能故障。

### 安全事项

为确保安全,请先详细阅读及遵守以下安全提示:

- 1.设备符合标准：GB 4943.1-2022；
- 2.此产品不能服用,请放置于儿童拿取不到的地方以防意外；
- 3.请勿将机器放置在高温环境,包括太阳直射；
- 4.请勿将机器放置在靠近火灾或其他过热环境；
- 5.请勿将机器放置于潮湿或温度太大的地方；
- 6.除了所提供的充电线以外,请勿试图用其他的方法为机器充电；
- 7.请勿将机器拆开,禁止企图修理,改造机器的任何行为；

8.请注意跌落、撞击、损伤或其他影响机器功能的行为,如果有任何损坏,如发烫、高温变形或腐蚀等,请立即停止使用该产品设备；

9.

10.

11.

12.当机器超过3个月未使用时,需要给机器充电后再使用；

13.长期不使用时,建议每3个月为机器充一次电,能更有效的保护电池的使用；

14.建议收机器充满电后使用。

- 1.本保修卡请用户妥善保管,以做维修凭证
- 2.本产品自购买之日起,保修一年
- 3.保修设备在保修期内,在正常使用和维护的情况下,机器本身及机件材料及工艺出现问题,发生故障,经查属实,本公司将免费提供维修服务。
- 4.在保修期间,如发生以下事项,本公司有权拒绝服务或酌情收取材料、服务费
  - (1)未经授权使用此保修卡及有效质保凭证
  - (2)用户使用不当所造成的产品故障及损坏
  - (3)人为的非常外力损坏
  - (4)非授权的维修服务或维修服务者拆修造成的损坏
  - (5)自然灾害或其他不可抗力因素造成故障或损坏
  - (6)其他人为故意损坏
- 5.本公司保留对所有内容的修改权和解释权

## 保修卡

尊敬的客户,感谢您购买本公司产品。为了能更好的为您服务,在购买产品后,请您认真阅读并妥善保管此保修卡。

### 保修说明

1.本保修卡请用户妥善保管,以做维修凭证

2.本产品自购买之日起,保修一年

3.保修设备在保修期内,在正常使用和维护的情况下,机器本身及机件材料及工艺出现问题,发生故障,经查属实,本公司将免费提供维修服务。

4.在保修期间,如发生以下事项,本公司有权拒绝服务或酌情收取材料、服务费
 

- (1)未经授权使用此保修卡及有效质保凭证
- (2)用户使用不当所造成的产品故障及损坏
- (3)人为的非常外力损坏
- (4)非授权的维修服务或维修服务者拆修造成的损坏
- (5)自然灾害或其他不可抗力因素造成故障或损坏
- (6)其他人为故意损坏

5.本公司保留对所有内容的修改权和解释权


### 产品信息

维修记录	故障日期	故障原因及处理情况

### Parameter

Item X1S-Golf	Input power Type-C 5V/2A
BT version 5.3	F.R. 115Hz~15KHz
BT range ≥18M (Open Field)	Distortion ≤1%
Speaker φ58MM 15W*1	Playtime ≥12H

### Accessories

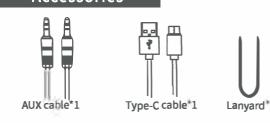

### Connect and play

- BT wireless**  
After booting, the blue light flashes quickly, and the speaker enters the BT pairing state. Turn on the mobile phone's BT and find the BT name “X1S-Golf”, then click to connect; the blue light will flash when the connection is successful.
- TWS Interconnection**  
When the X1S-Golf enters the BT pairing state, at the same time (make sure BT is disconnected from other devices) Select one of the main speakers and press the “” key. When the yellow light flashes quickly, the speaker's enter the TWS automatic connection. When the yellow light of the main speaker is on, and the blue light of the sub speaker is on, the TWS pairing is successful. Find the BT name “X1S-Golf” and click Connect; the main speaker's blue light will be on, and the connection is successful.
- AUX audio**  
Plug the AUX cable into the phone and speaker respectively. The blue light flashes slowly when connected successfully.
- Type-C cable (support fast charging while playing)**  
Plug the Type-C cable into the computer and speakers, and the blue and red lights will turn on after the connection is successful.
- TF card (up to 64G)**  
After the TF card is inserted into the speaker, the speaker automatically plays the song in the card, and the blue light flashes slowly at this time. TF card supports APE/FLAC/WAV/WMP3 format playback.

### BUTTON FUNCTION

- ①Power on/off/TWS
- ②play/pause; answer/hang up
- ③Volume down/previous track
- ④Volume up/next track
- ⑤charging port
- ⑥TF card slot
- ⑦AUX audio input

button	operate	Function Description
Short press	Mode switch	
Long press	Power on/off: long press 1S/3S; Reset: long press for 8S.	
Double Click	Enter/Disconnect TWS; Disconnect BT	
Short press	Play/Pause: Short press during playback; Incoming call: short press when incoming call; Hang up: short press in the call state; Number redial: Quick double-tap	
Long press	Reject a call: long press for 2S.	
Short press	Volume reduction, a total of 16 levels	
Long press	Previous song: long press 2S	
Short press	Volume plus, a total of 16 levels	
Long press	Next song: long press 2S	

### THREE GUARANTEES SERVICE

#### After-sales service content:

1. Within 7 days from the day you sign for the product, if there is a performance failure listed in the “ Speaker Performance Failure Table”, the product can be returned or exchanged for free; the failure is determined by testing.
2. Within 15 days from the day you sign for the product, if this product has a performance failure listed in the “ Speaker Performance Failure Table”, it will be determined by the after-sales service center, and you can enjoy free replacement or repair.
3. Within 12 months from the day you sign for the product, if there is a performance failure listed in the “ Speaker Performance Failure Table”, it will be determined by the after-sales service center, and you can enjoy free repair or replacement.

#### Speaker Performance Failure Table

1. The device cannot be charged, or cannot be turned on normally after charging.
2. The keys cannot be used normally
3. The device cannot be turned on normally after cleaning.
4. The device cannot be used normally due to other hardware failures

#### No Three Guarantees Service:

1. Unauthorized maintenance, misuse, collision, negligence, abuse, liquid ingress, damage to the machine.
2. The validity period of the three guarantees service has expired.
3. Damage caused by force majeure such as fire, flood, lightning strike, etc.
4. Damage caused by abnormal use.
5. Damage caused by the failure of the product or equipment.
6. Damage caused by the user's own reasons.

#### Failure to meet the three guarantees service conditions:

1. The equipment complies with the standard GB 4943.1-2022.
2. The product cannot be used, please keep it out of the reach of children to prevent accidents.
3. Do not place the machine in a high temperature environment, including direct sunlight.
4. Do not place the machine in a high humidity environment, including high humidity environments.
5. Do not place the machine in a humid or hot place.
6. In addition to the provided charging cable, please do not use other methods to charge the machine.
7. Do not disassemble the machine, and prohibit any attempt to repair or modify the machine.
8. Please pay attention to drops, impacts, scratches or other behaviors that affect the function of the machine. If there is an abnormality, such as hot, high temperature, abnormal noise, etc., please stop using the product and equipment immediately and contact the merchant.
9. If the machine produces abnormal odors, higher than normal temperature, and abnormal colors or shapes, please stop using the machine immediately and contact the merchant.
10. If the battery is incorrectly replaced, there is a risk of burning, and then the machine is damaged.
11. The equipment type or model can be modified or changed.
12. Using the machine at high volume for a long time may cause damage to your hearing.

### KIND REMINDER

1. When the machine has not been used for more than 3 months, the machine needs to be charged before use;
2. When not in use for a long time, it is recommended to charge the machine once every 3 months, which can more effectively protect the battery;
3. It is recommended to use the machine after it is fully charged.

Dear customer, thank you for purchasing our products. In order to better serve you, after purchasing the product, please read carefully and keep this warranty card carefully

### Warranty description

1. Please keep this warranty card for maintenance certificate
2. This product is warranted for one year from the date of purchase
3. Warranty equipment during the warranty period, if the state of normal use and maintenance, there are problems and failures in machine materials and processes. Upon verification, we will provide repair services free of charge
4. During the warranty period, if the following events occur, the company has the right to refuse service or collect materials and service fees according to the stipulation
  - (1) Cannot provide this warranty card and valid proof of purchase
  - (2) Product failure and damage caused by improper use by users
  - (3) Man-made damage or damage not caused by maintenance service personnel
  - (4) Damage caused by disassembly by maintenance service personnel not authorized by our company
  - (5) Failure or damage caused by natural disasters or other force majeure factors
  - (6) Other intentionally damaged
5. Our company reserves the right to modify and explain all content

### Product information

Maintenance Records	Date	Fault description

### Product Model

### Customer Name

### Customer Phone

### Purchase Date

### Shipping Address

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.