

ROSEMARY

Now, you can boldly explore your Moolitime. Thank you for joining Mooliworld and becoming a Mooligirl.

Support (US/CA): +1 (888) 354 1688

Email: support@mooligirl.com



User Manual

Product Name

Rosemary

Enjoy your Moolitime




Note: Colors may differ from the image

Customer Support:

support@mooligirl.com | +1 (888) 354 1688 (US/CA)

**Now, you can boldly explore
your Moolitime**

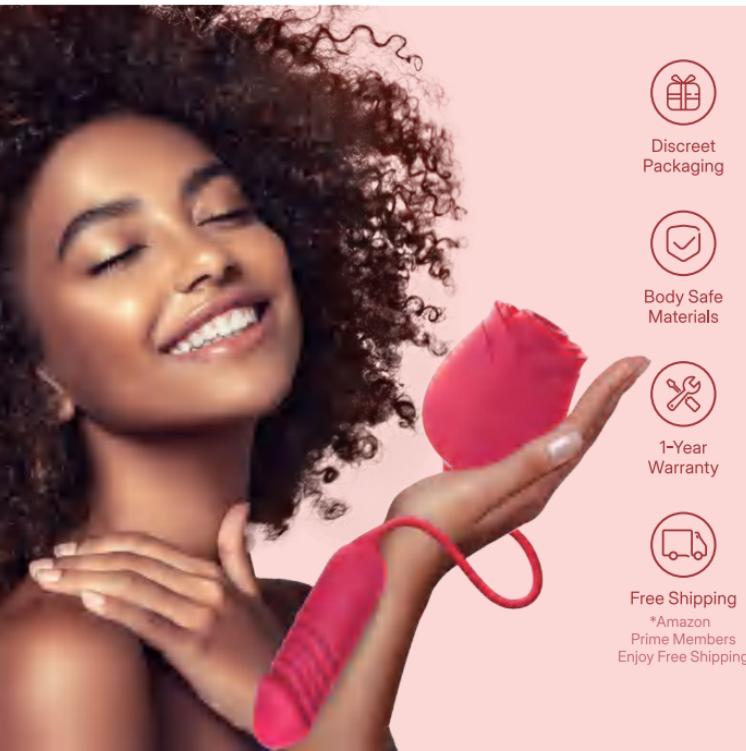

Discreet
Packaging



Body Safe
Materials



1-Year
Warranty




Free Shipping
*Amazon
Prime Members
Enjoy Free Shipping

Table of Contents

First-Time Use Checklist	1
Discover The JOYHUB App	3
How to Use	4
Connect with The JOYHUB App	5
App Features & Fun	6
Charging Instructions	7
Cleaning & Safety Tips	8
Usage Tips & Best Practices	9
Troubleshooting & Customer Support	11
Warranty & Brand Commitment	12


First-Time Use Checklist

Before you begin,
ensure you've done the following:

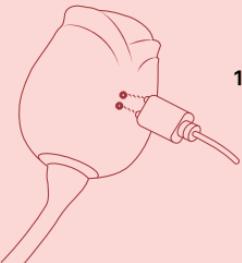

1. Fully charge the device

The indicator light flashes during charging and turns solid when full (approx. 2 hours).

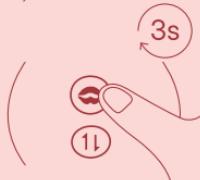

2. Press and hold power button for 3 seconds (Short presses won't work)

A quick press won't work —long press is required to turn on/off.

First-Time Use Checklist



3. Test both control sides

Sucking and thrusting functions operate independently.
Try both buttons.



4. Review safety precautions

Never use while charging. Avoid submersion in water.



5. Want advanced features?

Download the JOYHUB App to unlock remote play, music mode, and more (see next page).

Discover The JOYHUB App

**Unlock the full potential of your RoseFlexa Pro
with the JOYHUB App.**

Enjoy remote control, custom vibration patterns, and more.

↳ **Download now from the iOS App Store, or scan the QR code.**

(Full connection guide on page 5)



Just Two Steps



Now, you can boldly explore your Moolitime.

How to Use



Power/Suction Button

Long press (3s): Turn ON/OFF
Short press: Cycle through 10 sucking modes

Thrust Button (when power on)

Short press: Cycle through 10 thrusting + vibration combinations
Long press: Turn off thrust function

Charging Indicator Status

Flashing = Charging
Solid = Fully charged
Off = Device powered off

**Make sure to fully charge the toy before first use.*


If you have any questions, please contact us:

Toll-Free Support (US/CA): +1 (888) 354 1688 | Email: support@mooligirl.com

Connect with The JOYHUB App



Turn on the toy
(Press and hold the power button for 3 seconds until the light turns on).

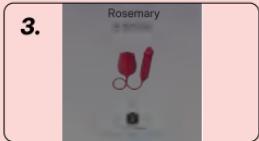

Pair the toy
The app will automatically detect the toy. If not, try restarting the toy or refreshing BT in the app.



Open the JOYHUB App
(Make sure wireless connection is enabled on your phone).



Start exploring
Once connected, enjoy multiple vibration modes, patterns, and remote control options.


Tips for successful connection:

- Fully charge the device before pairing
- Keep the toy powered ON during pairing

- Close and reopen the app if BT fails
- Restart your phone if needed

App Features & Fun

Elevate your RoseFlexa Pro experience with the JOYHUB app – your gateway to next-level pleasure.

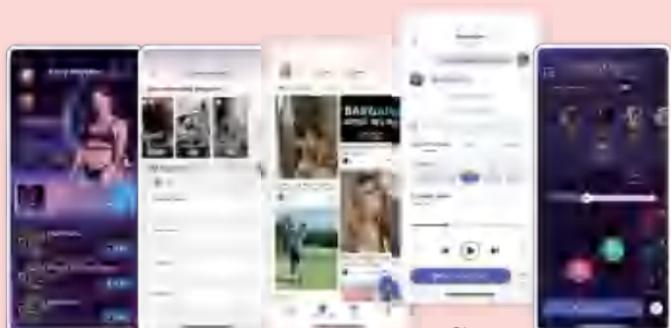

Toy games and rankings

Recommended programs and videos

Share and connect in JOYHUB

Chat freely

Mutual control in the room


Pro Tips:

- Explore these features in a private, comfortable space.
- Use JOYHUB to unwind, discover new pleasures, and join the Mooliworld.
- Note: Features are regularly updated – stay tuned for enhancements!

Charging Instructions

Warnings


- ⚠ Do not use the product while charging
- ⚠ Only use the included charging cable
- ⚠ Ensure the charging port is dry before connecting
- ⚠ Recommend using a standard charger

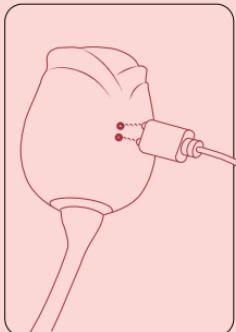

Charging Instructions

- Connect the USB cable to the charging port on the device.
- Plug the USB end into a power adapter or USB port.
- Charging takes approximately 120 minutes.
- While charging, the indicator light will flash.
- When fully charged, the light will stay on.

Cleaning & Safety Tips

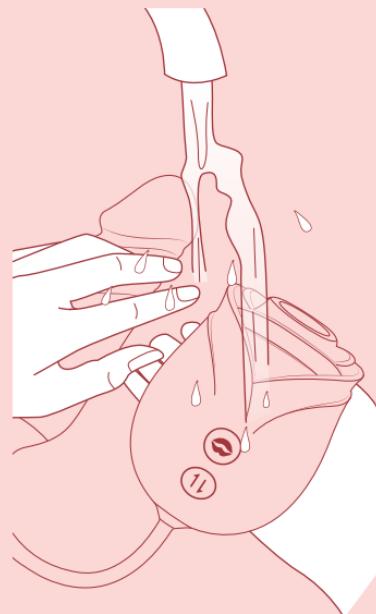

• Cleaning Instructions

- Clean the product before and after each use
- Use warm water and mild soap or a toy cleaner
- Avoid prolonged submersion to preserve product lifespan
- Dry thoroughly with a soft towel

• Safety Tips

- Do not use the product while charging
- Keep away from sharp objects or extreme temperatures
- Store in a cool, dry place
- This product is intended for personal use only

Usage Tips & Best Practices

To enjoy your Mooligirl product safely and comfortably, we recommend the following tips:

Set the mood



Create a relaxed, private environment. Use soft lighting or calming music.

Start gently



Begin with the lowest intensity settings. Apply water-based lubricant if needed.

Know your limits



Keep sessions to a comfortable duration. Pause immediately if you feel discomfort.

Enjoy your Moolitime



Take time to rest and relax afterward. This is your Moolitime.

Usage Tips & Best Practices

Please refer to the diagram for recommended areas of use for the toy:

Nipple / Breast



For Hotspots: Use the rose vibrator on nipples or breasts for foreplay fun.

Clitoral / Anus



For External Pleasure: Use the rose vibrator on your clitoris. It delivers deep, targeted stimulation to surrounding tissues.

Vagina / Anal



For Internal Sensations: Use the thrusting vibrator to massage your g-spot, a-spot and o-spot.

Double Pleasure



For Combo Play: Use the rose and thrusting vibrator together to enjoy double stimulation—inside and out.

Troubleshooting & Customer Support

Troubleshooting

The toy won't turn on or won't charge

Ensure it's fully charged with the original cable and hold the power button for at least 3 seconds. If still unresponsive, contact support.

Cannot connect to the app

Verify that wireless connection is enabled and the toy is powered on. If the connection fails, try uninstalling and reinstalling the app.

Weak vibration or tongue not working

Switch to a different mode or increase the intensity setting. If there's still no response, the product may be defective. Contact us for assistance.

Customer Support

We're here for you!
If you have any issues with the product,
our customer support is here to help — feel free to reach out anytime.

 Toll-Free Support (US/CA): +1 (888) 354 1688

 Email: support@mooligirl.com

Warranty & Support Commitment

Mooligirl supports everyone in discovering joy, releasing pressure, and embracing your own Moolitime. Your comfort and satisfaction mean everything to us.

Our Commitment

If your toy has a manufacturing defect within 12 months of purchase, we'll provide a free replacement or full refund.

Warranty Period

12-month replacement warranty

Warranty Coverage

Excludes damage from misuse, improper cleaning, or storage

Toll-Free Support (US/CA): +1 (888) 354 1688

Email: support@mooligirl.com



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.