

OSD OPERATION

SK 708

 
Statement: This document is reference manual,
please confirm with the specifically software if need translate or batch print.

Content


Setup Wizard	1
Home page	4
Settings	5
Media	9
Video	9
Audio	11
Image	11
Input	12
TV Setting	13
Picture	14
Sound	17
Channel	19
Common	22
Advance	24

Setup Wizard


The system setting will appear when you open the TV on the first time. Please set according to the on-screen guide. Press **OK** button to start the setup.

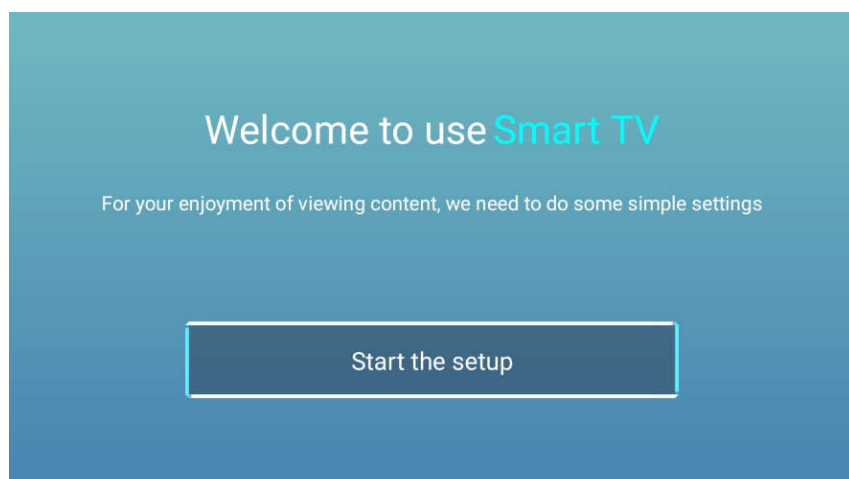

 
Press ▼ / ▲ button to select the language.

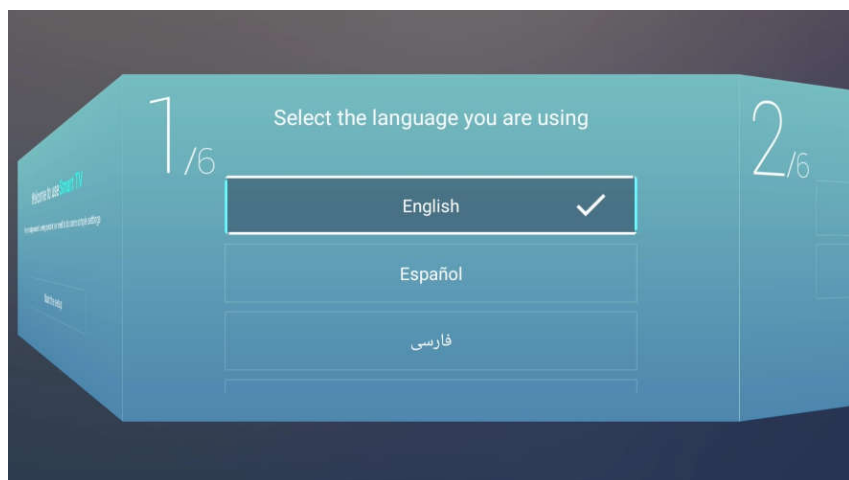


Press ►/OK button to “Choose the country” page, then press ▼ / ▲ button to select country.

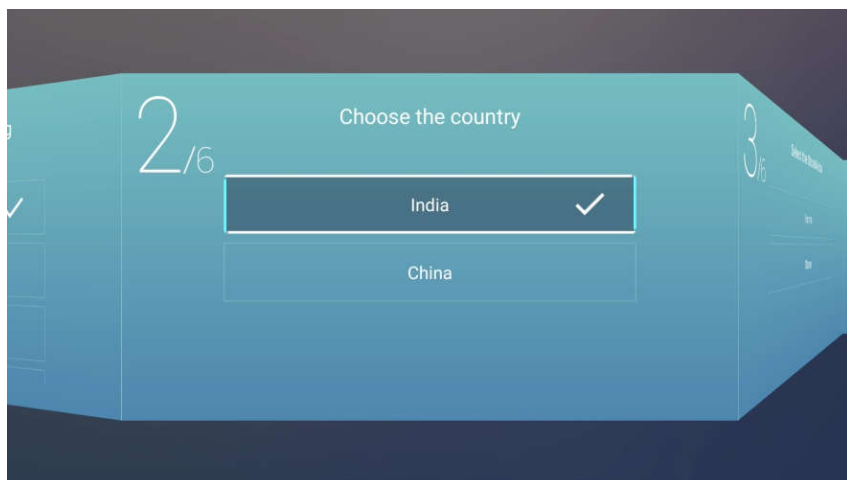


Press ►/OK button to “Select the StoreMode” page, then press ▼ / ▲ button to select mode.

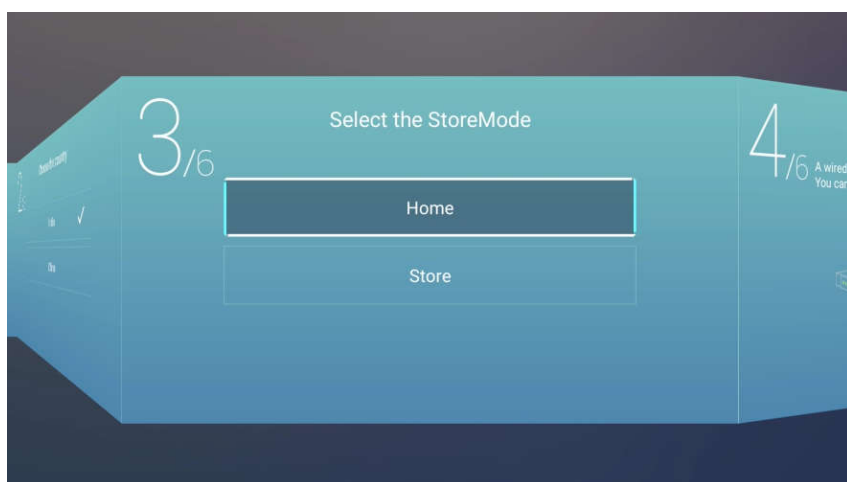

Press ►/OK button to “Set your TV network” page, then press ▼ / ▲ button to set network.

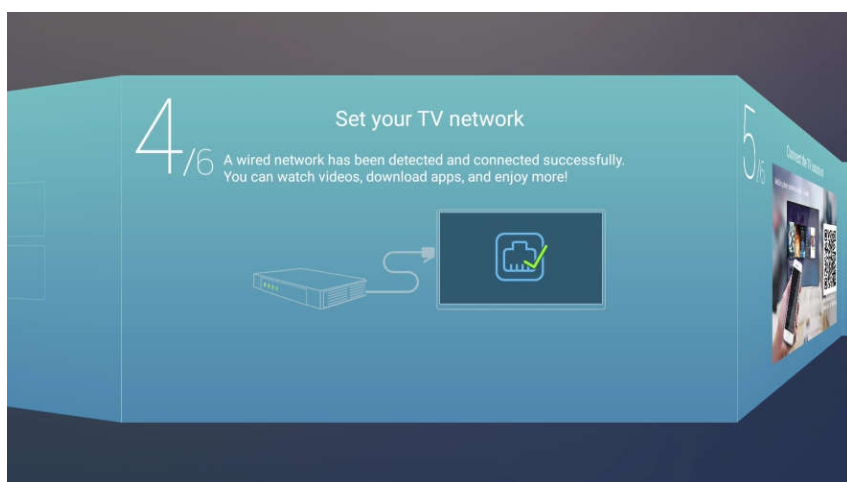


Press ►/OK button to select Connect the TV assistant.

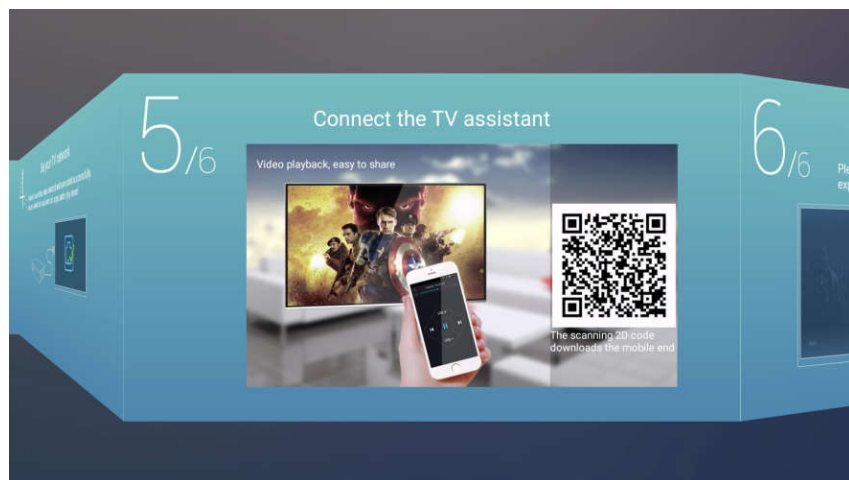

Press ◀ / ▶ button to select TV viewing guide.



Press ▼ / ▲ button to choose the way you watch TV programs or source:

Home page/ATV/AV1/AV2/HDMI1/HDMI2/HDMI3.

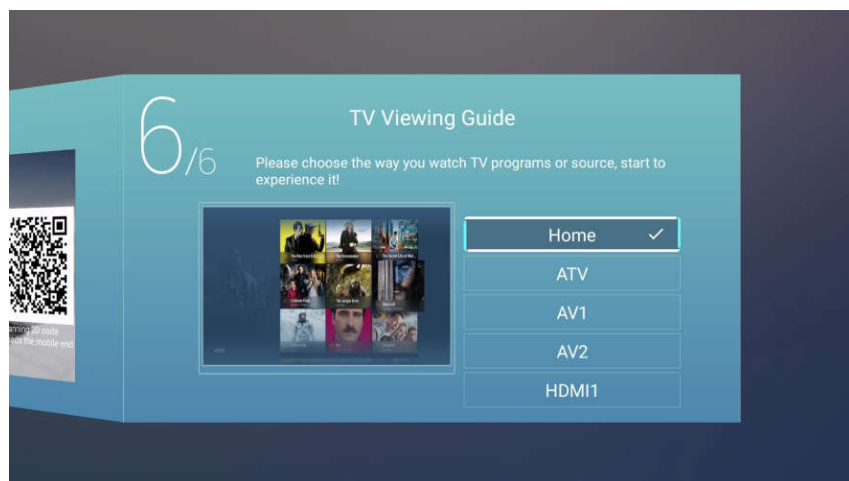

Home page

Press ▼ / ▲ button to select **Home page** in **Setup Wizard** or press ◀ / ▶ button to select **Home** in the menu of ATV input .

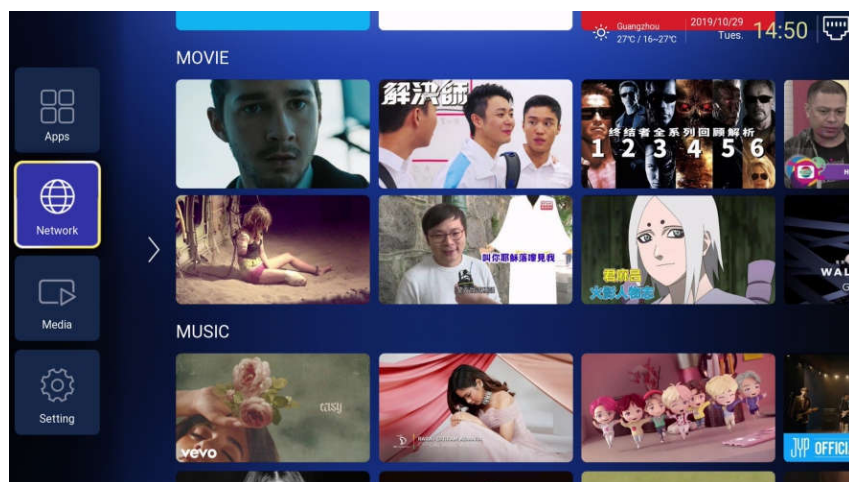
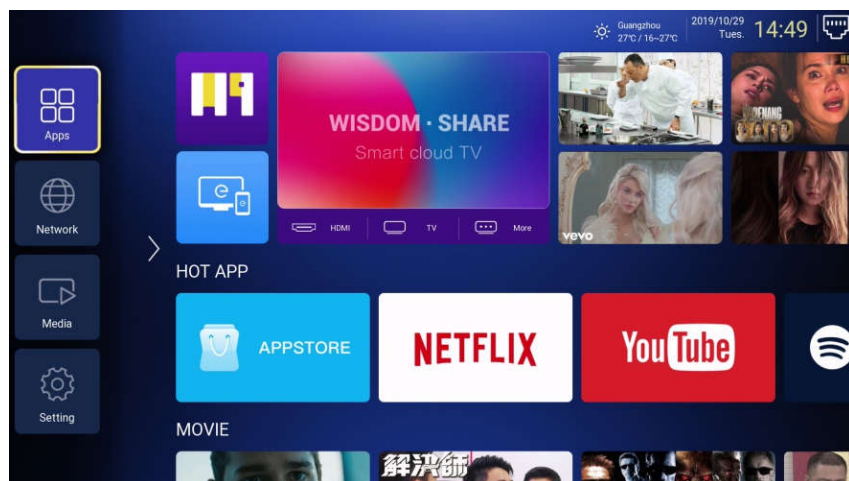


Press ▼ / ▲ / ◀ / ▶ button to select HOT APP/MOVIE/MUSIC/TV/FAV APP.

You can choose the program you want on the home page.


SETTINGS

Press ▼ / ▲ / ◀ / ▶ button to select **SETTINGS**.
Press ◀ / ▶ button to select the SETTINGS , and press **OK** button to enter the System Setting.
Press ◀ / ▶ button to select Network/Time/Common/Bluetooth/System Info.

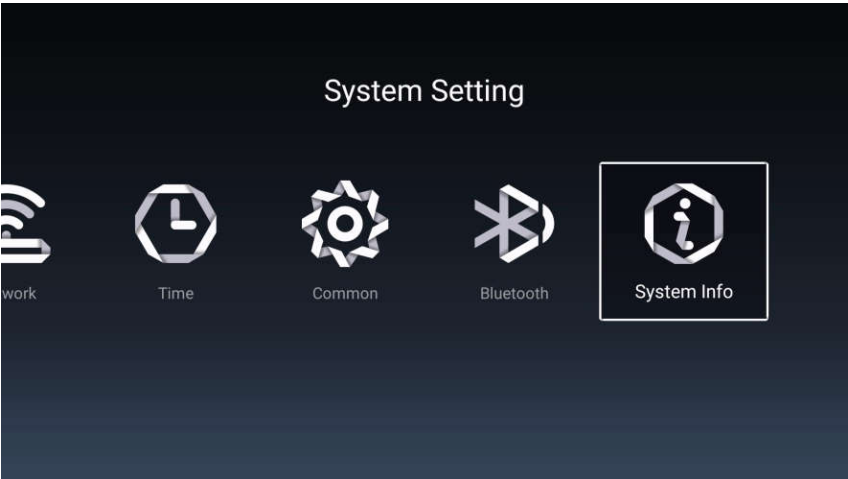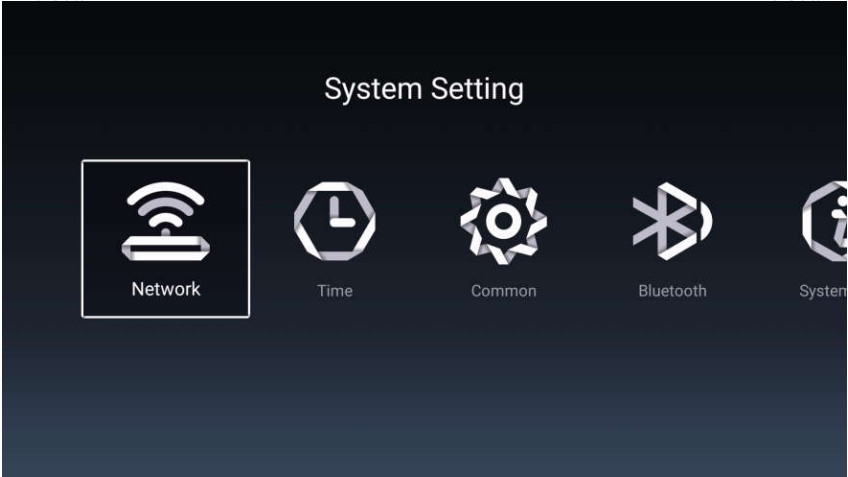


Network

Press ◀ / ▶ button to select Network.

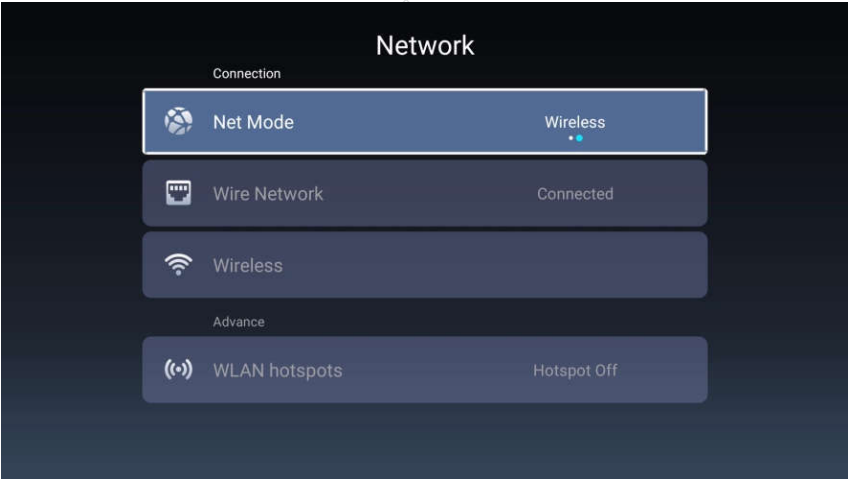

Time

Press ◀ / ▶ button to select Time.

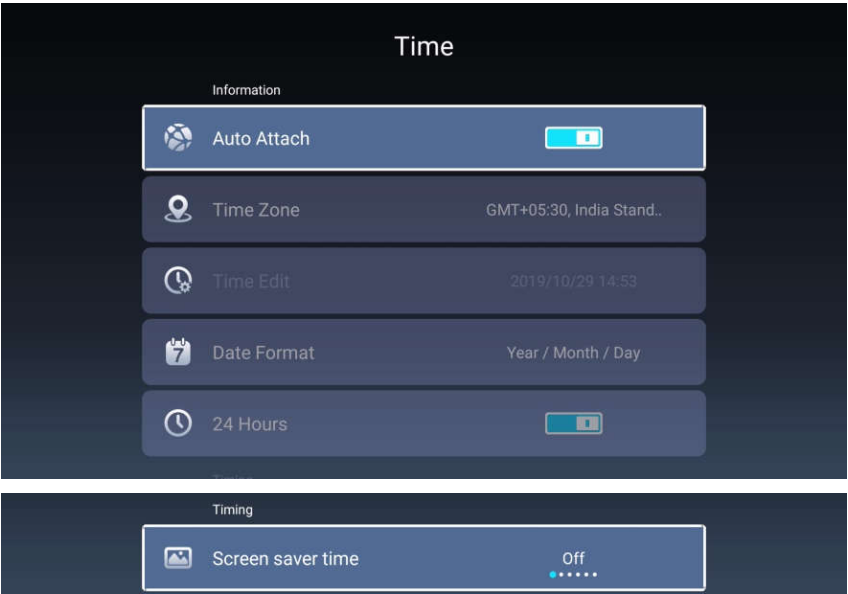


Press ▼ / ▲ button to select Auto Attach/Time Zone/Time Edit/Date Format/ 24 Hours/Screen saver time.

- | | |
|-------------------|--|
| Auto Attach | Get the current time and date automatically. |
| Time Zone | Set the current time zone. |
| Time Edit | Set the current time. |
| Date Format | Set the current date. |
| 24 Hours | Select the 12 hours or 24 hours. |
| Screen saver time | Set the screen saver time as Off/5min/10min/15min/25min/30min. |

Common

Press ◀ / ▶ button to to select Common.

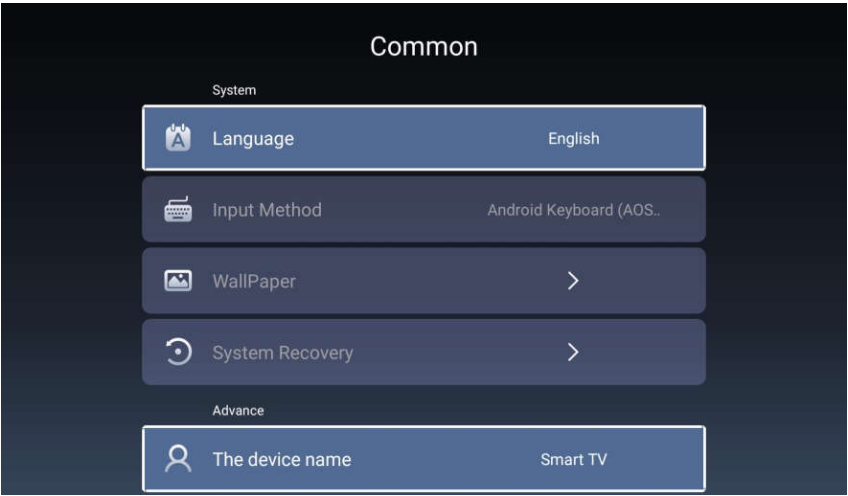


Press ▼ / ▲ button to select Language/Input Method/Wallpaper/System Recovery/The device name.

- | | |
|-----------------|---|
| Language | Set the current display language.The default language is English. |
| Input Method | Set the remote controller input method. |
| WallPaper | Set the Wallpaper. |
| System Recovery | Recovery system to original state. |
| The device name | Set the device name. |

Bluetooth

 Press ◀ / ▶ button to to select **Bluetooth**.

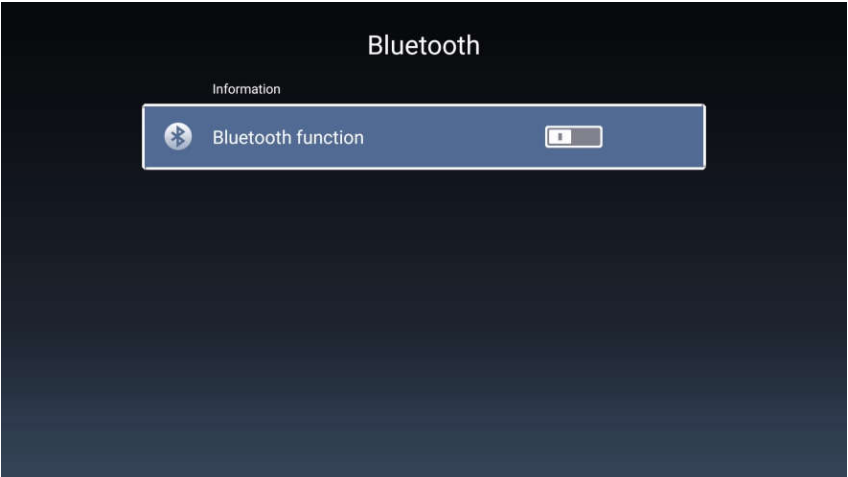

Press ◀ / ▶ button to to select On/Off.

System Info

Press ◀ / ▶ button to to select **System Info**.

System Info

About this machine

al Storage Informatic

3.12GB/8G

Android Version

9

Production Model

Smart TV

Firmware version

20191023_154734

Number of process..

4Core

Network information

Wire Net Mac Addre..

00:25:92:F5:91:2A

 
ss Net Mac Address

DC:29:19:08:75:7B

Media

Press ▼ / ▲ / ◀ / ▶ button to select Multimedia in OTHERS on the Home page or press **MEDIA** button on the remote, and press **OK** button to enter the Media Center.


Press ◀ / ▶ button to select All/Video/Audio/Image.

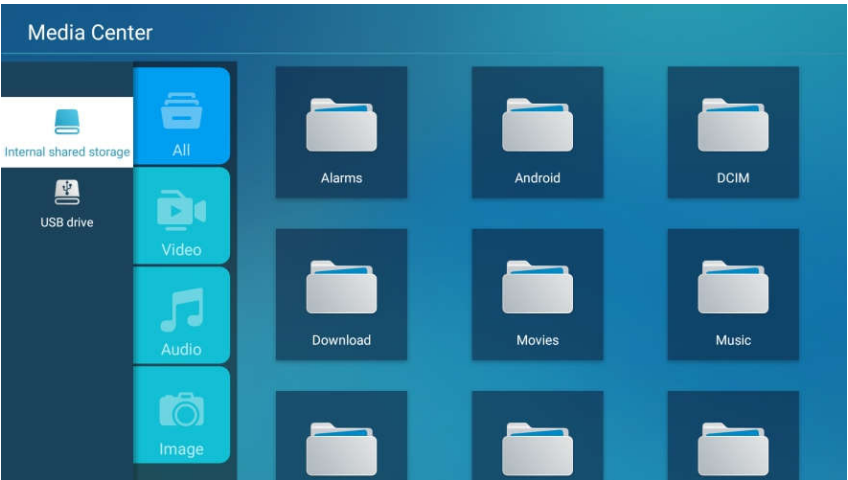

Video

Press ▼ / ▲ button to select Video or All, and press ▼ / ▲ / ◀ / ▶ button to select Movies.

 Press Menu button to display the setting options on the left side.

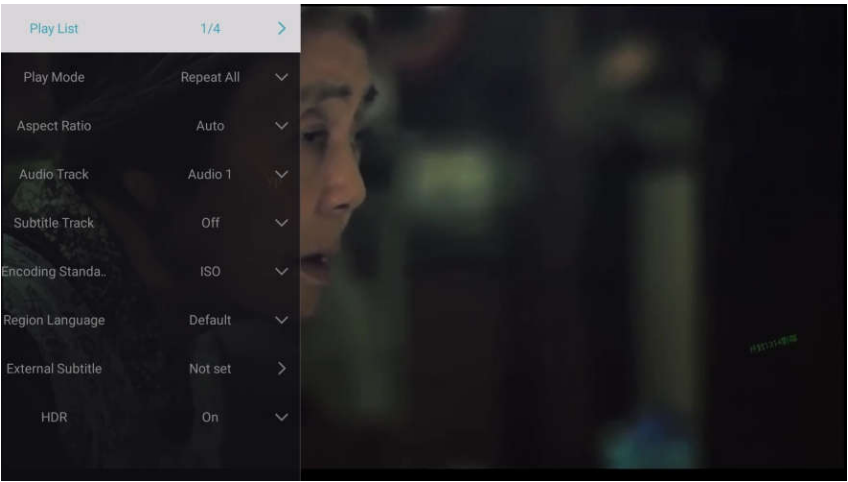

Play List

Press ▼ / ▲ button to select Play List and press OK button to display all available videos.

Play Mode

Press ▼ / ▲ button to select Play Mode and press OK button to select.

(Options: Repeat All/Auto exit/Repeat One/Random/Play List)

Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio and press OK button to select.

(Option: Auto/4:3/16:9/Zoom1/Zoom2)

Audio Track

Press ▼ / ▲ button to select Audio Track and press OK button to select.

Subtitle Track

Press ▼ / ▲ button to select Subtitle Track and press OK button to select close.

Encoding Standard

Press ▼ / ▲ button to select Encoding Standard and press OK button to select ISO/WINDOWS.

Region Language

Press ▼ / ▲ button to select Region Language and press OK button to select .

(Optional: Default/West Euro/Center Euro/Baltic/Cyrillic/Arabic/Greek/Hebrew/Turkey
/Thai/Vietnamese/Chinese)

External Subtitles


Press ▼ / ▲ button to select External Subtitles and press OK button to select.

HDR

Press ▼ / ▲ button to select HDR and press OK button to select Off/On.

Audio

Press ▼ / ▲ button to select Audio or All,and press ▼ / ▲ /◀ / ▶ button to select Music.

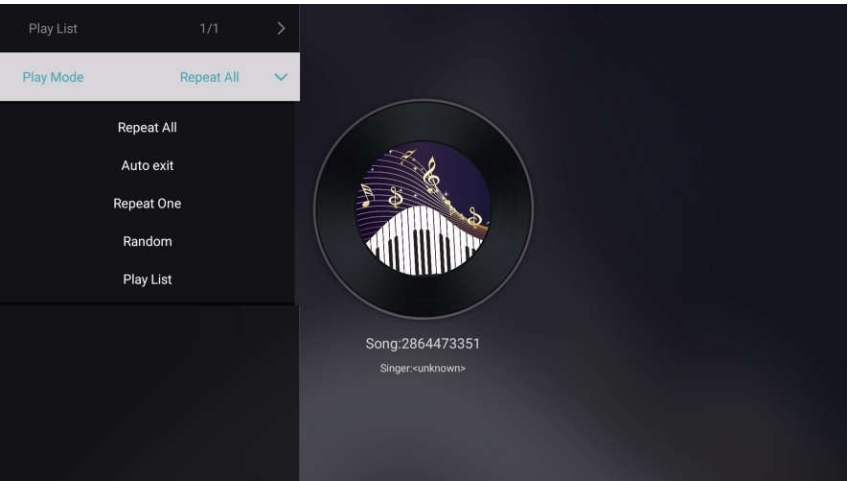

Play List


Press▼ / ▲ button to select Play List and press and press OK button to display all available Audios.

Play Mode

Press ▼ / ▲ button to select Play Mode and press OK button to select sub-menu.
(Optionals: Repeat All/Auto exit/Repeat One/Random/Play List)

Image

Press ▼ / ▲ button to select Image or All,and press ▼ / ▲ /◀ / ▶ button to select Pictures.

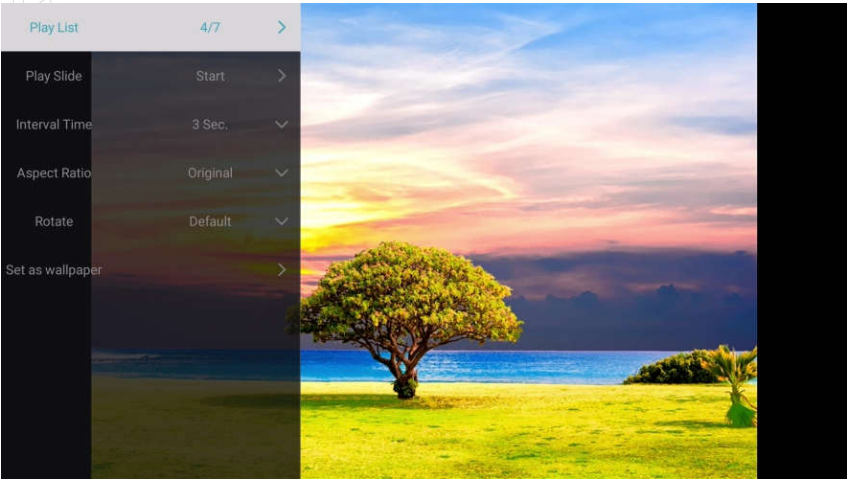

Play List	Playable picture list display.
Play Slide	You can choose to start the slide show.
Interval Time	Select slide show interval. (Optional:3/5/8/12Sec.)
Aspect ratio	Set the aspect ratio. (Optional: Auto/Full screen/Zoom Out/Original/Zoom1/Zoom2)
Rotate	Set the rotate. (Optional: Default/Rotate Right/Rotate left)
Set as wallpaper	Set the current play picture as wallpaper.

Input



Press ▼ / ▲ / ◀ / ▶ button to select **More** under the “**WISDOM SHARE**” on the Home page.

Press ◀ / ▶ button to select ATV/AV1/AV2/HDMI1/HDMI2/HDMI3.

Or press **Menu** button, and press ◀ / ▶ button to select Source.

Press ▼ / ▲ button to select the input source you want.

Press **OK** button to enter. Press **EXIT** button to quit.

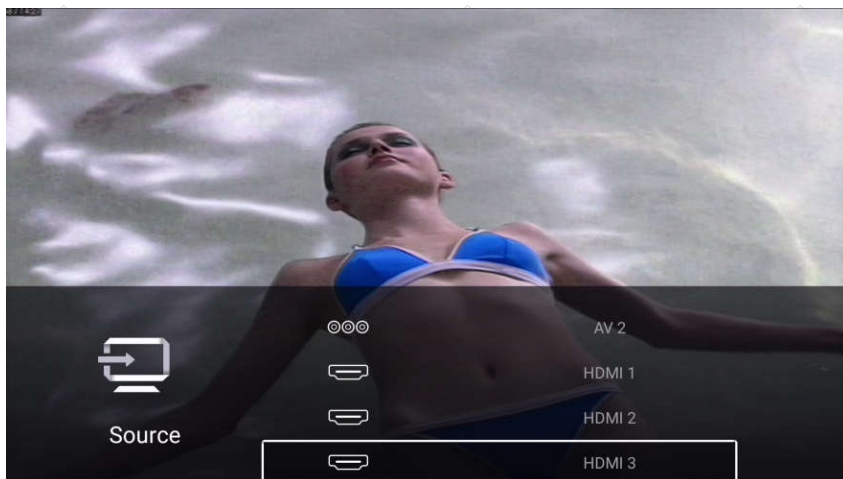
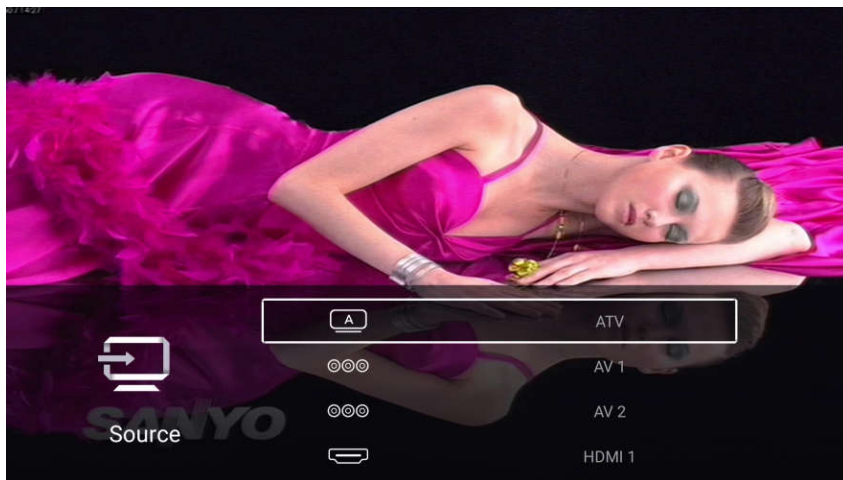


TV Setting

Press **MENU** button to enter the TV Setting.

Press ◀ / ▶ button to highlight the desired menu icon , and press **OK** button to select.

(Optional:Home/Source/Picture/Sound/Channel/Common/Advance)

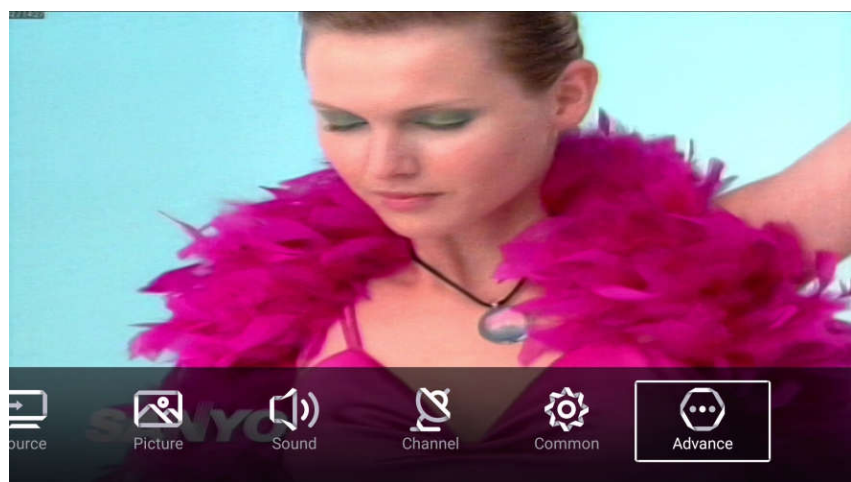
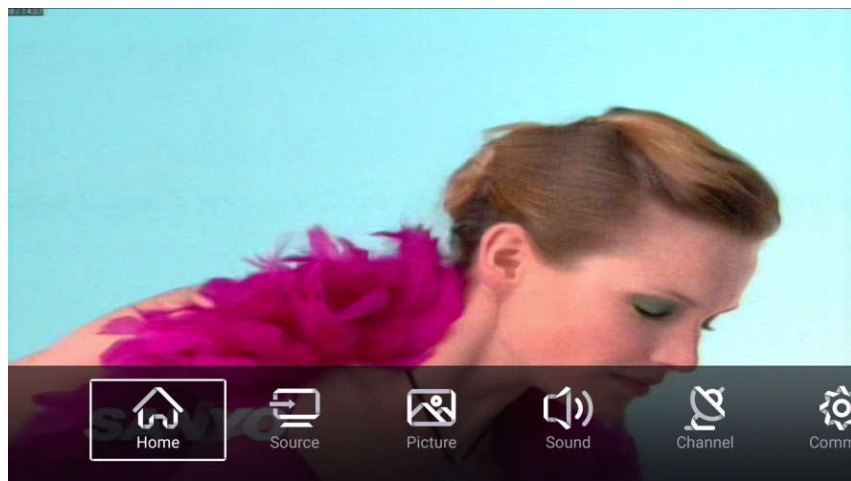


Picture

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select the Picture.

Press **OK** button to enter the sub-menu.

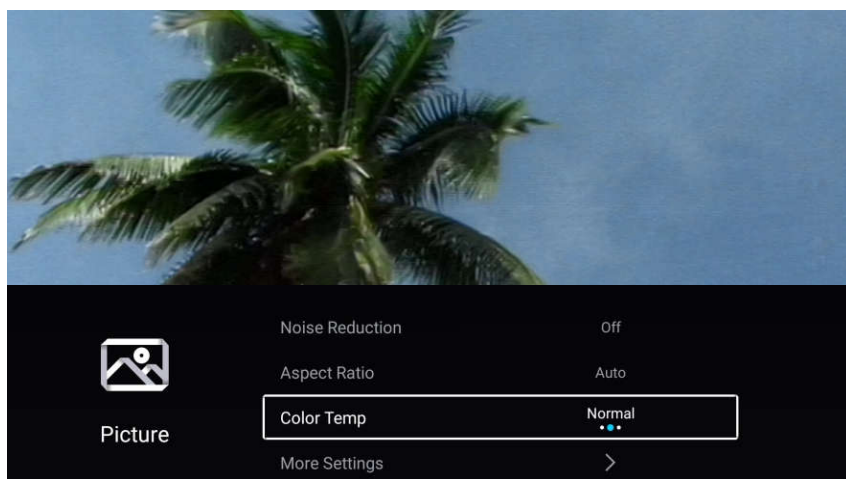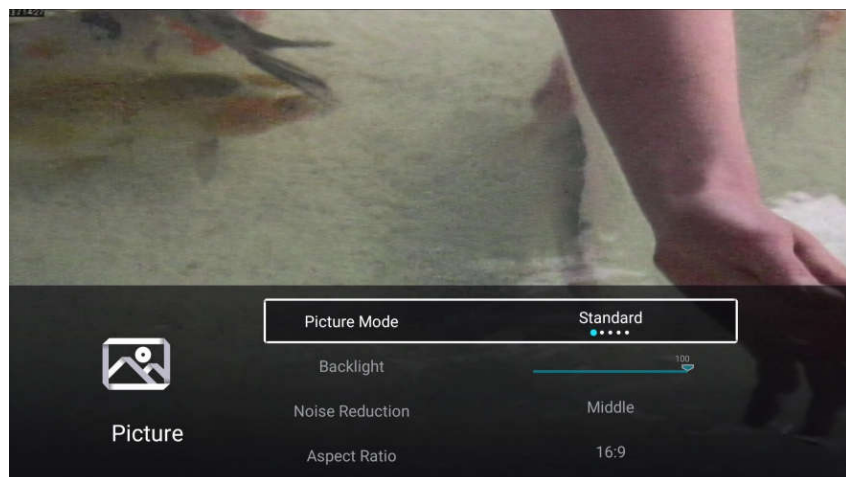

Press ▼ / ▲ button to select Picture Mode/Contrast/Brightness/Color/Sharpness/Backlight /Noise Reduction/Aspect Ratio/Color Temp/More Settings.

Press **MENU** or **EXIT** button to quit.

Picture Mode

Highlight the item and press **OK** button to enter the sub-menu, that shows the picture mode you can choose.

Press ◀ / ▶ button to select Standard/Dynamic/Soft/Vivid/User.

Standard	Produces a standard image.
Dynamic	Enhance the contrast ,color and clarity of the screen, so that the picture in the dynamic will balance the color.
Soft	Reduce the screen contrast , color and clarity to make the screen looks soft.
Vivid	Enhance the contrast , color and clarity of the screen to make the color more vivid.
User	Select to customize picture settings.

Contrast/Brightness/Color/Sharpness

Press ▼ / ▲ button to select Contrast/Brightness/Color/Sharpness.

Press ◀ / ▶ button to adjust.

Contrast	Adjust the contrast of the image.
Brightness	Adjust the brightness of the image.
Color	Adjust the color intensity of the image.
Sharpness	Adjust the edge sharpness of the image.

Backlight

Press ▼ / ▲ button to select Backlight.

Press ◀ / ▶ button to adjust.

Noise Reduction

Set up options to eliminate the image noise intensity.

Press ▼ / ▲ button to select Noise Reduction.

Press ◀ / ▶ button to select Off/Low/Middle/High/Auto.

Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio.

Press ◀ / ▶ button to select 16:9/4:3/Zoom1/Zoom2.

Color Temp

Adjust the overall color of the image.

Press ▼ / ▲ button to select Color Temp.


Press ◀ / ▶ button to select Cool/Normal/Warm.

Cool	The picture is in favor of green-blue and less red. The whole color is in favor of light. The picture is more fresh and elegant.
Normal	The picture does not in favor of any color. The color is moderate.
Warm	The picture is in favor of red-green and less blue to make the color more vivid and soft.

More Settings

Press ▼ / ▲ button to select More Settings.

Press OK button to enter the sub-menu.

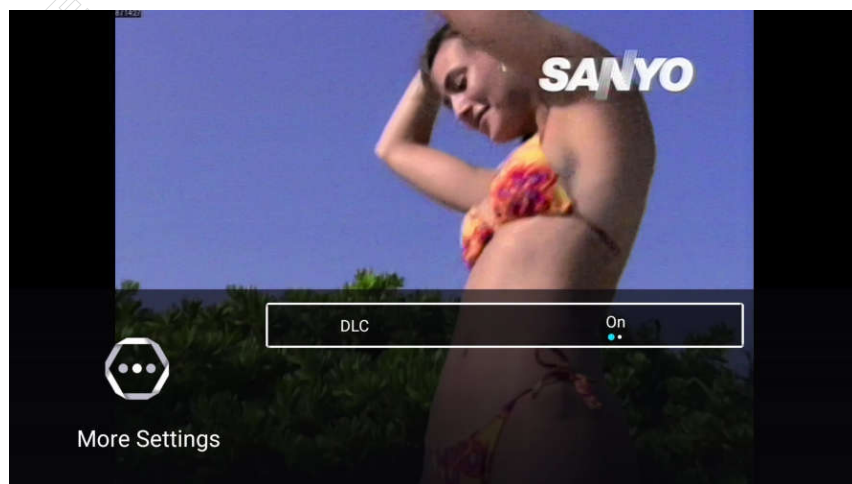

DLC



Press ◀ / ▶ button to select On/Off.

Sound

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select the Sound.

Press **OK** button to enter the sub-menu.

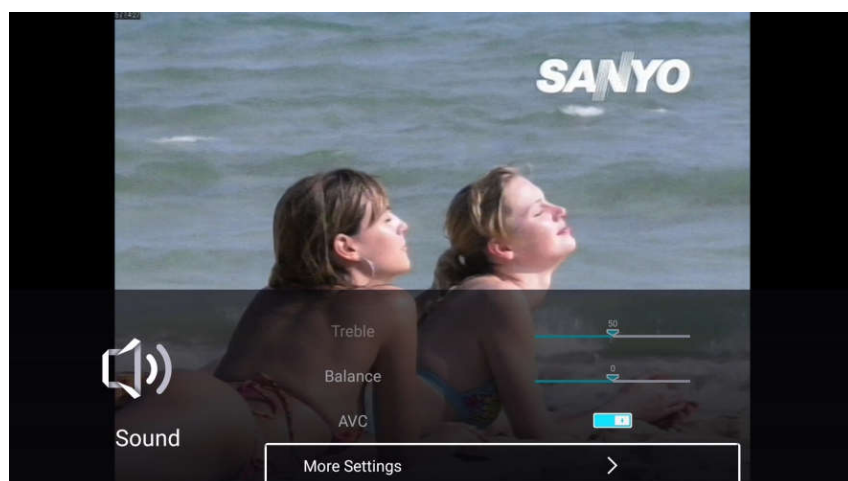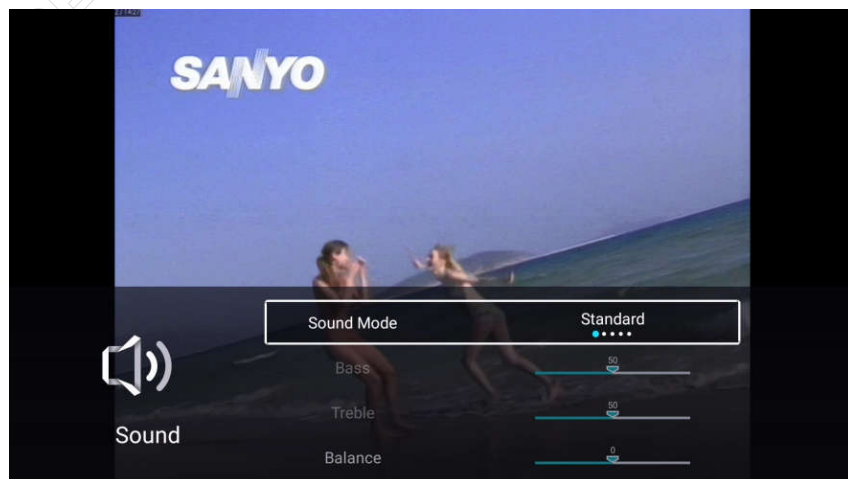

Press ▼ / ▲ button to select Sound Mode/Bass/Treble/Balance/AVC/More Settings.

Press **MENU** or **EXIT** button to quit.

Sound Mode

Press ▼ / ▲ button to select Sound Mode.

Press ◀ / ▶ button to select Standard/Music/Movie/News/User.

Standard	Emit balanced sound under any circumstances.
Music	Enhance the high pitch and reduce the bass.
Movie	Enhances treble and bass for a rich sound experience.
News	Enhance the voice.
User	Select to customize sound settings.

Bass

Adjust the low frequency sounds.

Press ▼ / ▲ button to select Bass. Press ◀ / ▶ button to adjust.

Treble

Adjust the high frequency sounds.

Press ▼ / ▲ button to select Treble. Press ◀ / ▶ button to adjust.

Blance

Balanced left and right channels.

Press ▼ / ▲ button to select Balance. Press ◀ / ▶ button to adjust.


AVC

Press ▼ / ▲ button to select AVC. Press ◀ / ▶ button to select On/Off.

Note: After open the "AVC", once the volume is set up, it can keep the volume of the speaker steady no matter what kind of difference among the TV sound of each channel.

More Settings

Press ▼ / ▲ button to select More Settings. Press OK button to enter the sub-menu.

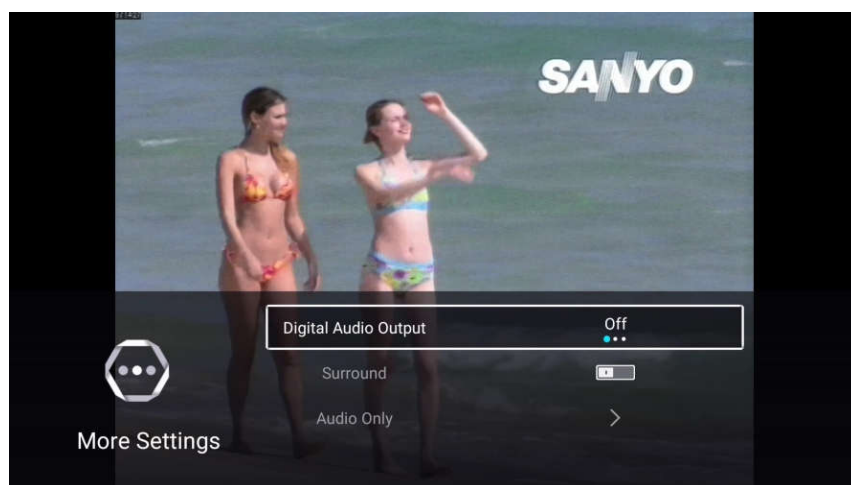**Digital Audio Output**

Press ▼ / ▲ button to select Digital Audio Output. Press ◀ / ▶ button to select Off/PCM/RAW.

Surround

Press ▼ / ▲ button to select Surround. Press ◀ / ▶ button to select On/Off.

Audio Only


Press ▼ / ▲ button to select Audio Only. Press OK button enter the sub-menu.

Channel

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select Channel.

Press **OK** button to enter the sub-menu.

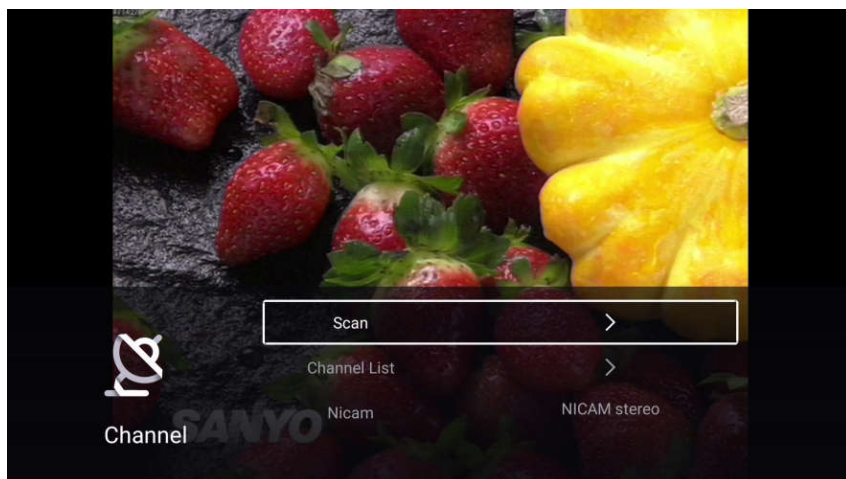


Press ▼ / ▲ button to select Scan/Channel List/Nicam.

Press **MENU** or **EXIT** button to quit.

Scan

Press ▼ / ▲ button to select Scan. Press **OK** button to enter the sub-menu.

Press ▼ / ▲ button to select AutoScan/Analog Manual Scan.

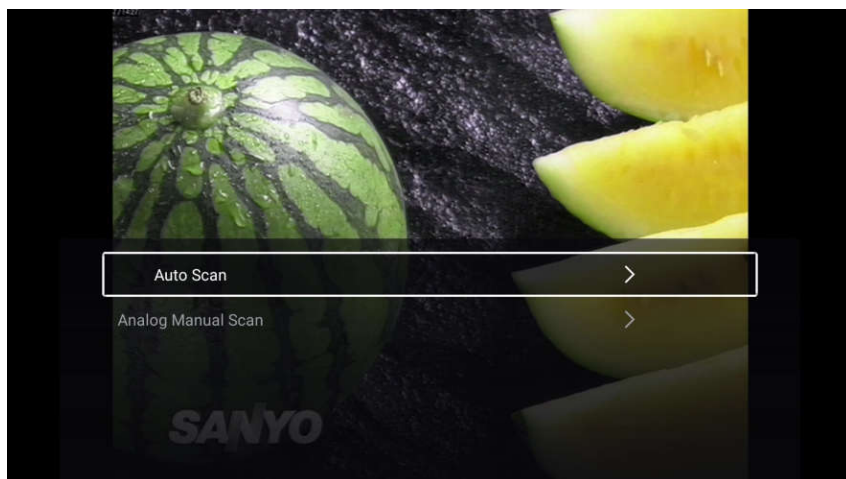


Auto Scan

Automatic search can search for effective program channel automatically.

Press ▼ / ▲ button to select Auto Scan, then press **OK** button to start auto search.

If you want to stop searching, press **EXIT** or **MENU** button to stop searching.

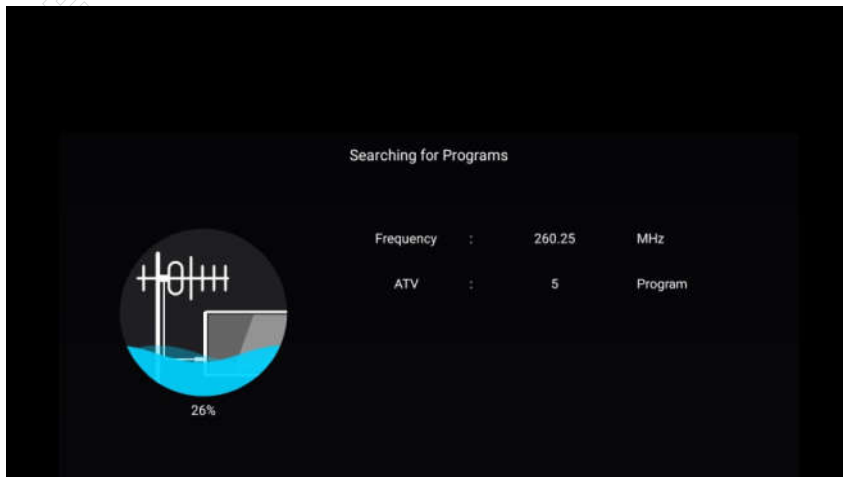


Analog Manual Scan

Analog manual search can search for effective simulation program channel manually.

Press ▼ / ▲ button to select Analog Manual Scan, and press **OK** button to enter the sub-menu.

Press **EXIT** or **MENU** button to quit.

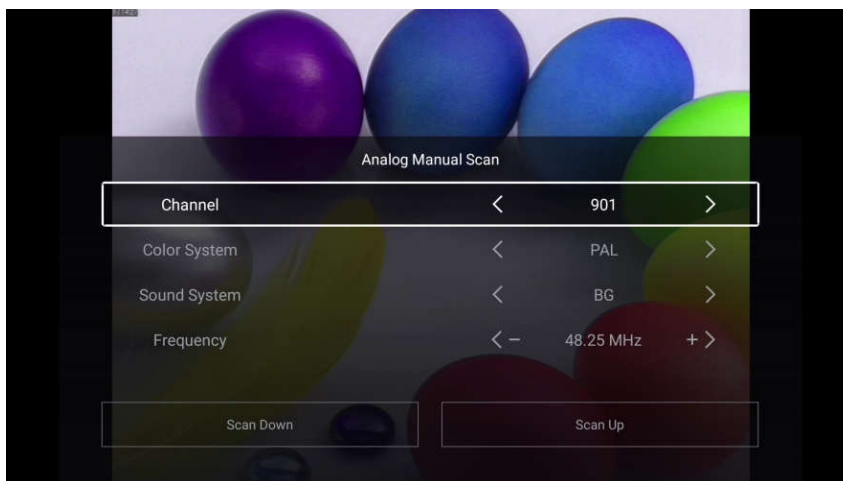

Channel

Press ▼ / ▲ button to select Channel. Press ◀ / ▶ button to select the channel number.

Color System

Press ▼ / ▲ button to select Color System. Press ◀ / ▶ button to select PAL/SECAM/NTSC/Auto.

Sound System

Press ▼ / ▲ button to select Sound System. Press ◀ / ▶ button to select DK/BG/I/L/M/N.


Frequency

Press ▼ / ▲ button to select Frequency. Press ◀ / ▶ button to adjust.

Channel List

View all of the existing programs.

Press ▼ / ▲ button to select Channel List. Press **OK** button to enter the sub-menu.

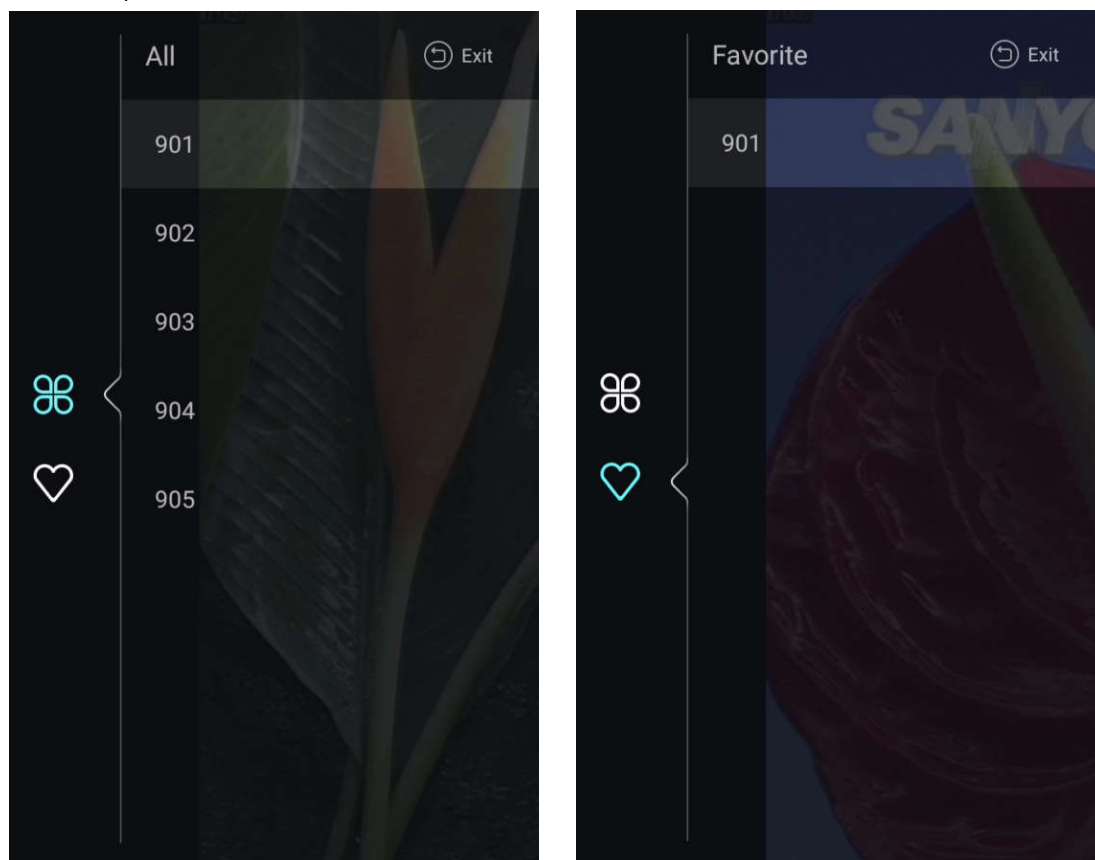

Press ▼ / ▲ button to select All/Favorite.

All

Press ▼ / ▲ button to select All. Press **MENU** button to edit the program.

(Optional: Favorite/Delete/Rename/Skip.)

If the program is selected as an analog signal, the program can be renamed.

Favorite

Press ▼ / ▲ button to select Favorite. Press **MENU** button to edit the Favorite Channel.

(Optional: Delete/Rename.)

Nicam



Press ▼ / ▲ button to select Nicam. Press ◀ / ▶ button to select Mono/NICAM stereo.

Common

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select **Common**.

Press **OK** button to enter the sub-menu.

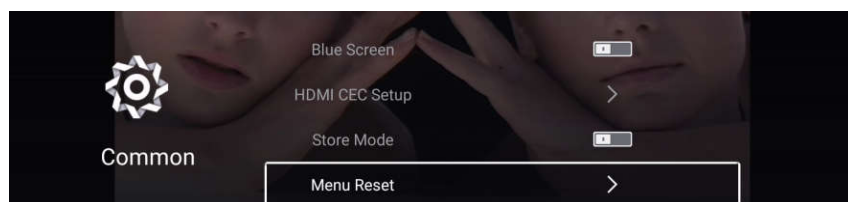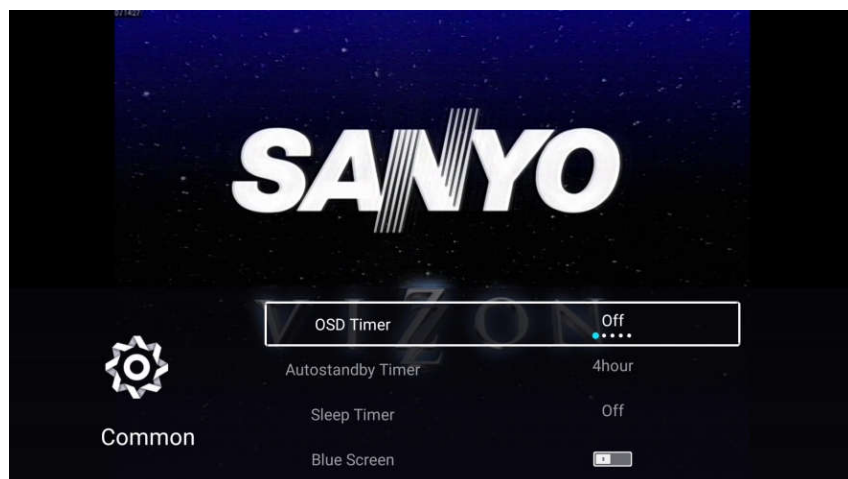

Press ▼ / ▲ button to select OSD Timer/Autostandby Timer/Sleep Timer/Blue Screen/HDMI CEC Setup/Store Mode/MenuReset.

OSD Timer

Press ▼ / ▲ button to select OSD Timer.

Press ◀ / ▶ button to select Off/5sec/15sec/30sec/40sec.

Autostandby Timer

Press ▼ / ▲ button to select Autostandby Timer.

Press ◀ / ▶ button to select Off/3hour/4hour/5hour.

Sleep Timer

Press ▼ / ▲ button to select Sleep Timer.

Press ◀ / ▶ button to select Off/15min/30min/45min/60min/90min/120min/240min.

Blue Screen

Set the background color to blue when there is no input signal.

Press ▼ / ▲ button to select Blue Screen. Press ◀ / ▶ button to select On/Off.

HDMI CEC Setup

Press ▼ / ▲ button to select HDMI CEC Setup.

Press **OK** button to enter the sub-menu.



Press ▼ / ▲ button to select CEC/TV Auto Power On/Device Auto Power Off/ARC/.

Note: All the Options are available only when the CEC select **On**.

CEC

Press ▼ / ▲ button to select CEC, and press ◀ / ▶ button to select On/Off.

The following terms are available only when "On" is selected in CEC.

TV Auto Power On

Press ▼ / ▲ button to select TV Auto Power On, and press ◀ / ▶ button to select On/Off.

Device Auto Power Off

Press ▼ / ▲ button to select Device Power Off, and press ◀ / ▶ to select On/Off.

ARC

Press ▼ / ▲ button to select ARC, and press ◀ / ▶ to select On/Off.


Store mode

Press ▼ / ▲ button to select Store mode. Press ◀ / ▶ to select On/Off .

Menu Reset

Recall the default setting.

Press ▼ / ▲ button to select Menu Reset. Press OK button to enter the sub-menu.

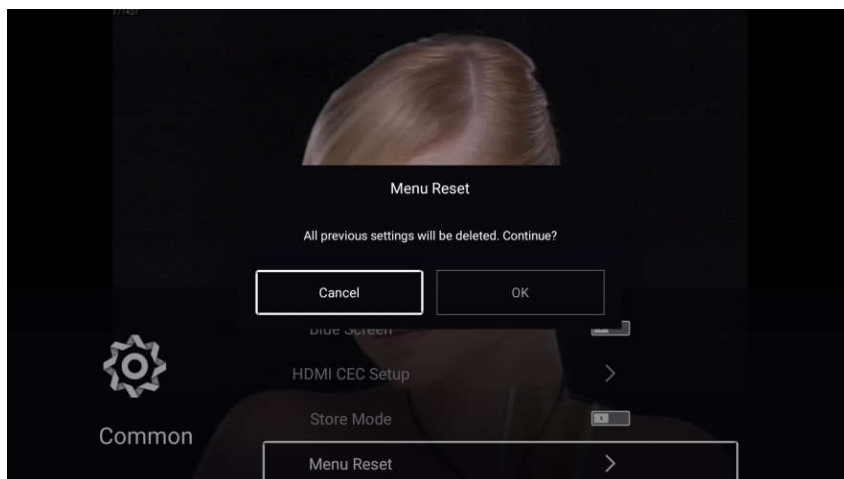

Advance

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select Advance. Press OK button to enter the System Setting.

(Please refer to the home page--Setting part)

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.