

反面

USER MANUAL



ETIQUETA

ADHERENCIA SUAVE

CUERPO DE ALEACIÓN DE ZINC

The fast charging wireless charger is an efficient product for charging your devices, with a compact and elegant design for compatibility with any mobile device that allows wireless charging. Adopting high-end fast charging IC, it can be perfectly compatible with various brands, to further save charging time by improving user experience.

Diagrama de un componente de aleación de zinc con una etiqueta adhesiva. Las etiquetas indican:

- ETIQUETA
- ADHERENCIA SUAVE
- CUERPO DE ALEACIÓN DE ZINC

 
2. Insert the end of the cable USB Type C into the wireless charger, the LED frame will light up to indicate the electrical connection.
3. Place your phone on the wireless charger. Make sure the phone is properly placed on the wireless charger's charging area. When the phone is being charged, the LED frame will automatically turn blue to show a charging status.
4. Place the phone in the center of the wireless charger to ensure stable charging. Do not put magnetic and metal accessories or cards on the charger.

4. Coloque su teléfono en el centro del cargador inalámbrico para garantizar una carga estable, no ponga los accesorios o tarjetas magnéticos y metálicos en el.

2. Insert the end of the cable USB Type C into the wireless charger, the LED frame will light up to indicate the electrical connection.

4. Place the phone in the center of the wireless charger to ensure stable charging. Do not put magnetic and metal accessories or cards on the charger.

1. Keep the charger away from water or other liquids.
2. If you need to move the charger, make sure it is turned off.
3. Use the device at an ambient temperature of 1 to 45 degrees.



1. Mantenga el cargador alejado del agua u otros líquidos.
2. Si necesita mover el cargador, asegúrese de que esté apagado.
3. Use el producto a una temperatura ambiental de 1 a 45 grados.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance between 20cm the radiator your body.

- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance between 20cm the radiator your body.

- Consult the dealer or an experienced radio/TV technician for help.