



# MANUAL OF REMOTE CONTROL

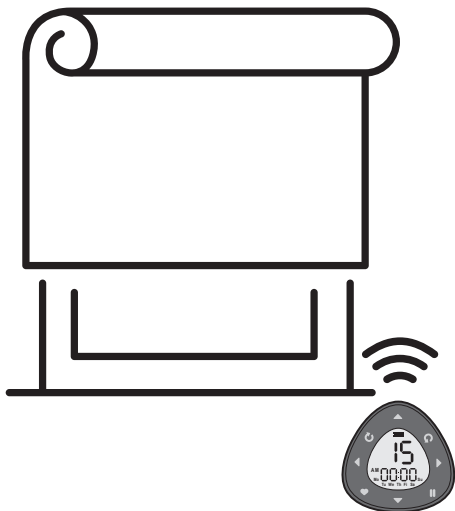

# CONTENTS

|                                                |       |
|------------------------------------------------|-------|
| <b>A REMOTE CONTROL</b> .....                  | 1-4   |
| A-1 Install The Battery .....                  | 2     |
| A-2 Remote Control Parameters .....            | 3-4   |
| <br><b>B REMOTE CONTROL PROGRAMMING</b> .....  | 5-18  |
| B-1 Enter into setting mode .....              | 6     |
| B2-B5 Set the time and timing .....            | 7-10  |
| B6-B13 Pair with the motor and set the limits- | 11-18 |
| <br><b>C CERTIFIED STATEMENT</b> .....         | 19    |
| C-1 FCC Statement .....                        | 19    |

# A REMOTE CONTROL

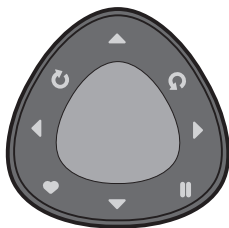


Magnetic Holder



3V(CR2450)


## A-1 INSTALL THE BATTERY

- 1 Use a pen to pry the back cover of the remote

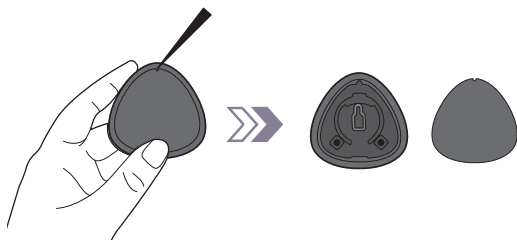


Slightly press the back cover to prevent it from popping out.


2

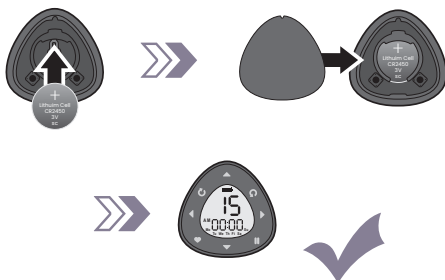

## A-2 REMOTE CONTROL PARAMETERS

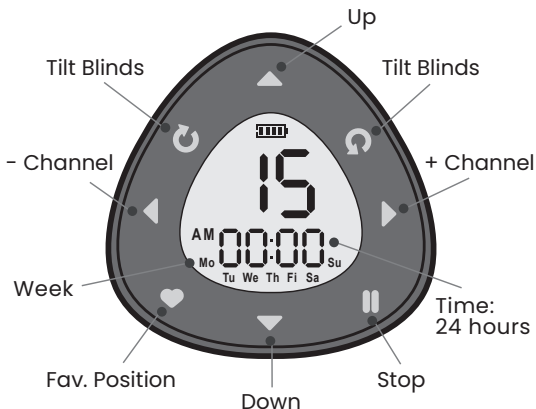


BACK

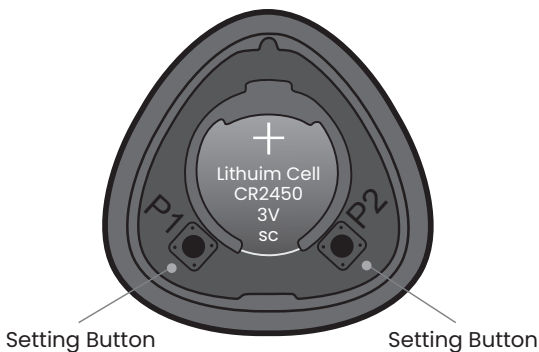

## Installation on the wall




Back

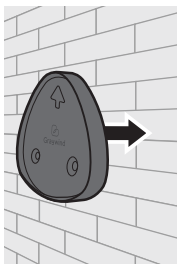


## **B** REMOTE CONTROL PROGRAMMING



## B-1 ENTER INTO SETTING MODE

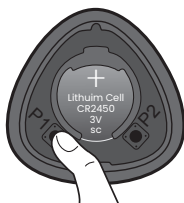

Press and hold "P1" for 5s

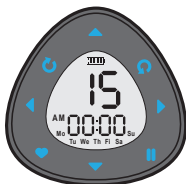

The remote lights up and flashes for three times



The channel icon flashes ,  
which means it is in setting mode




It will exit setting mode if there is no action  
for more than 3 minutes

## B-2 SET THE TIME

Please ensure the remote is in setting mode before doing the steps below:

1

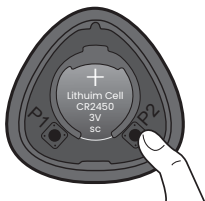


Press and hold "P2" for 5s



The "hour" icon flashes


2

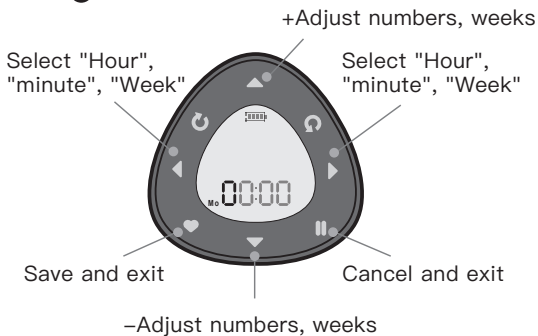

## B-3 SET TIMING

**!** You can set at most 25 groups of timing for each remote


1

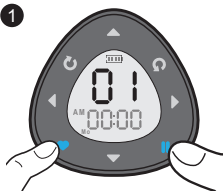

Press and hold  
"♥" & "||" for 3s



2

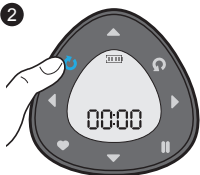

Press and hold "↻"  
to add new timing

3



Press "◀" or "▶" to select  
the icon. The selected one  
will be flashing.



Press "▲" or "▼" to  
select the numbers.

4



Press "◀" or "▶" to select  
the day of the week.  
The selected one will be  
flashing.



Press "▲" to save and  
the icon of "⊕" will  
show up. You can  
select more than one.

Press "▼" to cancel.  
The icon of "⊖" will not  
show up if cancelled.

5



Press "◀" or "▶" to select the top limit position or bottom limit position. The selected one will be flashing.

Press "▲" to save and the icon of "⊕" will show up.

Press "▼" to cancel. The icon of "⊕" will not show up if cancelled.

6



Press "◀" or "▶" to select the channel number. The selected one will be flashing.



Press "▲" to save and the icon of "⊕" will show up. You can select more than one.

Press "▼" to cancel. The icon of "⊕" will not show up if cancelled.


7



Press "♥" to save the setting.



## B-4 MODIFY THE GROUP OF TIMINGT

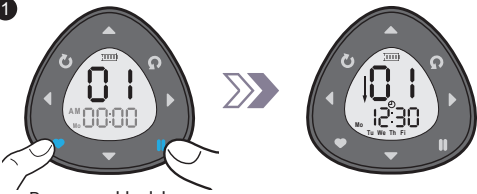
- 

Press and hold "♥" & "||" for 3s
- 

Press "◀" or "▶" to select the group of timing
- 

Press and hold "🕒" to enter in the group of timing and modify. The way to modify can be referred by step 3-7 in B-3(P8-P9).

## B-5 CHECK THE GROUP OF TIMING

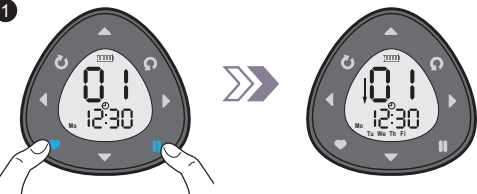- 

Press and hold "♥" & "||" for 3s
- 

Press "◀" or "▶" to select the group of timing
- 

Press "▲" or "▼" to check the channels in the group

## B-6 HOW TO SET FAVORITE RUNNING POSITION

Please ensure the remote is in setting mode before doing the steps below:

1



Press "◀" or "▶",  
choose the channel number

2



Press "♥" & "||"



The motor responds.



 Before setting the favourite running position, please make sure the top and bottom limit positions are already set.

## B-7 HOW TO CHANGE UP/DOWN DIRECTION

Please ensure the remote is in setting mode before doing the steps below:

1



Press "◀" or "▶",  
choose the channel number

2



Press "▼" & "⏻"



The motor responds.



## B-8 HOW TO ADJUST SHADES RUNNING SPEED

Please ensure the remote is in setting mode before doing the steps below:

1



Press "◀" or "▶",  
choose the channel number

2 Speed up



The motor responds.

Press "⏻" & "▲"



2 Slow down



The motor responds.

Press "⏻" & "▼"



## B-9 HOW TO DELETE THE LIMIT POSITION

Please ensure the remote is in setting mode before doing the steps below:

1



Press "◀" or "▶",  
choose the channel number

2



Press "▲" & "▼"



The motor responds.



## B-10 HOW TO SET THE LIMIT POSITION


Please ensure the remote is in setting mode before doing the steps below:

1



Press "◀" or "▶",  
choose the channel number

2

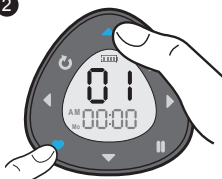


Press "♥" & "▲"



The motor responds.

3

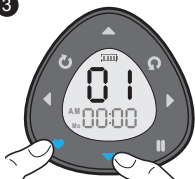

Press "♥" & "▼"



The motor responds.



## B-11 HOW TO REMOVE ONE CHANNEL

Please ensure the remote is in setting mode before doing the steps below:

1



Press "◀" or "▶",  
choose the channel number

2



Press "▲" & "■"



The light goes out.



The motor responds.



**⚠** All the paired remotes will not be able to control the motor.

## B-12 HOW TO RE-PAIR WITH MOTOR


Please ensure the remote is in setting mode before doing the steps below:

1



Press "◀" or "▶",  
choose the channel number

2

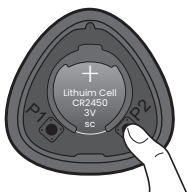


Press "P2" x2




It shows "H2" on the screen.

3

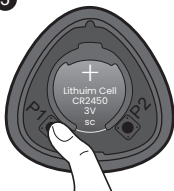

Press "P1" x1

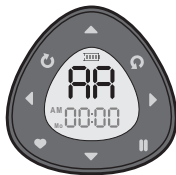

It shows "AA" on the screen.



# **C** CERTIFIED STATEMENT

## **C-1** FCC STATEMENT

FCC ID: 2A9IAST-15-01

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and.
- (2) This device must accept any interference received,  
including interference that may cause undesired operation.