

Magnetic Bluetooth Speaker


User Manual



1. Specifications:

- * Bluetooth Version: 5.3
- * Output power: 5W
- * Battery Capacity: 700mAh
- * Bluetooth distance: 10M
- * Frequency Range: 2402-2480MHz
- * Material: ABS+Fabric

2. Buttons Description:

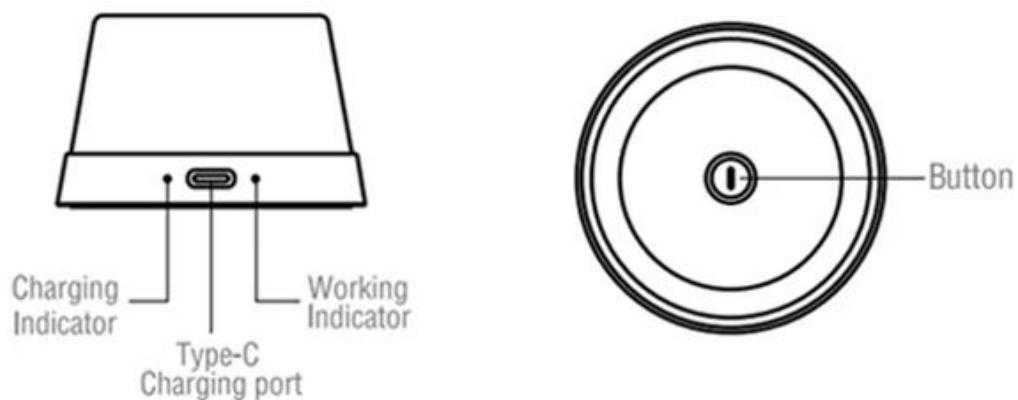

1. Charging indicator
2. Type C charging port

3. Bluetooth/TWS Working indicator
4.  Power on / off / Play / Pause/ Call button

Functions:

Power on/ off:

Press and hold  the button two seconds to power on/off the speaker, you'll heard the prompt voice to enter the Bluetooth mode.

Bluetooth Mode:

Before using the Bluetooth Speaker, you must pair it with a Bluetooth enabled device.

1. When the speaker is powered on, it will enter Bluetooth mode.
2. From the Bluetooth menu of your device, search for new devices and select “MS-304” to pair with your device.
3. Once they are paired successfully, you will hear a notification sound.
4. If the speaker was turned off then re-turned on, the device and the speaker will be connected automatically.

Play / Pause

Short press  the button to play/pause the music.

Calls:

When there is an incoming call, press  button to pick up / hang up the phone call. Double click  button to redial the last phone number. Double click  button to reject the phone call.

TWS Function (Works before Bluetooth Pairing):

1. Turn on the two speakers of MS-304 at the same time, triple click the  button on either one of speaker, the green light of the host will flash slowly, after a few seconds, the two speakers will synchronize to connect with each other, the green light will keep long bright of both speaker after connected successfully.
2. Open the Bluetooth device in your mobile ,search “MS-304” pairing name to pair.
3. Once they are paired successfully, you will hear a confirmation sound from the host speaker,will playing music at the same time once open the Music player in your mobile. The blue light of the host speaker will flash slowly when playing music.
4. Triple click  of either speaker to exit TWS function, and the triple click  to synchronize again. Note: The two previously synchronized speakers will connect automatically after turning on again if turned off.

Charging:

Insert the Type-C charging cable into the DC 5V jack, and connect the USB to a PC or AC /DC adapter to charge the speaker, when you charging the red light will keep on ,once full charge the red light will goes off.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3. Safety instructions:

- * Read this manual carefully before using this device and keep it for future reference.
- * Keep the device away from heat, direct sunlight and sharp edges.
- * Do not insert any metallic object into this device, it's a risk of short circuit!
- * Please avoid a static charge, do not use the device in an extremely dry climate.
- * Do not repair the unit by yourself, contact an authorized specialist.

4. Trouble Shooting:

Fault	Solution
Unable to pair with other devices.	<ol style="list-style-type: none">1. Check whether the speaker is still in the process of search or switch it off and on again.2. There are too many Bluetooth devices in the proximity that cause difficulty in connection.Turn off other Bluetooth devices.
The sound is low or distorted.	<ol style="list-style-type: none">3. Check the Bluetooth device volume and then adjust it to an appropriate level.4. Recharge the battery.
Occasionally the music stops.	<ol style="list-style-type: none">5. Check whether the speaker effective

	transmission range is exceeded or if there is an obstacle between the speaker and other Bluetooth devices.
--	--