

aiwa


WIRELESS SPEAKER




WHAT'S INCLUDED



AI6010-BLK Wireless Speaker

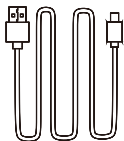


USB-C Charging Cable

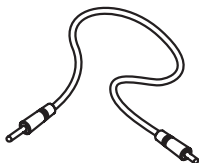


AUX Cable

A CLOSER LOOK

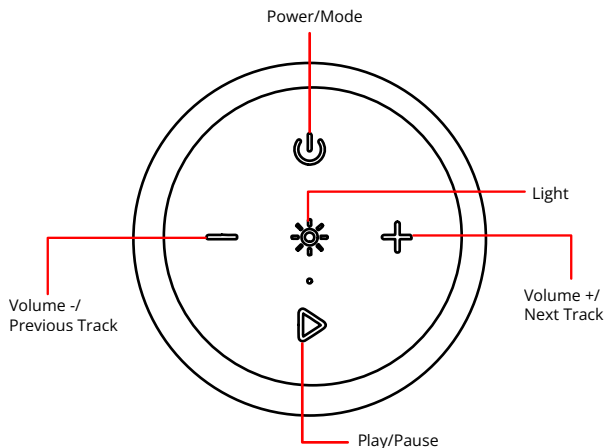


TOP VIEW

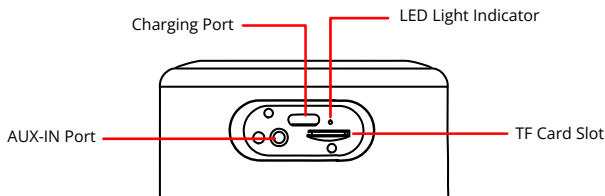



SIDE VIEW

CHARGING

Insert one end of the included USB-C charging cable into the charging port on your speaker.

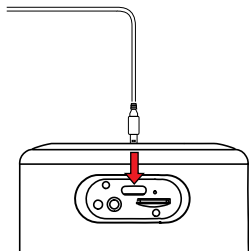


 Insert the other end into the USB port of a computer or suitable USB charging adapter.

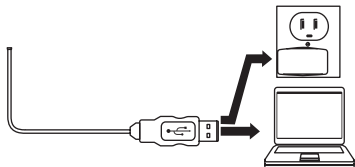


- Charging (Indicator is RED)
- Charging Complete (Indicator Off)

POWERING ON/OFF

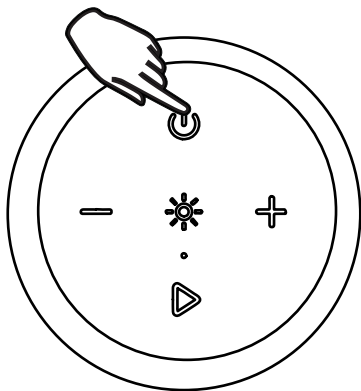

Press and hold the Power button for approximately 2 seconds to power on or power off your speaker.


BLUETOOTH PAIRING

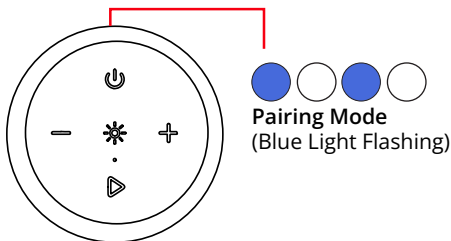

Once powered on, your speaker will go into pairing mode.
The LED Indicator will turn blue and flash rapidly.




Go to the Bluetooth settings menu on your smartphone. Make sure that Bluetooth is turned on. Connect to the device listed as "AIWA AI6010 Wireless Speaker".

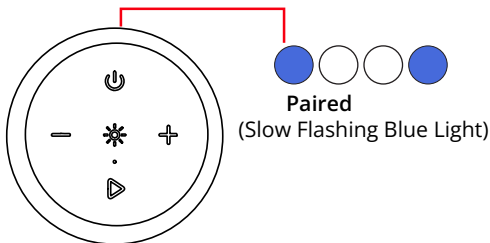

Once paired, the LED Indicator will start to slowly flash blue
and you will hear notification sound.



LISTENING TO MUSIC

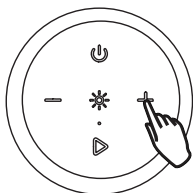

Press the + button to skip to the next track.
Press and hold the + button to increase volume.



Press the - button to go back to the previous track.
Press and hold the - button to decrease volume.

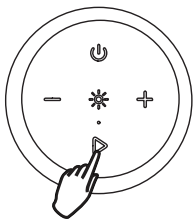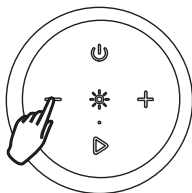

Press the Play/Pause button to play or pause a track.

Changing Modes

Press and hold the power button to switch between modes.




ADDITIONAL FEATURES

TWS Pairing

If you have two AI6010 speakers, enjoy high-quality sound by using the TWS pairing function. Power ON both speakers, then double-press the + button on either speaker. The two speakers will pair together.


You can then go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as 'AIWA AI6010 Wireless Speaker'.

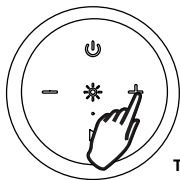

TWS
press x2

Light Mode

Press the light button to switch between light modes. Press and hold the light button to switch lights Off.

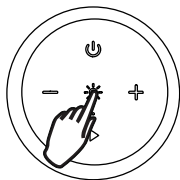

Switch Light Modes
press
Turn Light Off
press & Hold

Phone Controls

If your speaker is connected to a smartphone, you can accept, decline or hang up calls using the Play/Pause button.

AUX IN Port

Connect one end of a 3.5mm Aux cable (included) to the Aux In port on your speaker. Connect the other end to the headphone jack on your audio device in order to listen to music using a wired connection. Press and hold the power button to switch modes until AUX mode plays.

TF Card Port

Insert a Micro SD card into the TF card port on your speaker. Your speaker will automatically switch to TF Card mode once a Micro SD card is inserted. On TF mode, the speaker will play any .MP3 files found on the memory card.

SAFETY PRECAUTIONS

When using your speaker, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not submerge your speaker in water.
3. Only clean using a clean cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

Maintenance and Care

- Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures, extreme cold.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement.
- The device can be used in portable exposure condition without restriction.

SPECIFICATIONS

BLUETOOTH VERSION: V5.3

WORKING RANGE: 10m

OUTPUT POWER: 5W

BATTERY CAPACITY: 1200mAh

WATERPROOF LEVEL: IPX6

VOLTAGE: 5V/1A

PRODUCT SIZE: 8.2 x 8.2 x 10.5 cm

PLAY TIME: 3-4 hours*

(At 50% volume)

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call (877) 397-8200 or visit our website at www.aiwa.co.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.



©2023 Sakar International
195 Carter Drive
Edison, NJ 08817
www.sakar.com
Support: (877)-397-8200
support@sakar.com

© 2023 Aiwa Acquisitions LLC. All rights reserved. AIWA and associated marks are owned by Aiwa Acquisitions and used under license.
www.aiwa.us.com