

## KA220美国说明书

尺寸：100\*130 MM

封面157G铜板纸，彩色印刷，封2封3留白

内页：80G书纸，彩色印刷

# BIGASUO

## Portable Karaoke Machine

### User Manual



MODEL:KA220

# CATALOG

|                             |    |
|-----------------------------|----|
| OPERATING INSTRUCTIONS..... | 1  |
| PRODUCT CONTENTS.....       | 2  |
| SPEAKER DESCRIPTION.....    | 3  |
| MICROPHONE DESCRIPTION..... | 5  |
| DETAILED USAGE GUIDE.....   | 6  |
| PRODUCT ATTRIBUTES.....     | 7  |
| FAQ.....                    | 8  |
| FCC WARNING STATEMENT.....  | 10 |

Thank you for purchasing our products! This manual provides important information that will help you safely operate this karaoke machine. Please read this user manual carefully before using this product. Thank you! If you have any problem with the product, please don't hesitate to email us at:

[us-karaoke-220@eitack.com](mailto:us-karaoke-220@eitack.com)

We will reply to you within 24 hours and give you the best solution.

# OPERATING INSTRUCTIONS

All the instructions should be read carefully before operation and follow the instructions.

- \* The speaker should be situated away from heat sources such as radiators, and not exposed to moist air or water.
- \* Place the machine in a stable place to prevent it from falling down.
- \* Do not use the machine with attachments not approved by the manufacturer.
- \* Check the machine for damage before each use. Please don't attempt to repair the machine if you are not professional.
- \* Disconnect the power cable from the outlet and switch it off before cleaning the machine. Please only use a soft cloth, with no harsh abrasives or chemicals to clean, as they will damage the appearance.
- \* The power cable of the speaker should be unplugged from the socket, and the power switch should be turned off when not in use for a long time.
- \* Please don't leave the speaker and the microphones in a state of exhaustion for a long time, otherwise the battery will be seriously depleted.
- \* When the microphone is turned on, Do not point the microphone to the machine straightly to avoid howling.

# PRODUCT CONTENTS



1 x Portable Karaoke Machine



 
2 x Wireless Microphones



1 x Charging Cable for  
Karaoke Machine



1 x 3.5mm AUX Cable



4 x AA Battery  
for microphones



1 x User Manual

# SPEAKER DESCRIPTION



- **MIC +** : increase/descrease the microphone sound

- **ECHO +** : increase/descrease the reverb volume

**MIC** : 6.35mm microphone input

**AUX**: Aux audio input

**USB**: insert USB Flash drive to automatically decode and switch to playing music

**TF**: insert TF card to automatically decode and switch to playing music

**DC IN** : charging port, DC 5V plugged in For charging

- **VOLUME +** : increase/descrease the karoake speaker sound

**ON/OFF** : Turn on /turn off the device

💡 : short press to switch light effect; long press to turn on/turn off strobe light

**M** : short press to switch playback mode : Bluetooth/AUX/ USB/TF;

Long Press to enter to TWS Pairing

**EQ** : Short press to switch between indoor mode/outdoor mode; long press to cancel the original sound/ restore the original sound

▶▶| : press to switch to the previous song

▶|| : short press to play/pause; long press to disconnect/connect the bluetooth

◀◀ : press to switch to the next song

**Numeric keys:** select songs in U disk/TF card mode

**NOTE:**

- ① The charging indicator light will be red when charging, and the indicator light will be off when it is fully charged.
- ② When the speaker battery is low, it will make a sound.
- ③ Long press ▶|| to disconnect/connect the connected Bluetooth.

## Instructions for use

As you power on, Bluetooth mode is the default. You could search for the Bluetooth device named "BIGASUO KA220" on your phone/iPad for connection. It will be converted to TF card mode when you insert the TF card. It will be converted to USB mode when you insert the USB. It will be converted to AUX mode when you insert the AUX cable. When inserting the TF card, USB and AUX cable at the same time, press the "M" button to convert the mode.

## Singing Instructions

1. When the karaoke speaker is turned on, the wireless microphone is connected to the karaoke speaker by default after it is turned on.
2. When using the mobile phone/tablet to play music, the volume of the karaoke speaker can also be adjusted through the mobile phone/tablet.

# MICROPHONE DESCRIPTION



Long press to turn on /off the microphone



# DETAILED USAGE GUIDE

## How to charge the machine?

Use the included charging cable to plug into the DC 5V charging port on the top of the karaoke speaker to charge.

## How to connect to Bluetooth?

Open the Bluetooth connection settings of the playback device, just search for the machine name "**BIGASUO KA220**" and click connect. When the karaoke speaker is not in Bluetooth mode, press the " M " button to switch the playback option to Bluetooth.

## How to use TF mode?

Insert the TF card (according to the direction of the icon) into the TF card slot on the top panel of the machine. The playback will start immediately.

## How to start AUX mode?(Playing music from an AUX-compatible device like MP3 Player, Phone or TV)

Plug the AUX cable into the designated slot on the top of the machine to activate AUX mode. Then, plug the other end of the adapter into the designated inputs on your device and play music.

## How to use USB mode?(Playing music from a USB drive)

Plug a USB stick into the USB port on the top of the machine and your music will begin playing automatically.

## How to clean?

Turn the machine and microphones off and unplug them from the charging adapter. Gently wipe the outside of the machine using a clean dry cloth. Keep all vents, buttons and openings free of lint and dirt. Do not immerse the machine in water and do not use any harsh cleaners.

## How to store?

Charge the machine and microphones so that they are ready for next use.

Make sure that the machine is clean and dry.

Store the machine in a cool dry place away from damaging machine parts.

## PRODUCT ATTRIBUTES

|                       |  |
|-----------------------|--|
| Model                 | KA220  |
| Blueooth Version      | 5.3  |
| Transmission distance | 20 Meters  |
| Power Input           | Type-C 5V/2A   |
| Support Interface     | MIC input/Aux audio input/ USB Flash drive Port/TF card interface/DC charging port |
| Product Size          | 375mm*235mm*140mm  |
| Product Weight        | 2.39KGS  |
| Material              | Metal +Plastic   |

# FAQ

| Questions                                 | Solution  |
|---|---|
| How to judge whether it is fully charged. | The charging indicator light will be red when charging, and the indicator light will be off when it is fully charged.   |
| The microphone will not turn on.          | The microphone is powered by 2 AA batteries, please install the batteries before use and check if the battery is installed correctly. Or check if the AA battery's power is exhausted.  |
| The machine will not turn on.             | The battery power is exhausted, use it after charging, and be sure to charge the machine after each use.  |
| The speaker volume is too low.            | You can increase the volume of your music with the speaker's volume knob. In addition, the volume of the device connected to the speaker will also affect the sound of the music. You can increase the volume of the playback device to achieve the effect of improving the sound. If the situation cannot be resolved after trying, please contact us in time. |

| Questions  | Solution   |
|--|--|
| What is the order in which songs on USB and TF cards are numbered? | Number according to the order in which songs are stored on USB and TF cards. |

- \* If any of these issues persist or if any part of the machine becomes damaged, discontinue use and consult a licensed electrician for repair.
- \* Do not attempt to modify or repair the machine yourself. If you have any problem with the product, please don't hesitate to email us at:  
**[us-karaoke-220@eitack.com](mailto:us-karaoke-220@eitack.com)**

We will reply to you within 24 hours and give you the best solution.

# FCC WARNING STATEMENT

## FCC Statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- (3) The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

## NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Warning:

The device has been evaluated to meet the general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

**FCC-ID: 2A9JC-KA220**

# **BIGASUO**

## **KARAOKE MACHINE**

## **USER MANUAL**

**MODEL:KA220**