

2. Foot control can be used continuously for about 10 hours, it is recommended to carry mobile power when going out to play! (figure.7)



为了使电池达到最佳的使用寿命, 遥控器在长时间不使用时, 建议给遥控器充满电, 并每隔三个月补充一次。

in order to make the battery to achieve the best service life, if the controller is not used for a long time, please recharge the controller, and do it once every three months.

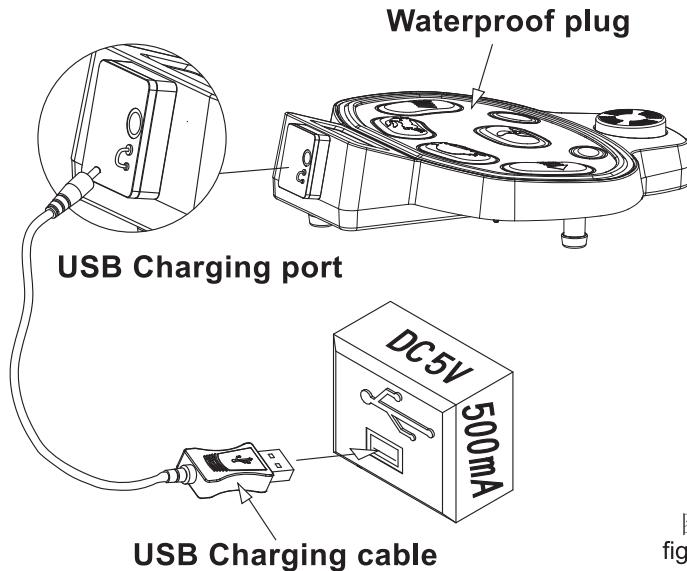


图. 7
figure.7

雅 太 电 器 有 限 公 司

Yatai Electric Appliances Co.,Ltd.

地址: 中国广东省中山市三乡镇南龙新龙街四号

Add:No.4 Xinlong St.Nanlong, Sanxiang,
zhongshan,guangdong Province,China.

邮编/Postcode:528463

电话/Tel:+86 760 86692666

传真/Fax:+86 760 86692996

WWW.HASWING.COM

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
