

MC45


Mounted Computer

Quick Start Guide




Overview



Front(with NFC function)

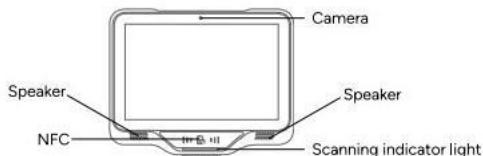


Front(without NFC function)

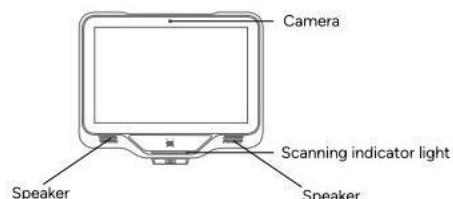

Back

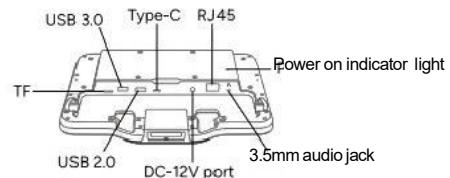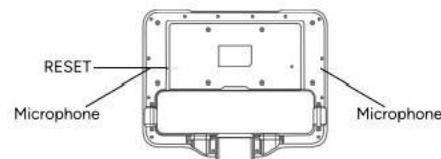

Bottom

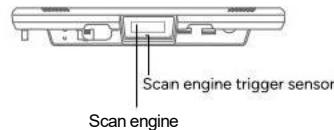



Package Contents

• Device x1 • Power Adapter x1 • VESA Bracket • Quick Start Guide x1

• Long Cross Screws x4 • M4.0*6.0 Cross Screws x5

Power Supply Instructions

- 1.The MC45 mounted computer supports Power over Ethernet(PoE)
- 2.Connect the adapter to the DC-12V port and the other end to the device to complete the power supply.

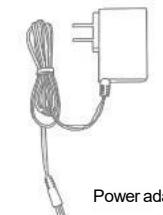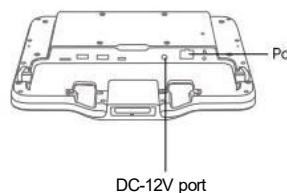

Input:100-240V~50/60Hz 0.6A
Output:12.0V=2.0A

Indicator

日	Powering
)	Volume+
Speaker icon	Volume-
◀	Back
●	Home
■	Menu
▽	Wi-Fi connection
•>	Ethernet connection

Power Options


Power on and off:When powered,the MC45 mounted computer will automatically power on, and when powered off,it will automatically power off.

RESET Key Function


- 1.Screen Power Control:Use a pin to insert into the RESET hole on the back of the MC45 mounted computer to switch the screen on and off.
- 2.Device Restart:Hold a pin to insert the RESET hole on the back of the MC45 mounted computer for 6 seconds to restart the device.
- 3.Recovery Mode:In recovery mode,select the item to confirm the selection.

Install The VESA Bracket:


1.Use four M4.0*6.0 cross screws to connect the square steel plate to the back of the MC45 mounted computer, and tighten the screws with a screwdriver.

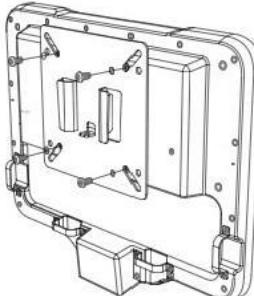

2.Use four long cross screws to secure the trapezoidal small steel plate on the wall.

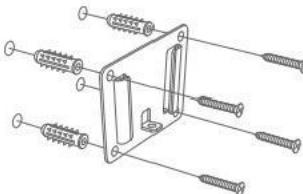

3.After completing the above two steps, hang the MC45 mounted computer with the square steel plate onto the trapezoidal small steel plate and secure it with an M4.0*6.0 cross screw.The installation of the VESA bracket is now complete.

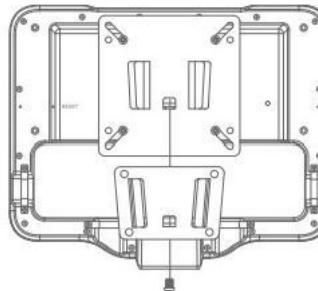

Precautions

- 1.Read all information in this guide before using the device to ensure safe and proper operation.
- 2.Please use only accessories that have been approved by MEFERI and correspond to this model.Using any unapproved power source,charger,or battery etc, may cause fire,explosion,or other hazards.
- 3.Please use the device and accessories within the specified temperature range.Equipment failure may occur if the ambient temperature is too high or too low.
- 4.If the battery is not detachable,do not attempt to replace it yourself to avoid damaging the battery or the device.Battery replacement should be performed by authorized service centers only.
- 5.Do not disassemble the product or its accessories.If the equipment or any of its components malfunction,contact and consult our after-sales service center,or send the device to one of our after-sales service outlets for testing and servicing.
- 6.If the battery exhibits any abnormal signs such as peculiar smell,overheating, color change,distortion,or leakage,remove it from the charger or the device immediately and cease usage.
- 7.The battery is made from flammable and explosive materials.

Do not disassemble,squeeze,drop,or subject the battery to any other destructive operations.Avoid placing the battery in high-temperature environments.

8.Disposal of used batteries must comply with local regulations and policies regarding battery disposal.

Warranty Policy

Warranty Terms:

1.Warranty Duration:Under normal circumstances,the warranty period for the device is 12 months and 3months for accessories,subject to the sales agreement.

2.Coverage Under Warranty:During the product warranty period,if the product is used under normal conditions(as determined by our technical staff),the user is entitled to a free warranty for damaged or faulty parts.

3.Exclusions from Warranty:During the warranty period,faults caused by repairs,disassembly,or modifications made by personnel other than our company,improper installation,misuse by the user(failure to follow instructions), serial number damage,accidents,or natural disasters will not be covered under the warranty.

4.Warranty Void Conditions:The warranty will expire immediately if any alterations are made to the warranty card.

5.Repair Process: Please present the equipment's serial number(SN) and purchase certificate when requesting repairs.The company reserves the right to interpret the contents of this policy.

6. Contact for Assistance:If you encounter any issues when using the device, please email meferi@meferi.com.

Matters needing attention

1、FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.