BC76 FM Transmitter USER MANUAL



IMPORTANT INSTRUCTIONS

1, SAVE THIS INSTRUCTION- This manual contains important safety

1.SAVE THIS INSTRUCTION- This manual contains imponent safety and operating instructions of the product.
2.Please read the instruction carefully before use.
3.For the best audio quality, please set the volume of your phone and FM transmitter to the max, and then adjust the car volume to an appropriate level.
4.If the audio has too much noise, please try another blank FM frequency.
5.To prevent your car battery from being drained, it's better to unplug the product after you turn off the car.
6.Do not expose the product to train, moisture, or snow,
7.Do not disassemble the product, incorrect reassambly may resultin e risk of electric shock or fire.
8.To reduce risk of electric shock, unplug the product before ettempting any maintenence. Turning off controls will not reduce this risk.

FEATURES

FEATURES

1. CG3.0 port for fast charge, output 18W, SV/3A 9V/2A 12V/1.5A max

2. 8 light cotor modes: Red, Green, Blue, Yellow, Purple, Cyan, White and off. Light switch design creates a new etmosphere for the car interior space.

3. Activate phone voice assistance like Siri, Bixby, Google Assistant, etc.,

4. Transmit music/navigation of your Bluetooth enabled phone to car speakers via FM signal.

5. Transmit music from U disk(Up to 32G) to car speak ers via FM signal.

Supports U disk in FAT32 format and music in MP3/WMA/FLAC format.

6. Aux function, transmit music to car speakers by aux connection.

Aux cable supplied.

7. Bass boost function.

8. Bluetooth V5.0, auto-connect with the last connected device.

9. Answer hands-free phone call.

10. Display car battery vollage when plugged into the cigarette lighter.

FCC STATEMENT:

NOTE: This aquipment has been tested and found to complywith the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, find installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment offand on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician forhelp Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning Statements:
This equipment complies with FCC rediation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

DIAGRAM QC3.0 charging port Display screen
Read U diek
Musele
Microphone
LED light — Bass Boost Call button AUX output -L\ght switch

OPERATION: Function Power On/Off

Piug/Unplug the product into/from the car cigarette lighter Display car battery voltage
Plug the product into the car cigarette lighter, the display will show car battery voltage for 1-3 sec.

Adjust frequency
Press the "CH" button first, the display will show the frequency number and keep fleshing, then push the middle MFB button up/down to change its frequency. Play/ Pause music Press the "Phone Button" button onca
Answer/Hang up a call Press the "Phone Button" when there is an incoming call
Rejecta call Press and hold the "Phone Button" for 2 seconds
Redial the lastnumber Press the "Phone Button" twice

2

How to install: 2 Ways: 1. By FM Radio; 2. By AUX Connection 1.By FM Radio Bluetooth Mode: Step 1-5 U Disk Mode: Step 1,3,4,6

Transmit music to car speaker

Switch call audio

3

Under the call mode, push the MFB button up/down to switch the call audio from private phone call mode or audio broadcast mode.

phone call mode or audio broadcast mode.

Push and hold the "MFB" updown

Next/Previous Song

Switch light mode

Press the "Light Switch" button updown

Switch music source

If Bluetooth and U disk are both connected
the same time, press and hold the "CH"
button to switch from Bluetooth mode or


U disk mode music, when switch back to
Bluetooth mode, you need to press

"Phone Button" once to start the music.

Activate phone voice assistance When Bluebooth is connected, press and hold the light switch button to activate phone voice sesistant.

Base boost on/off Press the "8" button, "Eq0" showing on display means normal, "Eq1" means bess boost.

1.Plug the transmitter into your car cigarette lighter, the display will show the bettery vollage first and then" bt" and keep flashing, which means it is in pairing mode.

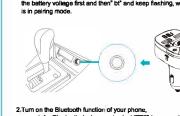

The display will stop flashing once it is paired successfully.

4

DEVICES O

3.Tune the car FM radio to a blank frequency, for exemple: 88.1,
 Any station is fine as long as it is not in used, blank (no broadcast).
 Please note that you should set your car radioto a "Manual Search" mode.
 The radio will skip the blank FM frequency automatically if it is under the



4.Pair the frequency on the product with the same one of the car FM radio. (Please refer the OPERATIONS Pair 'Adjust Frequency')
Press the "CH" button, the display will show the frequency number and keep flashing, then push the middle MFB button up/down to change its frequency.

FM 108.0 Car stered

FM 88.1



B

5. When both of the frequencies are matched, you can then play music or navigetion through you roar speakers or answer hands free call. Tip: Please set the phone volume end transmitter volume to the max level first, then adjust your car volume to an appropriate level to get the best sound quality.




If you want to use an U disk, please also set up the product by following step 1, 3, 4 and insert the U disk into the product. It will se y "UDisk play" and it will aromatically detect and play the music. (MPS/WMAFLAC format)



2.By AUX Connection: If there is no blank FM station or there is too much noise and your car also has an aux port, you can use the supplied aux cable to connect the device with your car speakers by aux connection. It doesn't need to use the FM radio. Bluetooth Mode: Step 1-5 U Disk Mode: Step 1,3,4,6

Plug the transmitter into your car cigarette lighter, the display will show the battery voltage first and then' bi' and keep flashing, which means it is in pairing mode.

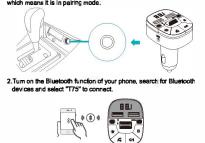



ALEX in mode



B

If you want to use an U disk, please also sel up the product by following step 1, 3, 4 and insert the U disk into the product.
 It will say "D lisk play" and it will aromatically detect and play the music.
 (MP3/WMAFLAC format)

Note: The transmitter supports U disk in FAT32 format. If the transmitter does not read the U disk, please re-format the U disk to FAT32.



For the best euclic quality, please turn up the volume of your phone and the FM transmitter to the max level then adjust your car volume to

an appropriate level .

2. If the audio has too much noise, please try another blank radio

frequency.

3. To prevent your car battery from being drained, it's better to unplug FM radio, you can use the supplied aux cable to connect.

The transmitter can connect directly with the car speakers with the supplied AUX cable. It doesn't need to rely on the FM radio or to use

8

CORRECT DISPOSAL OF THIS **PRODUCT**

X

(Waste Electrical & Electronic Equipment)
This making shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of Its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable Household user should contact either the retailer where they purchased this product or their local government office for details of where and how they can takethis item for environmentally safe recording.

recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial westes for disposel.

6

The display will stop flashing once it is paired successfully. 7