



Charge It

Please fully charge the tool before use (5 hours).
The red light will be on when charging, and the green light will be on when fully charged.
When the machine is working, the green light flashes to indicate that there is no power, and it needs to be recharged at this time.

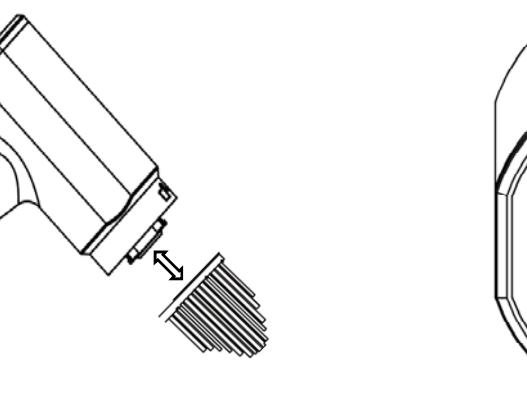


Choose & Attach Cleaning Parts

The matching 5 heads can reach your various cleaning needs.
Before attach cleaning parts, the machine should be in the stop state. According to the lock and unlock rotation direction marked on the machine, the brush head can be installed or removed by rapid rotation.

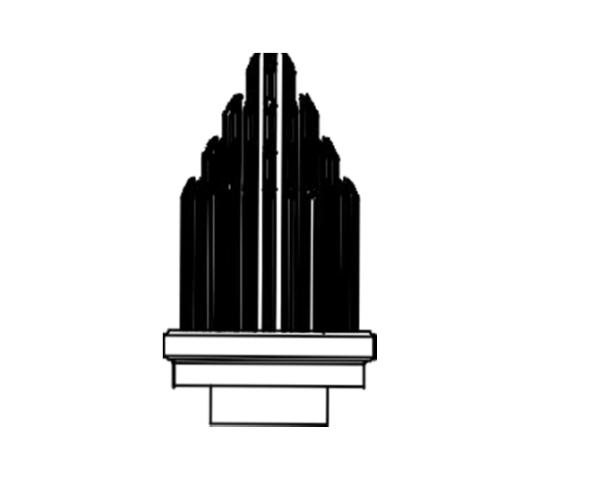


Working

1. Press the ON/OFF switch once to enter the high-speed working mode. You can use an egg beater to stir eggs, or use an appropriate brush head to remove stubborn stains.
2. Press the ON/OFF switch twice to enter the low-speed operation mode. You can use an appropriate brush head to clean the porcelain surface. Hold it firmly and use with a light pressure as you move the tool back and forth over the surface to be cleaned.
- If too much pressure is applied, the tool will be turned off.
- The Versa is designed to shut off if too much pressure is applied.

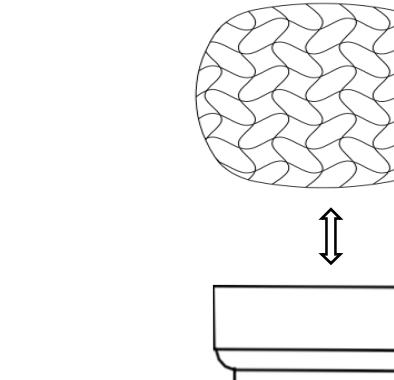

Heavy Duty Brush

Easy cleaning of corners and recesses of sinks and gas stoves, and powerful removal of stubborn scum in ovens.

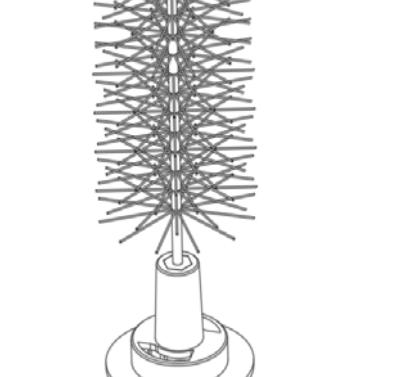


Sponge Brush

Multi-purpose accessory for hard surfaces including counter tops, floors, doors, walls and more.




Nano Eco-friendly Cleaning Brush

Effective decontamination, no damage to hands, no damage to the glaze of dishes, cookware, pots and pans.

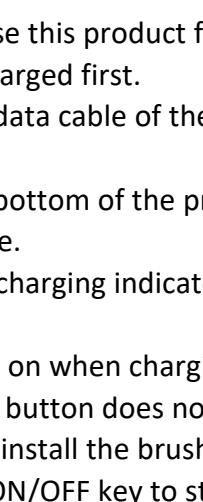


Coffee Cup Brush

Clean residual dirt on coffee cups, also can be used to brush wine glasses, tea egg yolks and sugar into a smooth paste.

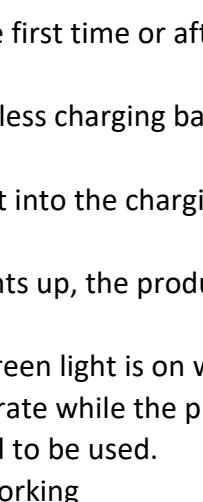

Eggbeater Head

As a portable electric whisk mix the egg yolks and sugar into a smooth paste.

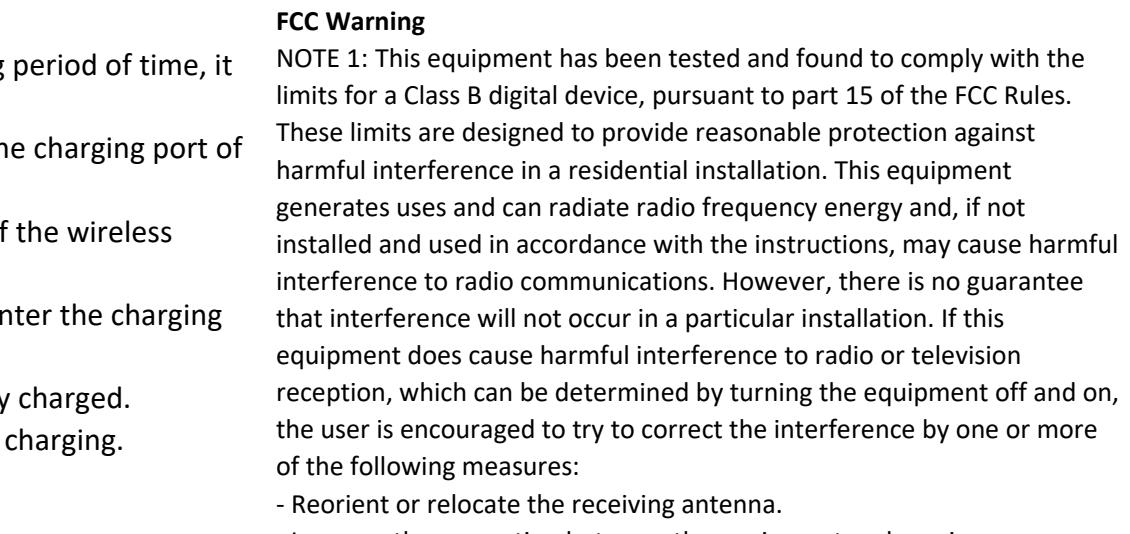

How to Use

When you use this product for the first time or after a long period of time, it should be charged first.

1. Insert the data cable of the wireless charging base into the charging port of the adapter.
2. Insert the bottom of the product into the charging slot of the wireless charging base.
3. When the charging indicator lights up, the product will enter the charging state.
4. Red light is on when charging, green light is on when fully charged.
5. The switch button does not operate while the product is charging.
6. Select and install the brush head to be used.
7. Press the ON/OFF key to start working.



Attention

If water or sundries enter the charging hole of the charging base, please clean it before charging, otherwise the charging will fail.

Please do not charge or maintain the product under 0°C or above 40°C, otherwise it will decrease the performance of the product.

Please do not hang debris on the power cord during charging.

During charging, if the temperature of the charger rises, it is a normal phenomenon.

When charging, make sure the charging plug is tightly plugged in, otherwise the charging operation may not be carried out.

Please note that slight water flow may occur due to.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Refer to KB 78478 Annex section A.5:

(a) Max. Electric Field Emission: 0.241V/m

Max. Magnetic Field Emission: 0.234A/m

(b) The maintenance of the system is the responsibility of the manufacturer.

(c) To prevent interference, the product should be as far away from devices operating at the same frequency as possible.

RF exposure considerations

This equipment complies with the FCC RF radiation exposure requirements for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

