

## MINI Printer Manual



English ..... 01-06  
 España ..... 07-10  
 Deutsch ..... 11-15  
 Italiano ..... 16-20  
 日本語 ..... 21-25  
 Français ..... 26-30

Please read the instructions carefully before using this product  
 The specification is for reference only, the specific operation shall be in kind

## Brief introduction

Welcome and thank you for choosing our products, in order to understand and use our products more quickly, it is recommended that you read this manual carefully before use, and keep it properly. If there is any reference error, we hope that users changed without notice.

This product is a unique and creative design, designed for children's digital products, so that children in use to learn more imagination play, experience the fun of nature.

**Key interface specification**  
 Print lamp Charge  
 Power button Paper Bin  
 Please charge for the first time and unplug the charger before use


-01-

## English

## Power indicator status

	Green light is on/quick flash	Standby/charge completed
	Red light is always on/off	Charging/Charging completed
	Green light is flashing	Print head hot/no paper

Use the wizard  
 1. Charge for 1-2 hours before use and remove the power supply. Press and hold the power button for three seconds to turn it on/off.

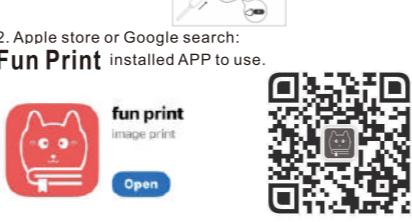

2. Apple store or Google search:  
**Fun Print** installed APP to use


3. Turn on the Bluetooth function of the phone and connect the printer from the "My printers" option of the downloaded application. After a successful connection, printing can be used.

-02-

## English

## Paper replacement course


1. Take out the old paper roll and put the new paper roll in the direction shown. The paper needs to be straight, do not let it be crooked. (Note: The new thermosensitive paper needs to be exposed to 2 cm / 0.787in)

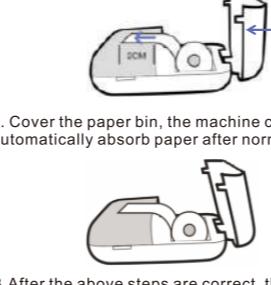

2. Cover the paper bin, the machine can automatically absorb paper after normal use.



3. After the above steps are correct, the machine can print normally.

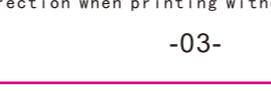

Please pay attention to the paper loading direction when printing without pictures

## English

## Battery Warning Note

1. Please use 5V 1A charger to charge according to the specification to avoid damage to the machine.
2. Disassembly, impact, extrusion or fire are prohibited;
3. If severe bulging occurs, do not continue to use;
4. Do not expose the battery to high temperature, battery and immersion is prohibited to use;
5. Replacement with the wrong type of battery can be explosive, be sure to follow the instructions to dispose of used batteries.

## Matters needing attention

1. When charging, please gently insert or pull out the charging line to prevent excessive force from damaging the port;
2. After charging, please unplug the charging line in time;
3. In order to avoid danger, do not use or charge in high temperature, high humidity, excessive smoke and dust environment, avoid direct sunlight, strong wind, fire, etc;
4. Improper charging may lead to print head damage;
5. Do not touch the print head to prevent overheating and scalding;
6. Tear paper blade sharp, be careful not to touch.

-03-

## English

## Q1: Did you find a printer that can be connected?

A: 1. Please charge to ensure Bluetooth is working properly.

## Q2: Printer connection issue

A. Please turn on the Bluetooth function of your phone again and make sure the possibility of connecting to the printer (if someone is connecting to the printer, the power light will not flash).

B. Once the thermal paper is used up and replace the printing paper in a timely manner. If the print head overheats, please turn the print head to cool before attempting printing. Restart the printer.

## Q3: What if the printer cannot print?

A. Confirm whether the Bluetooth of the phone is turned on and make sure the possibility of connecting to the printer (if someone is connecting to the printer, the power light will not flash).

## Q4: Print out no screen/print out white paper?

A: Answer: Please turn the paper roll in the opposite direction. Please make sure the printing surface (smooth surface) points towards the printing port.

## Q5: Printing unclear?

A: Please try changing the print density.

B: If the print quality is not good, you can adjust the contrast or use the original image for printing.

C: Please make sure the power is stable and the power supply of over 50%.

D: please use a cloth with 75% isopropyl alcohol to wipe the print head to ensure it is clean and dry.

## Q6: No paper output after successful printing?

A: Rewind the paper, it should not be fluffy.

-05-

## Information to User

## English

Note: This class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Increase the separation between the equipment and receiver.
- 2. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 3. Consult the dealer or an experienced radio/TV technician for help.
- 4. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- 5. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 6. This device has evaluated to meet general RF exposure requirement.
- 7. The device can be used in portable exposure without restriction.

-06-