


Portable Mini Printer

Operating Manual

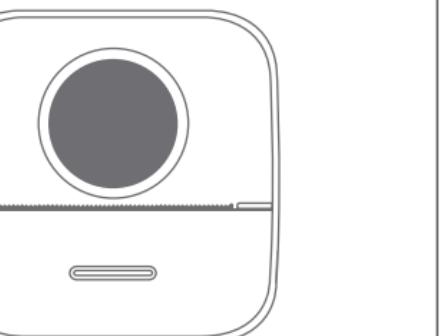

Warm Prompt: Specifications and parameters may be changed depending on the configuration of the model. Please refer to the actual product.

Brief Introduction


Thank you for using the intelligent digital products produced by our company. We have randomly equipped with detailed instructions, from which you can obtain instructions on the use of the products. Please read the instructions carefully before you start using this machine, so as to facilitate you to use this product accurately. When the contents involved are changed, no notice will be given.

This product is a unique shape, exquisite design, easy to operate Portable mini printer, designed for children's digital products, so that children in use to learn more imagination play, experience the fun of nature.

Maintenance and maintenance

This product should not be placed in wet environment for a long time, please wipe the surface stains with dry cloth. Wires, plug shells and other components must be regularly checked for damage, and damage should be stopped immediately until repaired, in order to reduce battery aging and swelling; If it is not used for a long time, it needs to be charged once every three months or so.

Key/interface specification

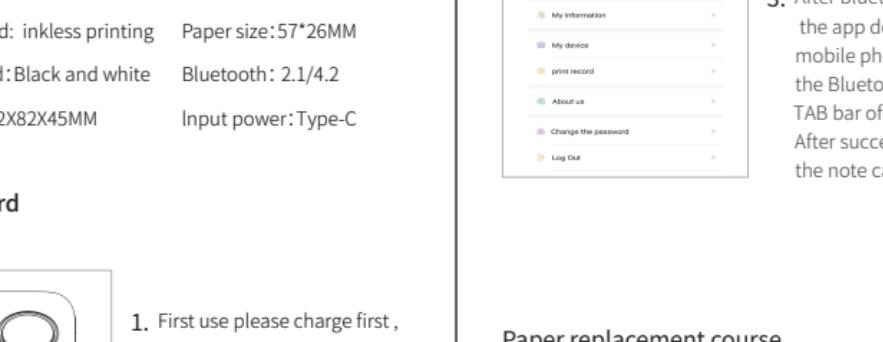


Indicator status

Green light flash:Normal use status.
Red light on:Out of paper/Overheat/Cover opened.
Red/Green light flash:low power

Product specification

Battery capacity:800mAh Sharpness: 200dpi
Printing method: inkless printing Paper size:57*26MM
Display method:Black and white Bluetooth: 2.1/4.2
Product Size:82X82X45MM Input power:Type-C

Use the wizard

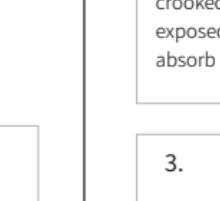

1. First use please charge first, long press the power key 3 seconds to boot.



2. Apple store or Google search: Tiny Print insalled APP to use.

Tiny Print

press both sides inward according to the direction indicated by arrow 1, while opening the paper bin cover lid upward as shown in arrow2.

Cover the paper bin, the machine can automatically absorb paper after normal use

4.



After the above steps are correct, the machine can print normally.

2.



After the above steps are correct, the machine can print normally.

3.



After the above steps are correct, the machine can print normally.

1.



After the above steps are correct, the machine can print normally.

FC statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. This equipment is designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Battery Warning Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has evaluated to meet general exposure requirement. The device can be used in portable exposure without restriction.