

MINI PRNTER

Instruction manual

English.....	1-6
Deutsch.....	7-8
Francais.....	9-10
Italiano.....	11-12
Espanol.....	13-14
Cestina.....	15-16
Nederlands.....	17-18
Svenska.....	19-20
E λ Χ η V I K Q.....	21-22
Polski.....	23-24
Magyar.....	25-26
Dansk.....	27-28
日本語.....	29-30
한국어.....	31-32
33-34.....	اللغة العربية.....
Português.....	35-36
Russian.....	37-38

Please read the instructions carefully before using this product


The specification is for reference only; the specific operation shall be in kind

Introduction

EN

Welcome and thank you for choosing our products. In order for you to understand and use the product correctly, it is highly recommended that you read this manual carefully before use and keep it properly for future reference. The warnings and precautions in the manual should be followed; if there are any reference errors; I hope that users understand that the design content is subject to change without prior notice!

Key/interface specifications

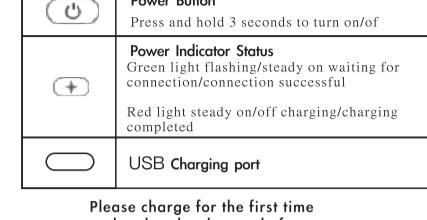

Please charge for the first time
and unplug the charger before use

1

Use the wizard

EN


1. Please charge for 2 hours before use, then unplug the power supply; press and hold the power button for 3 seconds to turn on.



2. Search **fun print** in the mobile app store and download and install the app



3. Open the app, go to **My → My Devices**
Search and connect to the mini printer

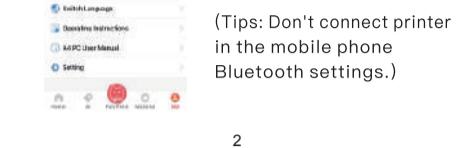


(Tips: Don't connect printer
in the mobile phone
Bluetooth settings.)

2

Paper replacement course

EN

 1. Insert the new paper roll according to the direction shown in the figure. (Note: 2cm/0.78 inches of the paper roll must be exposed. The paper needs to be rolled up to reduce the diameter due to expansion.)



2. Cover the paper box and the machine can automatically absorb paper after normal use.



3. After the above steps are correct, the machine can print normally.



Please pay attention to the paper loading direction when printing without pictures

3

BatteryWarning Not

EN

1. Please use a 3V 1A charger to charge according to specifications to avoid damage to the machine;
2. Do not disassemble, impact, squeeze or burn;
3. Do not continue to use if severe swelling occurs;

4. Do not place in a high temperature environment, and do not use the battery after it is soaked in water;

5. Replacing the battery with the wrong model may cause an explosion. Be sure to dispose of the used battery according to the instructions.

Matters needing attention

EN

1. When charging, please gently insert or unplug the charging cable to prevent excessive force from damaging the port.

2. After charging, please unplug the charging cable in time;

3. To avoid danger, do not use or charge in environments with high temperature, high humidity, excessive smoke and dust, such as: bathrooms, steam rooms, open flames, etc.

4. Improper charging may cause damage to the print head;

5. Do not touch the print head to prevent overheating and burns;

6. The tearing blade is sharp, be careful not to touch

A: Please try to adjust the print density.

B: If the image printing effect is not good, you can adjust the color saturation and brightness in the app.

C: Please charge in time and keep the power supply above 50%.

D: Please use a cotton swab to wipe the print head and make sure it is clean and dry.

Q6: No paper will come out after printing successfully?
A: Rewind the paper and it should not be fluffy

4

Q&A

EN

Q1. Didn't find a printer to connect to?
A1: Please charge, press and hold the power button for 3 seconds to turn on.

Q2. Printer connection problem

A: Please turn on the Bluetooth function of the mobile phone again and connect the printer in the APP.

B: Is the printer connected to multiple mobile phones? This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has evaluated to meet general RF exposure requirement.
The device can be used in portable exposure without restriction.

5

EN