

Q325_MCC_GLOW_PRJ_LIGHTBULB_1000097885

PROJECT/WF#: 3060051

GRC/PLM#: 1000097885

TECHNICAL SPECIFICATIONS

PROCESS COLORS:

c

m

y

k

PRINT @ 100%

Packaging Size: 2.5" x 4"

Print Technique: 4 COLOR PROCESS

Finish Type: MATTE

Special Printing/Material: FOIL ACCENTS

Designer: HELYNN HALLOCK

Item: STARLIGHT - NONE- INTERACTIVE BUBBLE WAND- HANGTAG

Date: 11/01/23

Category: GLOW

Round: FMA

Season: Q325

NOT A FINAL MECHANICAL. CREATE MECHANICAL TO PACKAGE SPECIFICATIONS USING LAYOUT PROVIDED. ACTUAL DIE-LINE NEEDS TO BE CREATED BY THE VENDOR.

TARGET PKG COLORS

ALL COLORS SHOULD BE PRINTED USING CMYK. 4-COLOR PROCESS UNLESS OTHERWISE NOTED.

VENDOR TO USE THESE TARGET COLOR PANTONES BELOW FOR COLOR MATCHING ONLY.

DISNEY White

C0-M0-Y0-K0

DISNEY Black

C60-M40-Y40-K100

PANTONE 269 C

PANTONE 7662 C

PANTONE 297 C

PANTONE 2004 C

PANTONE 712 C

PANTONE 9440 C

PANTONE 274 C

Special Printing:

IRIDESCENT FOIL

OUTSIDE

FCC ID: 2A90KMGVB8I

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE PRODUCT BEFORE BEING CHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES ARE NOT TO BE MIXED. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE PRODUCT. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES WHEN NOT IN USE OR DISCHARGED.

THIS PRODUCT MAY BE SUPPLIED IN THE RELEVANT COUNTRY/REGION BY: IN U.S. – DISNEY MERCHANDISE SOURCING & DISTRIBUTION, LLC BURBANK, CA 91521 **DisneyStore.com** © DISNEY

FPO

2.402 GHZ - 2.480 GHZ
MADE IN CHINA
1000097885

FAC098396-25094 SHANTOU-LOT 13903

3+

DREAM THE NIGHT AWAY

INTERACTIVE BUBBLE WAND

INTERACTS WITH PARADE!

Contains: 3.04 fl. oz (90 ml)

IRIDESCENT FOIL

3+

DREAM THE NIGHT AWAY

INSIDE

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

REQUIRES 3 AA (1.5V) BATTERIES, INCLUDED. WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITIZED INDIVIDUALS. WARNING! CHOKING HAZARD – SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

VENDOR TO GLUE LEAFLET HERE

TOP PANEL COVER

DO NOT PRINT DIE OR DOTTED LINES

2.5"

1.9"

INTERACTIVE BUBBLE WAND INSTRUCTIONS

INTERACTS WITH PARADE!

Bubbles and Glow Mode: Press the front button to change colors. Bubbles will start automatically.

Hold the front button for 2 seconds to send colors to another wand. Keep the switch on current position to interact with the parade!

Glow Mode: Press the front button to change colors.

Hold the front button for 2 seconds to send colors to another wand. Keep the switch on current position to interact with the parade!