

ULTIMEA

USER MANUAL

POSEIDON E100 Smart Projector

STREAM INTO THE BRIGHT WORLD



Model No.: U0840

Poseidon E100

Contents

05	Smart Projector User Manual	English
12	Smart-Projektor-Benutzerhandbuch	Deutsch
19	Manuel d'utilisation du projecteur intelligent	Français
26	Manual de usuario del proyector inteligente	Español
33	Manuale utente del proiettore intelligente	Italiano
40	Manual do usuário do projetor inteligente	Português
47	Gebruikershandleiding voor slimme projectoren	Nederlands
54	Instrukcja obsługi inteligentnego projektora	Polski

61	Användarmanual för smart projektor	Svenska
68	Akıllı Projektör Kullanım Kılavuzu	Türkçe
75	スマートプロジェクターユーザーマニュアル	日本語
82	智能投影仪用户手册	简体中文
89	智慧投影機使用手冊	繁體中文
96	스마트프로젝터 사용설명서	한국어
103	دليل استخدام جهاز العرض الذكي	العربية

WE ARE
READY
TO HELP



support@ultimea.com

Prefer video tutorial?

Setup guidance video and
User Manuals on ULTIMEA
website.



support.ultimea.com

@ultimea_official



+1 888-598-8875 (US) Mon-Fri 9am-5pm (PST)
+49 89-628-25828 (EU) Mon-Fri 9am-5pm (CET)

1 What's Included



Poseidon E100
Smart Projector



Remote Control
(Batteries not included)



User Guide



HDMI Cable

 


Power Adapter



Power Cord


2 Remote Control

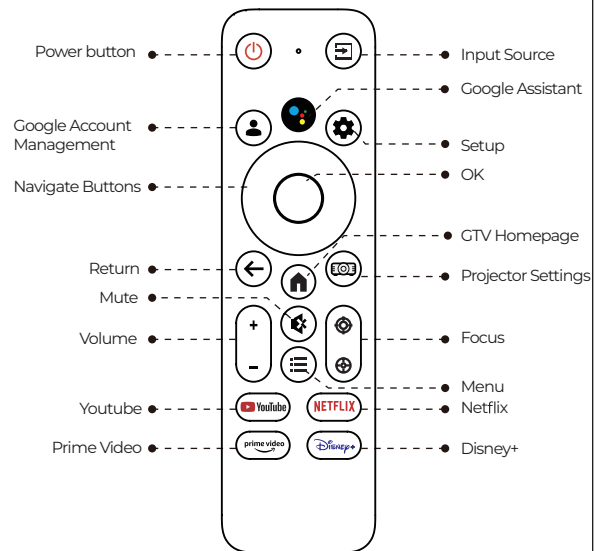


3 Get Started

Power On/Off

 - The projector is powered on by the power adapter, and the power indicator light turns blue.
- When the indicator light of the power button on the projector body changes from blue to red, press and hold the power button on the device or remote control for 1s to turn it on. After turning it on, the indicator light will turn blue and stay on.
- To shut down, press the power button again. The light turns red.

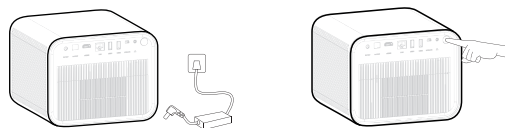

Placement

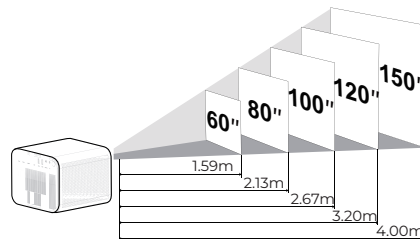 

- Place Poseidon E100 on a stable, flat surface in front of the projection surface.
- Please adjust the distance between Poseidon E100 and the projection surface to get the desired projection image.

Projection Distance and Projection Image Size

Projection Image Size(inch)	Distance(m)	Distance(ft)
60	1.59	6.26
80	2.13	8.39
100	2.67	10.5
120	3.20	12.6
150	4.00	15.7

Notice: The projection image size refers to the distance of the diagonal of the image size instead of the length of the image size.

Auto Focus

- Turn the device towards a suitable projection surface or wall, the Poseidon E100 will enter autofocus until get a clear image.

Focus Manual


- Press "⊗" / "⊕" on the remote control to manually adjust the focus. Please carefully observe the focus icon until you get a clear image.

Auto Keystone

- When the projector image is distorted, it will perform auto keystone correction to restore the image to a rectangle. If you find the auto keystone correction does not work as well as before, follow the instructions below to optimize it.
- Press the ⊗ button to go to projector home menu, [Settings]->[Projector]->[Auto Keystone (On)].

Trapezoid

If the projected image is stretched or distorted along both axes due to the angle of the projection, press the button  to go to projector home menu, and select [Settings]->[Projector]->[Auto Keystone (Off)]->[Trapezoid], choose the corner you want and press left or right button on the remote control to adjust.

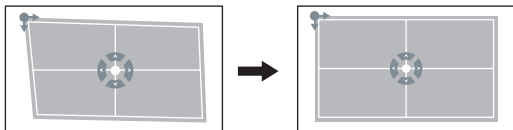 

Keystone Correction Reset

To restore the default settings, press the  button to go to projection settings. Select [Settings]->[Projector]->[Auto Keystone (Off)]->[Trapezoid reset].

Zoom In / Out

Press the  button to go to projection settings. Select [Settings]->[Projector]->[Auto Keystone (Off)]->[Zoom]. Use the remote control to resize the picture size.

4 Projection Settings



Desktop Front Projection



Ceiling Front Projection



Desktop Rear Projection



 
Ceiling Rear Projection

Press the  button, [Settings]->[Projector]->[Projection mode], select Desktop Front Projection/Desktop Rear Projection/Ceiling Front Projection/Ceiling Rear Projection.

5 Pair Remote Control


Power on the projector and you will enter Bluetooth remote pairing page. Follow the on-screen instructions to complete the pairing.

- ① Please hold the remote near the projector
- ② Long press  and  together for about 10 seconds.
- ③ When the screen shows "Connected Successfully", your remote LED indicator turns off, and the remote control is paired.



6 Select Your Language

 After pairing the remote control, you will be guided to a page to select language, use remote control  or  to select your language. Then press  button to enter the next page.

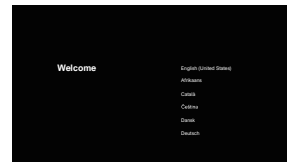

Google TV Setting

Follow the setup wizard on Google TV, set up a Wi-Fi connection, select the available Wi-Fi and enter the password, sign in to a Google account, and carry out other related procedures. When you complete the Google TV setup wizard, the Google TV home screen will appear. Now you can start watching your favorite shows by downloading streaming apps.

Notice: Due to the requirements of Google TV, using Google TV requires you to sign in to your Google account. If you have not registered your Google account, please complete the registration before proceeding with use.

Play Through External Sound Devices via Bluetooth

If you want to connect to Bluetooth speakers/headphones on the Google TV interface, select [Settings]->[Remotes & Accessories]->[Add accessory], search for Bluetooth device and click pair.

Note: The Bluetooth connection must be established inside Google TV.

 
Add New Google Account User

Register a new Google account using Google TV for easier login and payment security. [Settings]->[Accounts & sign-in], add an account or switch accounts.


7 Top Shortcut Menu

By pressing the Up navigation key on the remote from the home screen, a top shortcut menu will appear with the following options:

- HDMI Source
- Screen Mirroring
- Skin (UI theme)
- eManual
- Chrome Browser
- Bluetooth Audio
- Clean Up (system cleaner)
- Power Off

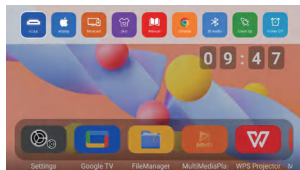

8 Wired Connections

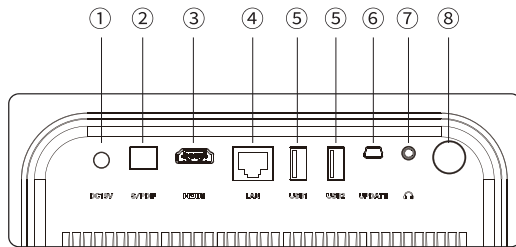 

- ① DC 19V: This port is used to plug in the power adapter for power.
- ② S/PDIF: This port is an optical fiber port, which is used to connect devices with the same port to play audio and video, such as DVD.
- ③ HDMI: The device supports connecting various HDMI playback devices through this port, such as PC, DVD player, set-top box (STB), game console or other devices. Press the button on the remote control to select [HDMI], and then press OK.

④ LAN: Connect the network cable to the projector through this port to transmit faster and more stable network.

⑤ USB 1& USB 2: Read files on the USB storage device through this port. You can enjoy music, videos and pictures, or install applications stored on the USB storage device.

⑥ Update: Only for projector software upgrade.

⑦ Aux: Connect the 3.5 mm AUX cable to the AUX port of the headphone or external speaker to play sound.

⑧ Power button: Use this button to turn the projector on and off.

9 Specifications

OS Version: Google TV: Android 11.0 ;

Android TV: Android 13.0

Native Resolution: 1920*1080p

Speaker Drivers: 10W*2

Throw Ratio: 1.2:1

Aspect Ratio: 16:9 / 4:3

Recommended Screen Size : 20" - 150"

Power Input: DC 19.0V 6.32A

Safety Instructions

Please read the instructions before use. Do not change any settings not described in this manual. Damage caused by unauthorized operations is not covered by the warranty.

Setup

- To avoid personal injury or property damage, operate strictly according to the instructions. Do not use the device for any other purposes.
- To reduce the risk of fire or electric shock, do not expose the device to rain or moisture. Do not place vases or other containers with liquids on the device.
- Do not place the device on soft surfaces such as tablecloths or carpets to prevent fire hazards.
- Avoid placing the device in dusty environments or near strong magnetic fields.
- To prevent overheating, do not block the ventilation openings.
- Never place this device in a confined space. Always leave enough space around this device for ventilation.

- Avoid overexposing this device to direct sunlight, heat, large temperature fluctuations, and moisture. Avoid extreme temperatures.
- When this device is running for a long period of time, the surface may become hot. If this occurs, shut it down immediately and unplug the charger. Resume operation after the device has cooled down.
- Always handle this device with care. Avoid touching the lens.
- Do not allow children to handle the device without supervision.
- Do not place heavy or sharp objects on this device.
- To avoid electric shock, do not disassemble the device.
- Avoid extreme vibration. It may damage the internal components.
- Only use attachments or accessories specified by the manufacturer.
- Please comply with the laws and regulations of the country and region where the equipment is located (used), observe professional ethics, pay

attention to safety obligations, and strictly prohibit the use of our products or equipment for any illegal purpose.

- When using the projector in a dark environment, please ensure audience safety. Place the projector and power cord in areas where they will not be easily tripped over or touched. Avoid crossing cables to reduce risks.

Power Supply

- Use only the provided power adapter.
- Power off the device before removing the power supply from the socket.
- Protect the power cord from being walked on or pinched, particularly at plugs.
- Unplug this device if there are lightning storms or when unused for a long period of time.
- Disconnect all devices from power before making or changing connections.
- Never touch the power cable or the power connector with wet hands.

Hearing Safety

- To prevent hearing damage, do not listen for extended periods at high volume. Set the volume to a safe level.

Caution

- Do not stare directly at the operating beam. The bright light may damage your eyes.

Cleaning

- Use a soft, lint-free cloth. Never use liquid, gaseous, or easily flammable cleansers to clean.
- Do not use any liquid cleaning agents to clean the lens to avoid damaging the coating film on the lens.
- Wipe the surfaces gently. Be careful that you do not scratch the surface.
- Use lens cleaning paper to clean the lens.

Repairs

- Do not make any repairs to this device yourself. Only have your device repaired by an authorized service center.

- Improper maintenance can result in injuries to persons or damage to this device.

System

- The system supports Google TV. The interface may be updated over time. If there is any discrepancy between the actual interface and this manual, please refer to the actual interface.

Sicherheitshinweise

Bitte lesen Sie die Anleitung vor der Verwendung. Ändern Sie keine Einstellungen, die in diesem Handbuch nicht beschrieben sind. Schäden durch unsachgemäße Bedienung sind nicht durch die Garantie abgedeckt.

Aufstellen

- Um Verletzungen oder Sachschäden zu vermeiden, verwenden Sie das Gerät ausschließlich gemäß den Anweisungen.
- Verwenden Sie das Gerät nicht für andere Zwecke.

- Zur Verringerung der Brand- oder Stromschlaggefahr setzen Sie das Gerät weder Regen noch Feuchtigkeit aus. Stellen Sie keine Vasen oder andere Flüssigkeitsbehälter auf das Gerät.
- Stellen Sie das Gerät nicht auf weiche Oberflächen wie Tischdecken oder Teppiche, um Brandgefahr zu vermeiden.
- Vermeiden Sie den Einsatz in staubigen Umgebungen oder in der Nähe starker Magnetfelder.
- Blockieren Sie keine Lüftungsöffnungen, um eine Überhitzung zu vermeiden.
- Setzen Sie dieses Gerät nicht übermäßig direkter Sonneneinstrahlung, Hitze, großen Temperaturschwankungen und Feuchtigkeit aus. Vermeiden Sie extreme Temperaturen.
- Wenn dieses Gerät über einen längeren Zeitraum läuft, kann die Oberfläche heiß werden. Wenn dies geschieht, schalten Sie das Gerät sofort aus und trennen Sie das Ladegerät vom Stromnetz. Nehmen Sie den Betrieb wieder auf, nachdem das Gerät abgekühlt ist.
- Gehen Sie stets vorsichtig mit diesem Gerät um. Vermeiden Sie es, die Linse zu berühren.
- Erlauben Sie Kindern nicht, unbeaufsichtigt mit dem Gerät umzugehen.
- Stellen Sie keine schweren oder scharfen Gegenstände auf dieses Gerät.

- Um einen Stromschlag zu vermeiden, zerlegen Sie das Gerät nicht.
- Vermeiden Sie extreme Vibrationen. Es kann zu Schäden an den internen Komponenten kommen.
- Verwenden Sie nur vom Hersteller angegebene Aufsätze oder Zubehörteile.
- Bitte halten Sie sich an die Gesetze und Vorschriften des Landes und der Region, in der sich die Ausrüstung befindet (verwendet wird), beachten Sie die Berufsethik, achten Sie auf Sicherheitsverpflichtungen und verbieten Sie strikt die Verwendung unserer Produkte oder Ausrüstung für illegale Zwecke.
- Achten Sie bei der Verwendung des Projektors in dunkler Umgebung auf die Sicherheit der Zuschauer. Stellen Sie den Projektor und das Netzkabel so auf, dass sie nicht leicht berührt oder zur Stolperfalle werden. Vermeiden Sie das Überkreuzen von Kabeln, um Risiken zu minimieren.

Stromversorgung

- Verwenden Sie ausschließlich das mitgelieferte Netzteil.
- Schalten Sie das Gerät aus, bevor Sie das Netzteil aus der Steckdose ziehen.
- Schützen Sie das Netzkabel vor dem Betreten oder Einklemmen, insbesondere an Steckern.

- Trennen Sie das Gerät von der Stromversorgung, wenn es zu Gewittern kommt oder wenn es längere Zeit nicht verwendet wird.
- Trennen Sie alle Geräte vom Stromnetz, bevor Sie Verbindungen herstellen oder ändern.
- Berühren Sie das Netzkabel oder den Netzstecker niemals mit nassen Händen.

Hörsicherheit

- Um Hörschäden zu vermeiden, hören Sie nicht über längere Zeiträume bei hoher Lautstärke. Stellen Sie die Lautstärke auf einen sicheren Wert ein.

Vorsicht

- Blicken Sie nicht direkt auf den Operationsstrahl. Das helle Licht kann Ihre Augen schädigen.

Reinigung

- Verwenden Sie ein weiches, fusselfreies Tuch. Verwenden Sie zum Reinigen niemals flüssige, gasförmige oder leicht entflammbare Reinigungsmittel.

- Verwenden Sie zum Reinigen der Linse keine flüssigen Reinigungsmittel, um eine Beschädigung des Beschichtungsfilms auf der Linse zu vermeiden.
- Wischen Sie die Oberflächen vorsichtig ab. Achten Sie darauf, dass Sie die Oberfläche nicht zerkratzen.
- Verwenden Sie zum Reinigen der Linse Linsenreinigungspapier.

Reparaturen

- Führen Sie keine Reparaturen an diesem Gerät selbst durch. Lassen Sie Ihr Gerät nur von einem autorisierten Servicecenter reparieren.
- Unsachgemäße Wartung kann zu Verletzungen von Personen oder Schäden an diesem Gerät führen.

System

- Das System unterstützt Google TV. Die Benutzeroberfläche kann aktualisiert werden. Bei Abweichungen zwischen dieser Anleitung und der tatsächlichen Benutzeroberfläche gilt die tatsächliche Benutzeroberfläche.

Consignes de sécurité

Veuillez lire le manuel avant utilisation. Ne modifiez aucun paramètre non mentionné dans ce manuel. Les dommages causés par des opérations non autorisées ne sont pas couverts par la garantie.

Installation

- Pour éviter tout risque de blessure ou de dommage matériel, utilisez l'appareil conformément au manuel. N'utilisez pas l'appareil à d'autres fins.
- Pour réduire les risques d'incendie ou d'électrocution, n'exposez pas l'appareil à la pluie ou à l'humidité. Ne placez pas de vases ou d'autres récipients contenant des liquides sur l'appareil.
- Ne placez pas l'appareil sur des surfaces molles telles que nappes ou tapis pour éviter tout risque d'incendie.
- Évitez de placer l'appareil dans des environnements poussiéreux ou à proximité de champs magnétiques puissants.
- Pour éviter la surchauffe, ne bloquez pas les orifices de ventilation.
- Ne placez jamais cet appareil dans un espace confiné. Laissez toujours suffisamment d'espace autour de cet appareil pour la ventilation.

- Évitez de surexposer cet appareil à la lumière directe du soleil, à la chaleur, aux grandes fluctuations de température et à l'humidité. Évitez les températures extrêmes.
- Lorsque cet appareil fonctionne pendant une longue période, la surface peut devenir chaude. Si cela se produit, éteignez-le immédiatement et débranchez le chargeur. Reprenez le fonctionnement une fois l'appareil refroidi.
- Manipulez toujours cet appareil avec précaution. Évitez de toucher l'objectif.
- Ne laissez pas les enfants manipuler l'appareil sans surveillance.
- Ne placez pas d'objets lourds ou pointus sur cet appareil.
- Pour éviter les chocs électriques, ne démontez pas l'appareil.
- Évitez les vibrations extrêmes. Cela pourrait endommager les composants internes.
- Utilisez uniquement les accessoires ou accessoires spécifiés par le fabricant.
- Veuillez vous conformer aux lois et réglementations du pays et de la région où l'équipement est situé (utilisé), respecter l'éthique professionnelle, prêter

attention aux obligations de sécurité et interdire strictement l'utilisation de nos produits ou équipements à des fins illégales.

- Lors de l'utilisation du projecteur dans un environnement sombre, veillez à la sécurité des spectateurs. Placez le projecteur et le câble d'alimentation dans des endroits où ils ne risquent pas d'être touchés ou de provoquer des chutes. Évitez de croiser les câbles afin de réduire les risques.

Alimentation

- Utilisez uniquement l'adaptateur secteur fourni.
- Éteignez l'appareil avant de retirer l'alimentation de la prise.
- Protégez le cordon d'alimentation contre tout piétinement ou pincement, en particulier au niveau des fiches.
- Débranchez cet appareil en cas d'orages ou en cas d'inutilisation prolongée.
- Débranchez tous les appareils de l'alimentation avant d'établir ou de modifier des connexions.
- Ne touchez jamais le câble d'alimentation ou le connecteur d'alimentation avec les mains mouillées.

Sécurité auditive

- Pour éviter des dommages auditifs, n'écoutez pas pendant de longues périodes à volume élevé. Réglez le volume à un niveau sûr.

Prudence

- Ne regardez pas directement le faisceau opératoire. La lumière vive peut endommager vos yeux.

Nettoyage

- Utilisez un chiffon doux et non pelucheux. N'utilisez jamais de nettoyants liquides, gazeux ou facilement inflammables pour nettoyer.
- N'utilisez pas de produits de nettoyage liquides pour nettoyer l'objectif afin d'éviter d'endommager le film de revêtement sur l'objectif.
- Essuyez doucement les surfaces. Faites attention à ne pas rayer la surface.
- Utilisez du papier de nettoyage pour objectif pour nettoyer l'objectif.

Réparations

- N'effectuez aucune réparation sur cet appareil vous-même. Faites réparer votre appareil uniquement par un centre de service agréé.
- Un entretien inapproprié peut entraîner des blessures ou endommager cet appareil.

Système

- Le système prend en charge Google TV. L'interface peut être mise à jour. En cas de différence entre le présent manuel et l'interface réelle, veuillez vous référer à l'interface réelle.

ISED WARNINGS

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même s'il est susceptible d'en compromettre le fonctionnement.

Le présent appareil est conforme. Après examen de ce matériel aux normes de conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent, sur l'exposition aux radiofréquences et la conformité d'acquiescement, obtenir les informations correspondantes. La distance minimale du corps à utiliser le dispositif est de 20cm.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

CE WARNINGS

1) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

2) WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

3) WARNING: The adapter plug is used as disconnect device, the disconnect device shall remain readily operable.

4) Frequency: 2.402GHz-2.48GHz

5) The Max. transmit power: 10 dBm

Declaration of Conformity

We (Manufacturer is responsible for this declaration) Ultimea Technology (Shenzhen) Limited
20th Floor, Building 4, Tianan Cloud Park, Bantian St., Longgang District, Shenzhen, China

Declare under our sole responsibility that the product

Trade name: ULTIMEA

Equipment: Projector

Model No.: U0840

The product to which this declaration relates is in conformity with the essential requirements set out in the Council Directive on the Approximation of the laws of the Member States relating to the Radio Equipment Directive (2014/53/EU), the Restriction of Hazardous Substances Directive (2011/65/EU), the Electromagnetic Compatibility Directive (2014/30/EU), and the Low Voltage Directive (2014/35/EU). The product is responsible for affixing the CE marking, and the following standards were applied:

EN 55032:2015/A1:2020

EN 55035:2017/A11:2020

EN IEC 61000-3-2:2019/A1:2021

EN 61000-3-3:2013/A2:2021

ETSI EN 301 489-1 V2.2.3 (2019-11)

ETSI EN 301 489-17 V3.2.4 (2020-09)

ETSI EN 300 328 V2.2.2 (2019-07)

EN 50663:2017

EN IEC 62368-1:2020+A11:2020

IEC 62321-3-1:2013

IEC 62321-4:2013+A1:2017

IEC 62321-5:2013

IEC 62321-6:2015

IEC 62321-7-1:2015

IEC 62321-7-2:2017

IEC 62321-8:2017

Signature: 

Date: 2025.6.19

HDMI

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

ULTIMEA

Product Name: Projector

Model No.: U0840



Ultimea GmbH
Buchenring 57, 22359 Hamburg, Germany



EVATOST CONSULTING LTD
Office 101 32 Threadneedle Street, London,
United Kingdom, EC2R 8AY

@Ultimea Inc. All rights reserved, registered in the
United States and other countries. 9804 Crescent Center
Drive, Suite 604, Rancho Cucamonga, CA 91730

Made in China

Manufacturer: Ultimea Technology (Shenzhen) Limited
Address: 20th Floor, Building 4, Tianan Cloud Park,
Bantian St., Longgang District, Shenzhen, China 518000



If you need our support, kindly reach out to our
service team. We are always glad to help.

+1 888-598-8875 (US)
Mon-Fri 9am-5pm (PST)
+49 89-628-25828 (EU)
Mon-Fri 9am-5pm (CET)

✉ support@ultimea.com

👤 support.ultimea.com



Upgrade your protection!



@ultimea_official