

**1 Camera**  
Touch this to select photography mode.  
Draw pictures

**2 Video player**  
Touch this Access the video player.  
You can see the video in these files.  
There are buttons in the background to control the video.

**3-1 Photos**  
Touch this From the application screen, it includes all the photos.

**3-2 Photos**  
Touch this You can sort photos by date and place.  
Touch this To select an album, edit or delete it.  
Touch this Select the file you want to edit or delete.  
Touch this to see the files.

**3-3 Music**  
Touch this Visit music. You can sort them by artist or album.  
In this page, the music is arranged in alphabetical order. Press the music you want to listen to and play it. Click < current song > to display the page of this album; the current song will be displayed on the right.

**3-4 Calendar**  
In the calendar page, you can view albums by sliding. Click on the album cover and it will automatically switch to the background. When all the music is over, you can play them again.

**3-5 Organisation**  
Touch this To access the calendar, display the month on the page and click Look at that day

**3-6 Calculator**  
Touch this Access the calculator from the application screen.

**3-7 File explorer**  
Touch here in the application list, supports the mutual file copy in these internal memory places and the SD tab.

**3-8 Descargar**  
Click here in the list of applications; you can preview the download or index of documents already downloaded.

**3-9 Mail**  
You must be connected to the network before you can use e-mail. If you have problems with your network connection, please contact your service provider

**4-1 Sound adjustment**  
Click here to enter the system setup interface.

**4-2 Screen setting**  
Screen settings include: setting wallpaper, idle time, brightness, auto rotation.

**4-3 Screen setting**  
On the background settings screen, you can adjust the background and dynamic background; you can select it from the library.

**4-4 Sound adjustment**  
Click here to enter the system setup interface. If you need more details, please press the mute button. Click < volume settings > to set volume notification, multimedia and alarm sounds, and allow you to select ringtones, operate and start software disks.

**4-5 Set Wallpaper**  
When the monitor is in the light state for a period of time and not in use, it will automatically lock to save power.

**4-6 Screen Waiting**  
You can adjust the brightness to get your favorite brightness.

**4-7 Font Size**  
Allows you to adjust the font size according to your preferences, including: small font, standard font, large font, large font.

**4-8 Wireless network settings**  
This part includes: wireless network configuration. Select the Wi-Fi option, set the button to "on" and the system will automatically search for available networks and display a list. Among them, if you have this logo Next to you, that is to say, the network does not need a password, you can use it directly. The logo Indicates that the network is protected. You must enter a password to connect.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.