


70 mm



10000mAh Portable Wireless
Charging Station & MagSafe Power
Bank Built-in Cables(3-In-1)

User's Manual

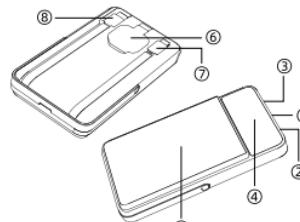

Features:

- 1. Power bank ON/OFF Button
- 2. Type-C input
- 3. USB-A output
- 4. LED screen
- 5. Wireless charge area for phone
- 6. Wireless charge area for watch magnetically
- 7. Built-in Lightning cable
- 8. Built-in Type-C cable

Product Specifications:

Capacity:10000mAh/3.85V/38.5Wh
Type-C port input: 5V2A/9V2A/12V1.5A 18W max
USB-A output: 5V3A/9V2A/12V1.5A 18W max
Type-C cable input: 5V2.8A/9V2A/12V1.5A
18W max

Type-C cable output: 5V3A/9V2.22A/12V1.67A
20W max
Lightning cable output: 5V2.4A
Wireless output(phone): 5W/7.5W/10W/15W
Wireless output(watch): 2W

What's included:

- 1x 3 in 1 Fast Charge MAG-N-KICK™ 10K
- 1x Magnetic Iron Ring

Instructions:

1. Charging the Power Bank:

- Charge the powerbank fully before usage.
- Connect the built-in Type-C cable to a power source
- Once fully charged, the power capacity will show 100% power capacity.

2. Charging Electronic Devices with the Power Bank

- Connect the appropriate built-in cable to your mobile phone/device.
- Connect the USB-A tip of a cable to USB-A Output (3).
- Remove the charging cable from your mobile device when fully charged.

3. Charging Electronic Devices with the Wireless Charging:

- Press Powerbank ON/OFF button (1) the LED screen will show the remaining power capacity, and the wireless charging symbol (●●) will flash once the power bank is in wireless charging standby mode.
- Place wireless charging enable device on Wireless Charging Pad (5). The device will begin to charge, the wireless charging symbol (●●) will show on the LED screen when charging.
- Remove your mobile device and powerbank once fully charged.

Note: If the wireless charging symbol (●●) flashes on the screen, an unknown object is being detected between the wireless charging pad and the phone by FOD (Foreign Object Detection). The powerbank will not begin to charge until object is removed

Safety Instructions:

1. Read all instructions before use.
2. Use within temperature range: 32°F to 115°F (0°C to 45°C).

3. Avoid overcharging; remove phone once fully charged.

4. Optimize performance with 2-3 full charge cycles.

5. To reduce the risk of injury, close supervision is required when the product is used near children.

6. Do not expose the device to moisture.

7. Do not use the device in excess of its output rating. Overloading outputs above the rating may result in a risk of fire or injury.

8. Do not use the device if damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.

9. Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.

10. Do not expose the device to fire or excessive temperatures. Exposure to fire or temperatures above 104°F (40°C) may result in an explosion.

11. To ensure product safety, ensure that qualified service professionals use only identical replacement parts.

12. Attachments on the back of your phone can impede the effectiveness of the wireless charger and lead to overheating. Please remove attachments from the phone before charging on this device.

FCC ID:2A9Q9-M2198Q



2025.04.24

40 mm

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.