 
 


## 8. SAFETY INSTRUCTIONS

 
EN

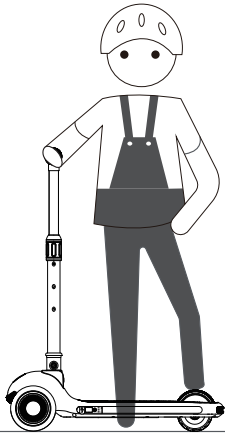


❌ Do not keep your feet on the rear fender brake.

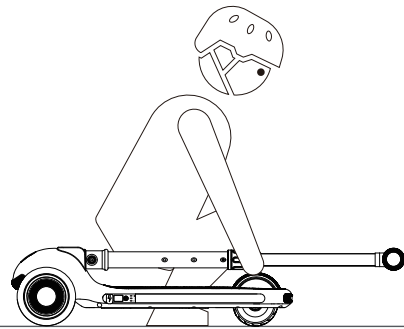

❌ Do not touch the rear fender brake immediately after riding.

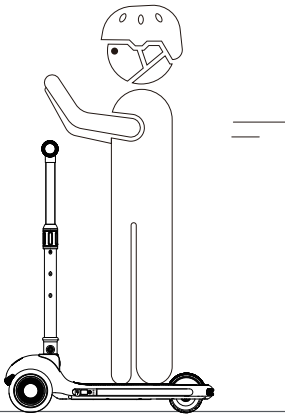

 ❌ Do not keep your hands away from handlebar.

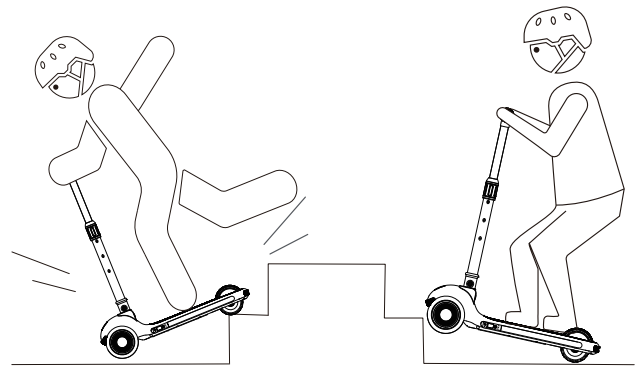

❌ Do not try riding up or down stairs, and jumping over obstacles.

## 8. SAFETY INSTRUCTIONS

EN

### Safety Reminder

 
- This electric scooter is a leisure device. But once they're in a public area, they'll be seen as vehicles, subjecting to any risks faced by vehicles. For your safety, please follow instructions in the manual and traffic laws and regulations set forth by government and regulatory agencies.
- At the same time, you should understand that risks cannot be entirely avoided as others may violate traffic regulations and drive incautiously, and you're exposed to road accidents just as when you're walking or biking. The faster the scooter is, the longer it takes to stop. On a smooth surface, the scooter may slip, lose balance, and even result in a fall. Thus it is crucial that you use caution, keep proper speed and distance, especially so when you're unfamiliar with the place.
- Respect pedestrians' Right of Way. Try not to startle them while driving, especially children. When you ride from behind pedestrians, ring your bell to give them a heads-up and slow your scooter to pass from their left (applicable to countries where vehicles drive on the right). When you ride across pedestrians, keep to the right at a low speed. When you drive across pedestrians, keep the lowest speed or getting off the vehicle.
- Closely follow the safety instructions in the manual in the countries that lack relevant laws and regulations regarding electric scooters. FanttikRide shall not be liable for any financial losses, physical injuries, accidents, legal disputes and other interest conflicts resulted from actions that violate user instructions.
- Do not lend your scooter to whoever knows not the operations. And when you do lend it to your friends, please take the responsibility to ensure he/she knows the operation and wears the safety gear.
- Check the scooter before every use. When you note loosen parts, low battery alerts, flat tires, excessive wear, strange sounds, malfunctions and other abnormal conditions, stop riding immediately and call for professional support.

**WARNING – Risk of Fire – No User Serviceable Parts.**

## 9. FOLDING AND CARRYING


EN

Fold

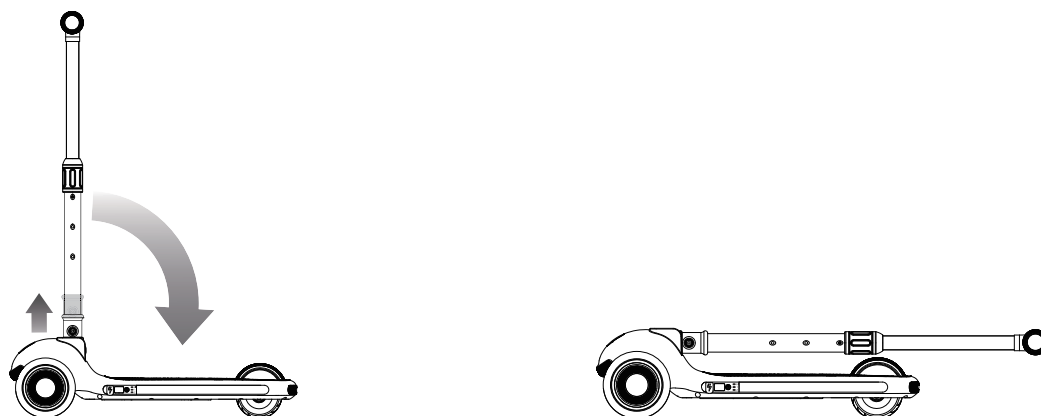

Make sure that the scooter's turned off.  
Pull up the release sleeve and lower the handlebar stem to fold.

 Carry

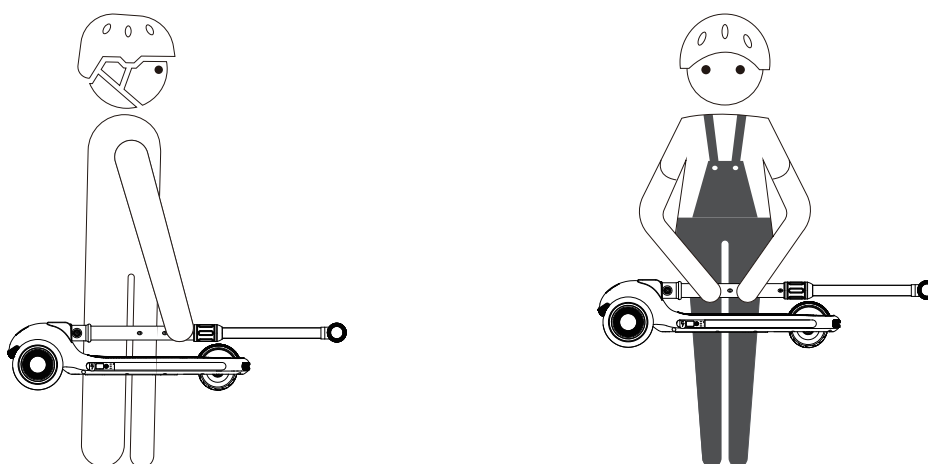

Hold the handlebar stem with either one hand or both hands to carry.

## 10. DAILY CARE AND MAINTENANCE

EN

### Cleaning and storage

If you see stains on the scooter's body, wipe them off with a damp cloth. If the stains won't scrub off, put on some toothpaste, and brush them with a toothbrush, then wipe them off with a damp cloth. If you see scratches on plastic parts, use sandpaper or other abrasive materials to polish them.

**Notes:** Do not clean the scooter with alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents to prevent dire damage. Do not wash the scooter with a high-pressure water spray. During cleaning, make sure that the scooter's turned off, the charging cable is unplugged, and the rubber flap is closed as water leakage may result in electric shock or other major problems.

When the scooter's not in use, keep it indoors where it is dry and cool. Do not put it outdoors for long time. Excessive sunlight, overheating and overcooling accelerate tire aging and compromise the scooter and the battery pack's lifespan.

### Battery maintenance

1. Use original battery packs, use of other models or brands may bring about safety issues;
2. Do not touch the contacts. Do not dismantle or puncture the casing. Keep the contacts away from metal objects to prevent short circuit which may result in battery damage or even injuries and deaths;
3. Use original power adapter to avoid potential damage or fire;
4. Mishandling of used batteries may do tremendous harm to the environment. To protect natural environment, please follow local regulations to properly dispose used batteries.
5. After every use, fully charge the battery to prolong its lifespan.

Do not place the battery in an environment where the ambient temperature is higher than 113°F or lower than 14°F (e.g., do not leave the scooter or the battery pack in a car under direct sunlight for an extended time). Do not throw the battery pack into fire as it may lead to battery failure, battery overheating, and even another fire. If the scooter is expected to be left idle for more than 30 days, please fully charge the battery and place it in a dry and cool place. Keep in mind to recharge it every 60 days to protect the battery from potential damage which is beyond limited warranty.

Always charge before exhausting the battery to prolong the battery's lifespan. The battery pack performs better at normal temperature, and poor when it is below 32°F. For instance, when it is below -4°F, the riding range is only half or less at normal state. When the temperature rises, the riding range restores.

**Note:** Fully charged FanttikRide K9 / K9 Pro / K9 Apex Electric Scooter will takes around 3-6 hours. The built-in intelligent chip will keep a log of its charging and discharging records. The damage caused by prolonged no charge is irreversible and is beyond limited warranty. Once the damage is done, the battery can not be recharged (non-professionals are forbidden to dismantle the battery pack, as it may cause electric shock, short circuit or even major safety accidents).

# 11. SPECIFICATIONS

EN

| Performance Index   | Items                                 | Specifications                                                                                                |
|---------------------|---------------------------------------|---------------------------------------------------------------------------------------------------------------|
| Dimensions          | L × W × H [1] (inch)                  | 22.6×11.8×32.1                                                                                                |
|                     | After folding: L × W × H (inch)       | 22.6×11.8×6.4                                                                                                 |
| Weight              | Item weight (lb)                      | Approx. 8.8                                                                                                   |
| Riding Requirements | Load range (lb)                       | 22~88                                                                                                         |
|                     | Age                                   | 3+                                                                                                            |
|                     | Body height (inch)                    | 39.4~55.1                                                                                                     |
| Main Parameters     | Max. speed (mph)                      | Approx. 6.3                                                                                                   |
|                     | General range (miles)                 | Approx. 4                                                                                                     |
|                     | Max. climbing angle (%)               | Approx. 6                                                                                                     |
|                     | Suitable surfaces                     | Cement, asphalt and mud roads; bench lower than 1cm; crevice narrower than 1.2 inch                           |
|                     | Operating temperature (°F)            | -4~149                                                                                                        |
|                     | Storage temperature (°F)              | 14~113                                                                                                        |
|                     | IP rating                             | IPX4                                                                                                          |
| Battery Pack        | Rated voltage (VDC)                   | 10.8                                                                                                          |
|                     | Max. input voltage (VDC)              | 5V                                                                                                            |
|                     | Rated capacity (Wh)                   | 28.1                                                                                                          |
|                     | Intelligent battery management system | Unusual temperature/short circuit/under voltage/over current/dual overcharge/dual over-discharge protectionst |
| Tires               | Front tire                            | 4.7" Polyurethane                                                                                             |
|                     | Rear tire                             | 3.5 Solid rubber                                                                                              |
| Charger             | Input voltage (VAC)                   | N/A                                                                                                           |
|                     | Output voltage (VDC)                  | 5V                                                                                                            |
|                     | Charging time (h)                     | Approx. 3-6                                                                                                   |

[1] Item height: from the ground to the top of the scooter;

[2] General range: measured when it is no wind and at 86°F.

**Note:** Data and specifications may vary due to different models, and are subject to change without notice.

## 12. TROUBLESHOOTING GUIDE

EN

\*Product(s) should be turned **OFF** and fully charged prior to doing any Troubleshooting.  
**NOTE:** All troubleshooting steps should be performed by an adult only.

| Problem                      | Possible Cause                                              | Solution                                                                                                                                       |
|------------------------------|-------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Does not work out of the box | Unit must be traveling at least 1.9 mph before motor engage | Kick start to at least 1.9 mph (3 km/h) while to engage motor.                                                                                 |
|                              | Undercharged battery                                        | Check the energy icon on product:<br>Plugged into wall & unit - Flash (charging)<br>Plugged into wall & unit - Solid Green (charging complete) |
|                              | Old/damaged battery                                         | Replace battery.                                                                                                                               |
| No longer works              | The energy icon on product not flash                        | Check power to wall outlet and/or try a different outlet.                                                                                      |
|                              | Undercharged battery                                        | Check the energy icon on product:<br>Plugged into wall & unit - Flash (charging)<br>Plugged into wall & unit - Solid Green (charging complete) |
|                              | Battery will not hold a charge                              | Replace battery.                                                                                                                               |
| Short run time/runs slow     | Rider's weight                                              | Do not exceed 88 lb (40 kg) maximum weight limit.                                                                                              |
|                              | Riding conditions                                           | Use only on at dry surfaces. Avoid inclines and areas with heavy debris.                                                                       |
|                              | Battery not fully charged                                   | Charge product - refer to page 08 for charging information.                                                                                    |
|                              | Old/damaged battery                                         | Replace battery.<br>Charge battery at least once a month when not in use.                                                                      |

## 13. WARRANTY

EN

- Your FanttikRide Electric Scooter includes 180 days Limited Hardware Warranty ("Warranty"). The Warranty covers product defects in materials and workmanship under normal use. This Warranty starts on the date of your purchase and lasts for 180 days. The Warranty Period is not extended if the product is repaired or replaced. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.
- Warranty services are provided by FanttikRide. If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, FanttikRide will: (1) repair the hardware defect by using new or refurbished parts that are equivalent to new in performance and reliability; or (2) exchange the product with a product that is new or refurbished which is substantially equivalent to the original product. This Warranty is for one replacement only of like-items and does not cover items out of production if the product is no longer made or stocked. This Warranty is not assignable or transferable.
- When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes FanttikRide's property. This warranty only covers technical hardware defectiveness during the warranty period and under normal use conditions. FanttikRide does not warrant uninterrupted or error-free operation of this Product.
- This Warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external causes such as accidents, abuse, or other actions or events beyond our reasonable control.

Important: Do not disassemble the Product. Disassembling the product will void the Warranty. Only FanttikRide or a party expressly authorized by FanttikRide can perform service on this product.

Disclaimer of warranty: The remedies described above are your sole and exclusive remedies and our entire liability for any breach of this limited warranty. Our liability shall under no circumstances exceed the actual amount paid by you for the defective product, nor shall we under any circumstances be unable for any consequential, incidental, special or punitive damages or losses, whether direct or indirect. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The duration and remedies of all implied warranties, including without limitation. The warranties of merchantability and fitness for a particular purpose are limited to the duration of this express limited warranty.

Manufacturers' warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer at [support@fanttik.com](mailto:support@fanttik.com) if you have any questions.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

\* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

516-927-8658 MON-FRI 9AM-5PM (ET)

[www.fanttik.com](http://www.fanttik.com)

[support@fanttik.com](mailto:support@fanttik.com)

METASEE LLC

5205 Broadway #634 Pearland Texas 77581

**Made in China**



V\_240412