

A1 Bluetooth earphone

User Manual



Contents:

1.Safety Instruction	-----	1
2.What's in the Box	-----	3
3.Product Overview	-----	4
4.Power On/Off	-----	5
5.Stereo Mode	-----	6
6.Play Music	-----	6
7.Voice Assistant	-----	7
8.Calling	-----	7
9.Specification	-----	7
10.Important	-----	8
11.Fault	-----	9

Safety Instruction

[Warning] Failure to follow these safety instructions may result in fire, electric shock, injury, or damage to the A1 or other property. Please read all of the safety information below before using your A1.

*Handle the A1 and charging case gently. They contain highly sensitive electronic components(including the battery). Dropped, burned, punctured, crushed, disassembled, or exposed to high temperatures, liquids, or high concentrations of industrial chemicals, including nearly liquefied gases that vaporize easily, such as helium gas will result in damage, functionally destruction, or cause personal injury.

*Do not use a damaged A1 or charging case. Do not use the A1 with the ear cushions removed.

*Do not attempt to replace the A1 or charging case battery yourself, you may damage the battery, which could lead to overheating and personal injury.

*Please observe the regulations of your country and region when using the headset while driving.

*Please use only adapters that comply with applicable national/regional regulations and international and regional safety standards when charging. Do not use damaged cables or chargers, or charge in wet environments that could result in fire, electric shock, injury, or damage to the A1, charging case, or other property. (Do not operate the device with wet hands; damage to the device caused by water ingress is not covered under warranty)

*Do not put the device on too high or too low temperature, (below 0 degrees Celsius or above 45 degrees Celsius) environment, extreme temperature will lead to deformation of the device, reduce the charging capacity of the device and shorten the service life.

*Do not listen to music at high volume for long periods of time to prevent possible hearing damage.


*Avoid using the A1 in extremely dry environments. Static electricity tends to collect when using the A1 in areas with very dry air, and your ears may be subjected to a weak electrostatic discharge from the A1.

*Keep all devices and accessories out of the reach of children and pets, as swallowing parts can lead to choking and serious consequences.


What's in the Box




Earphones

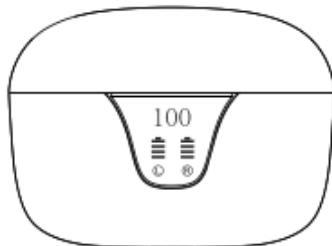

Charging Case

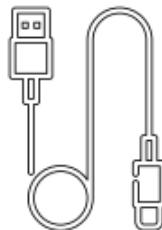

Usb Charge Cable

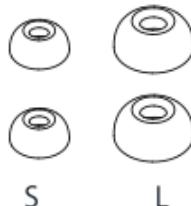

Ear Caps




User Manual

Packing list:

Earphones *2
Charging case *1
USB cable *1
Ear caps *4(L\ S)
User manual *1

Product Overview

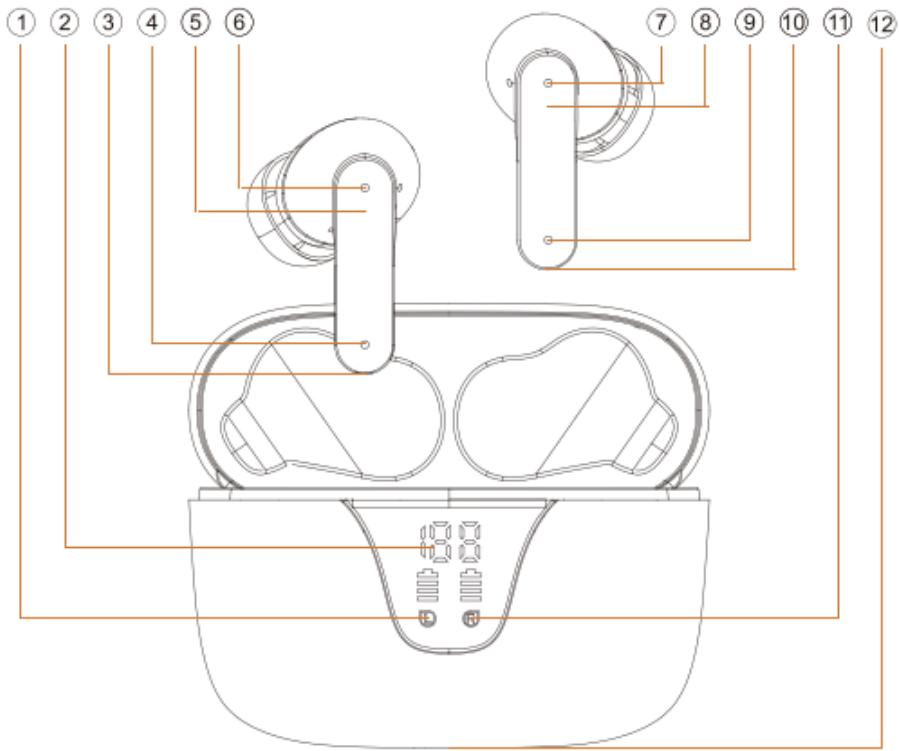


① ⑪	Earphone digital display	②	Charging case digital display
③ ⑩	Earphone charging port	④ ⑨	Call microphone
⑤ ⑧	Touch Button	⑥ ⑦	Earphone indicator
⑫	Type-C charging port		

Powering ON:

Method 1: Take out the earphones from the charging case, and they will “power on”


L earphone blue light flashes

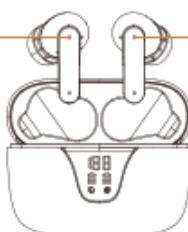

R earphone blue light flashes



Method 2: When the earphones are OFF, keep the touch button of both earphones for 3-5 seconds. The LED light flashes once and with a sound prompt: “power on”.

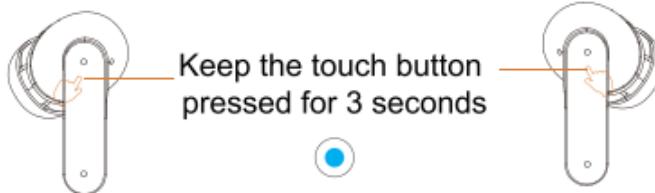

Powering OFF


Method 1: The earphones will switch off when put into the charger case.

Method 2: Keep the earphones touch button pressed for 3-5 seconds, until the blue LED flashes with a sound prompt: “power off”.

Note: If the earphones were disconnect with the device, the earphones will be power off automatically after 5mins.

Stereo Mode:

1. Take the earbuds out of the charging case and they will turn on automatically. After a few seconds, the left and right earphones will automatically connect to each other and the LED light will flash quickly. If they are connected successfully, the LEDs of the earbuds will blink slowly.

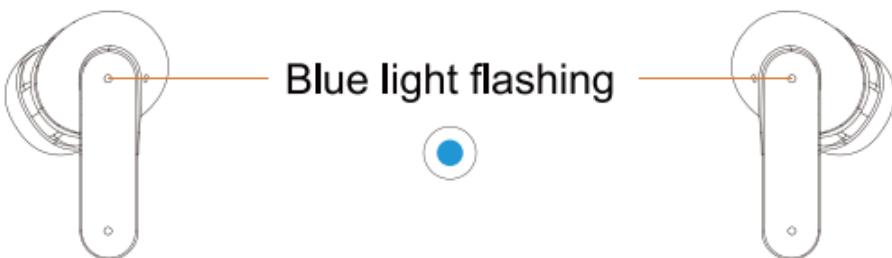

Play Music:

- 1 Touch the button once to Pause/Play.
- 2 Keep press the touch button for 1 seconds and release it ("L"for previous song, "R"for next song)
- 3 Touch the button twice to adjust the volume("L"for decreasing , "R" for increasing)

Voice Assistant:

Touch the button three times to activate the Siri voice assistant.

Calling:

- 1 When a call comes in, short press one of the touch buttons in order to answer the call or long press it to reject it.
- 2 During a phone call, short press the earphone button to end the call and the earphone will resume its previous working state.
- 3 During a call, the volume can be controlled via the mobile phone.
- 4 Stereo mode:both ears have voice.

Specification

Model	A1
Version	V5.3
Voltage rating and energy capacity	3.7V/400mAh
Battery capacity	2*3.7V/40mAh
Earphone charging time	1H
Music playing time	About 4-5h*4times
Supporting protocols	HFP/A2DP/AVRCP
Operating frequency	2.40 GHZ-2.48 GHZ
RF sensitivity	-92dBm
Working temperature range	-10+50℃
Maximum transmission range	≤15M

Important:

- 1 Host device is a connection between second device and your mobile phone, it is normal status under high power consumption.
- 2 When not connected to any device, the earphones will power off automatically after 5 minutes.
- 3 On iOS Phones the battery level of the earphones will be displayed in real time.
- 4 When the earphones and the charger case are not used for long periods of time, it is recommended to keep them in a dry place and to recharge them at least every 2 months.
- 5 It is recommended to gently wipe the spring needle and copper column with a cotton swab on a regular basis to achieve a cleaning effect. Never use liquids to clean the earbuds.



Note: When the earbuds is not charging, you can use a cotton swab to gently wipe the spring needle and copper post.

Fault:

Fault	Cause	Solutions
Can't power on	Earbuds are low battery/ crash	Charge the earbuds/ keep the earphones touch button pressed for 8 seconds
No charging indication	The earbuds are not well put into/ there are foreign objects in the spring needle and copper column	Adjust earbuds position/ clean the spring needle and copper column
Automatically shut down	Earbuds are low battery	Charge the earbuds
The earbuds have an echo	The volume is too high or the environment is too noisy	Adjust the volume or change position
The earbuds are noisy	Outside environment interference or too far away from mobile phone	Change position,or move closer to the mobile phone
Small sound	Wearing earbuds incorrectly or the volume is too low	Adjust the earbuds position or the mobile phone volume
Signal intermittent	Outside environment interference or too far away from mobile phone	Change to better environment or move closer to the mobile phone
Earbuds have no sound	Pairing unsuccessful between L and R earbuds	Put the earphones into the charger case

Thank you

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.