


USER MANUL

Product Overview

.Headphone

.USB charging cable

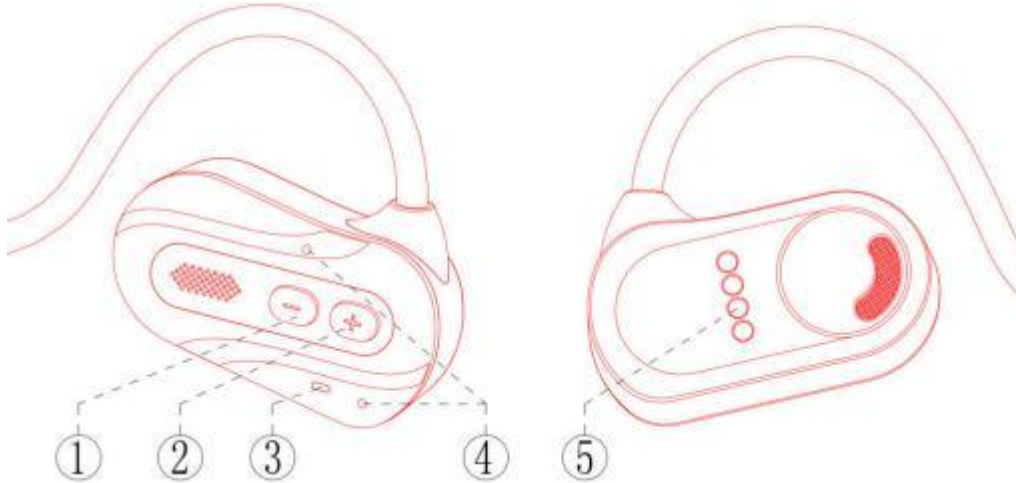

Key Description

1. "-" key: Volume down/ Previous track/Bluetooth mode and TF card mode switch
2. "+" key: On/Off/Volume up/ Next track/Pause...
3. LED indicator
4. Microphone
5. Charging contact

Power Supply/charging

For a better experience, fully charge your headphones before use.

Use the USB cable in the package to connect to the USB port on your computer or any other standard USB compatible charging device. Use a 5V/1A or above adapter (not included) for charging.

Note: Only use computer USB output or standard 5 volt power adapter for charging. Damage may occur if non-standard power adapter is used for charging, it may cause damage. Do not charge if connector or device if it is wet or damaged.

Power On/Off

Power On: In power off mode, press and hold the "+" key for 3 seconds to power on the headphone, and the blue light will go on, you will hear the power on tone.

Power Off: To power off the headphone, press and hold the "+" key for 5 seconds, and the indicator turns off, you hear a shutdown tone.

Note: If no Bluetooth device is connected, the headphone will automatically shut down after 5 minutes.

Pairing

After the headphone is turned on, it automatically enters the mode to be connected, and the red/blue light flashes alternately. enable the Bluetooth function of the

phone and search for "ZC07" to connect. After the connection is successful, you will hear the prompt tone and the blue light will flashes every 10 seconds.

Volume Control

When playing music, press the "+" key to increase the volume and press the "-" key to decrease the volume.

Note: When the volume is increased to the maximum or decreased to the minimum, a "beep" sound will appear.

Music

Play/Pause: When playing music, double click "+" to pause the play, and press any key again to continue the play.

Next song: Press and hold the "+" key for 2 seconds to go to the next song.

Previous song: Press and hold the "-" key for 2 seconds to switch to the previous song.

Call

Answer an incoming call: Short press the "+" key to answer the call.

Reject an incoming call: Press and hold the "+" key for 2 seconds to reject an incoming call.

Hang up: Press and hold the "+" key for 2 seconds to end the call.

Reset Bluetooth pairing

When the headphone is powered on, press and hold the "+" / "-" keys for 5 seconds at the same time to clear the pairing connection between the headphone and other Bluetooth devices.

LED Indicator & Prompt Tone

Mode	LED Indicator	Prompt Tone
Power On	Blue LED light on	"Power on"
Power Off	Blue LED light off	"Power off"
Pairing	Blue/red light flashes alternately	"Bluetooth Mode"
Bluetooth connected	Blue light flashes every 10 seconds	"Connected"
Battery low	-	"Battery low"
Charging	Red light is on during charging, light turns off when the battery is fully charged	.

Cautions

It is not recommended to replace the battery.

Headphone should not be placed in a baking or similar overheated environment.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.