

Apple system

1. Turn on the device
Press and hold the button for 5 seconds, the device will beep and turn on.
2. Pair the device
- Open the Find My app.
- Hold the device close to your iPhone, tap the Items tab, tap + and then Add Other Item.
- Tap Connect.
- Type a name for your device, select an emoji.
- Tap Agree to acknowledge that this item will be linked to your Apple ID.
- Tap Finish.
3. Enable Lost Mode
- Open the Find My app, tap the Items tab, then tap your item.
- Under Lost Mode, tap Enable.
- Read the instructions, tap Continue and enter a phone number or email address.
- Confirm the information, customize the lost message, and tap Activate to complete the setup.
4. Remove the device
- Open the Find My app, tap the Items tab, then tap your item.
- Tap Remove Item and then tap Remove to complete the operation.
Note: After removing the device in the app, the device will beep and the light will flash six times, it will not shut down and will be in the pairing mode. If there is no re-pairing within 10 minutes, the device will leave the pairing state, and the device and app cannot be paired at this time. If you need to pair the device, you need to click the device button once, the device will ring and the light will flash once. At this point, the device enters the pairing state and can be re-paired with the app.

Android system

- 1 Download Findthing App
Search for "Findthing" on the Google play, or scan the below QR code to download the Findthing App.



- 2 Sign up
Open Findthing App, and sign up.

3 Turn on Bluetooth and Location service

Note: Please do not pair the device in the phone's Bluetooth list, otherwise, the device will not be connected to the App.

- 4 Pair the device
Tap the "+" button in Findthing App, and pair the device.

5 Ring the device

- 6 Attach the device to the things you care about

* More introductions and FAQ please refer to the 'help' section in Findthing App.

Instructions for device button

1. Power on

After installing the battery, long press the button for five seconds, the device will beep, the light will flash three times, indicating that the device is working. If the device does not ring, the device is off. Long press the button for five seconds to turn it on.

2. Device status confirmation

Double-click the device button, the device will beep, and the light will flash three times, indicating that the device is working. If the device does not ring, the device is off. Long press the button for five seconds to turn it on.

3. The device enters the pairing state again

After removing the device in the app, the device will beep and the light will flash six times, it will not shut down and will be in the pairing mode. If there is no re-pairing within 10 minutes, the device will leave the pairing state. If you want to pair a device at this time, you need to click the device button once, the device will beep, and the light will flash once. At this point, the device enters the pairing state and can be paired with the app again.

4. Factory Reset

First, remove the item from Find My app then, after the device is powered on, double-click the device button. The device will beep, and the light will flash three times, indicating that the device is working. If the device does not ring, the device is off. Long press the button for five seconds to turn it on.

5. Power off

When the device is on, press the device button 5 times in 2 seconds. The device will beep, the light will flash three times, the device will be powered off.

6. How to replace the battery:

- 1) Open the device from the notch side.
- 2) Replace the battery with a new one. (Positive pole upward).
- 3) Assemble the device and long press the button for 5 seconds to restart it.


2. How to confirm whether the device has been turned on?

Double-click the device button, the device will beep, and the light will flash three times, indicating that the device is working. If the device does not ring, the device is off. Long press the button for five seconds to turn it on.

3. How is my privacy protected?

Only you can see where your item is. Your location data and history are never stored on the item itself. Devices that relay the location of your item also stay anonymous, and that location data is encrypted every step of the way. So even Apple or [REDACTED] knows the location of your device or the identity of the device that helps find it.

Product overview

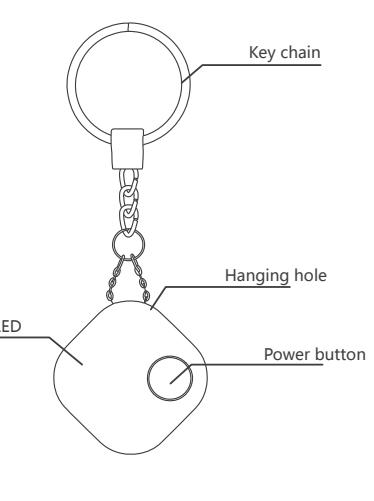

Regulatory Safety Information



WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN
Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poison Information Centre for fast expert advice.

Safety Statement
注意！
依据 低功率辐射性电机会管理办法
第十二条 经型式认证合格之低功率射频机，非经许可，公司、商号或使用者均不得擅自变更、更动频率、加大功率或变更原设计之物性及功能
第十条 低功率射频机之使用不得影响航空安全及干扰合法通信；经发现有干扰迹象时，应立即停止，并将至无干扰时再继续使用。
前项合法通信，指依电信法规规定作业之无线电话通信。
低功率射频机须受合法通信或工业、科学及医疗用电波辐射性电机关设备之干扰。

Article 12
Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristics and functions of the original design of the certified lower power frequency electric machinery.

Article 14
The application of low power frequency electric machineries shall not affect the navigation safety nor interfere a legal communication, if an interference occurs, the user shall immediately stop the use until the interference no longer exists. The foregoing legal communication refers to the wireless telecommunication operated according to the telecommunications laws and regulations.

Do not use if the compartment is not secure.
Dispose of used button batteries promptly and safely. Flat batteries can still be dangerous.
Risk of fire and burns.
Do not recharge, disassemble, heat (-20°C +70°C) or incinerate.

Rated voltage 3V /定格电压 3V
Rated current ~175 mAh / 定格电流 ~175 mAh

Manual

Smart Finder

Important tips: When pairing a device with Findmy app, the phone will link to the Apple server. Pairing may fail because of network problems. The following actions are recommended:

1. Change the phone's network, such as switching between WiFi and mobile network;
2. Factory Reset for the device: When the device is powered on, double-click the device button. The device will beep, then immediately long press the device button for eight seconds until the device beeps for the second time and the indicator light flashes. Release the button, Factory Reset is completed.
(Note: after long pressing the device button for 2 seconds, the device will sound "tick, tick, tick", and the indicator light near the button flashes. Do not release it. Continue to press and hold the button until the device emits a music for the second time, and the indicator light flashes. Release the button).
3. Pair with Findmy app.

Model: MWFD05A

FCC Caution

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.