

# MYHIXEL DEVICE III

INSTRUCTION MANUAL  
MANUAL DE INSTRUCCIONES  
NOTICE D'UTILISATION  
ANLEITUNGSHEFT  
LIBRO DI ISTRUZIONI

MYHIXEL



***GREETINGS!***

***¡BIENVENIDO!***

***BIENVENUE!***

***WILLKOMMEN!***

***BENVENUTO!***

**myhixel.com**

Contact / Contacto /  
Kontakt / Contact /  
Contatto:  
customerservice@  
myhixel.com

MYHIXEL ®  
Manufactured by:  
Manufacturado por:  
Hergestellt von:  
Fabriqué par:  
Confezionato da:

 
 
**NEW WELLNESS  
CONCEPT SL**  
Avda. República  
Argentina, 25, 8th  
floor, 41011 Seville  
(Spain)  
B90344813

 
 
 
 
 
 
US imported by:  
Importado a EEUU por:  
US importiert von:  
US importé par:  
Importato negli USA  
da:

 
 
 
 
 
 
 
 
 
 
 
 
**NEW WELLNESS  
CONCEPT, INC**

---

Last revision date: July 2025

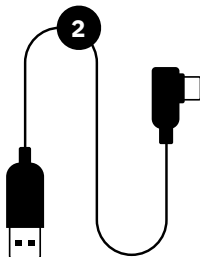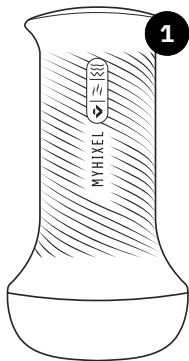

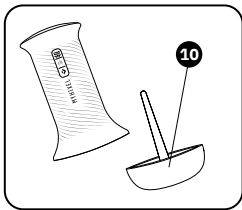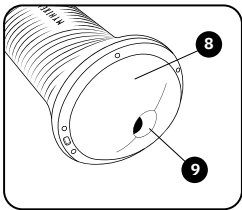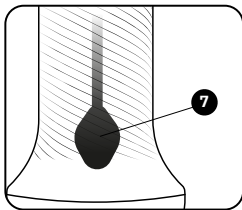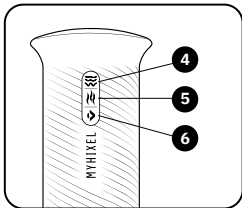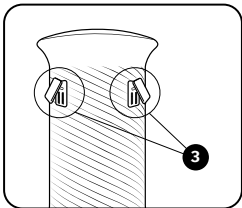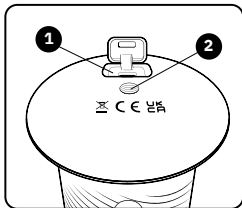

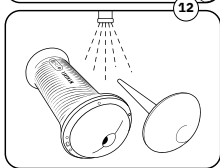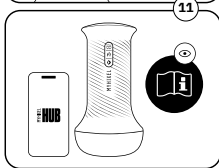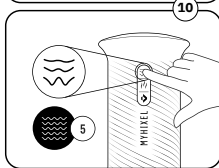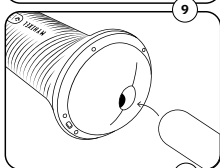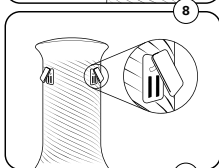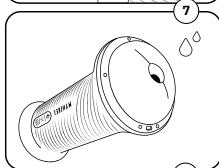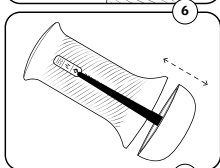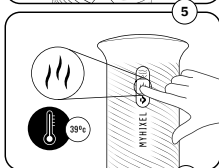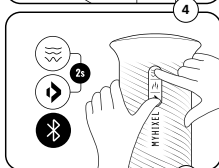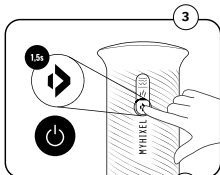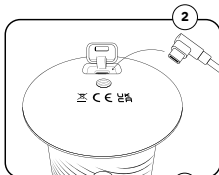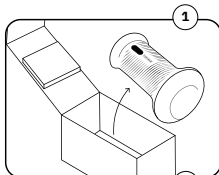

# EN

**Congratulations! You've just taken the first step toward improving your sex life. MYHIXEL represents a true revolution for men and the quality of their sexual experiences.**

**MYHIXEL III is the most advanced stimulation device on the market, designed to simulate realistic penetration. It can be used on its own but is specifically designed to be combined with the MYHIXEL programs:**

- MYHIXEL Control, for climax control or premature ejaculation (PE)**
- MYHIXEL ED, for improving erections or erectile dysfunction (ED)**

**MYHIXEL also offers a wide range of products and services designed to enhance and complete your experience and help you enjoy it to the fullest.**

**Notice:** Please read these instructions carefully before using your MYHIXEL III device.

## **WARNINGS AND USAGE RECOMMENDATIONS**

- MYHIXEL III is a product for adults.
- Do not use the device if the skin on your penis or surrounding area is irritated or damaged. If you experience pain or discomfort during use, stop immediately and consult a specialist.
- It is not recommended to use the device for more than 25 minutes, as prolonged friction can cause irritation, just as it might during sexual activity, manual stimulation, or when using other devices.
- Do not touch the rod or heating base (see the section “MYHIXEL III Device”) when the warming function has been active, as it may cause burns.
- Keep this product out of reach of children.
- For hygiene reasons, we recommend not sharing your MYHIXEL III device with anyone.
- If you choose to use lubricant with your MYHIXEL III device, we recommend using only water-based lubricants, such as MYHIXEL Lube, which is specially designed for our products. Other types of lubricants may damage the anatomical sleeve (see the section “MYHIXEL III Device”).
- It is recommended to let the anatomical sleeve air dry only. Do not use a microwave or any other appliance to dry it, as this may cause damage.
- During cleaning, always disconnect the device from the charging cable or power source.
- Do not attempt to tamper with the battery, as improper handling may lead to uncontrolled exothermic reactions. In such cases, the entire product must be safely and immediately discarded.
- While charging, make sure the device, plugs, and power outlets do not come into contact with liquids, as this could result in damage.
- Do not place the device on magnetic stripe cards, pacemakers, or other mechanical or electronic products, as magnetic fields may interfere with their components and functionality.
- Unplug the charging cable from the power source after each charging session.
- Do not force the device open or attempt to repair it yourself. Do not insert sharp objects into the device.
- Do not submerge the device in water deeper than 1 meter. Please note that submerging the device will cause it to lose its Bluetooth connection with the app.
- Do not insert the heating base into any body orifice.



# INDEX

WHAT'S IN THE BOX	09
MYHIXEL DEVICE III	09
DEVICE USAGE INSTRUCTIONS	09
CLEANING AND STORAGE	13
DEVICE MATERIALS	14
DISCLAIMER	14

## WHAT'S IN THE BOX

1. MYHIXEL III Device
2. USB-C Charging Cable
3. Instruction Manual
4. MYHIXEL Membership Card\*
5. Program Activation Card\*

\*Only if you purchased a MYHIXEL program with your device.

## MYHIXEL III DEVICE

6. USB-C Port
7. Thread for Hands-Free Accessory
8. Two Openings to Adjust Suction Level
9. Vibration Button
10. Warming Button
11. Power Button (On/Off)
12. Integrated Vibrating Bullet
13. Anatomically Realistic Sleeve
14. Inner Sleeve Channel
15. Heating Base and Rod

## MYHIXEL III DEVICE USAGE INSTRUCTIONS

1. Open the box and take out your MYHIXEL III device.
2. Before using it for the first time, you must fully charge it. Use the USB-C cable included in the box. While charging, a pulsing light will appear (breathing effect). You'll know it's fully charged when the white light stays solid. If you disconnect the charger after it is fully charged, the light will turn off. If this is not your first time using the device, make sure it is completely dry before charging. In warming mode, the battery may be used up to four times before it runs out and the device powers off. Full charging time is 3.5 hours when using a 5V 2A adapter.
3. To turn on the device, press and hold the power button (third button) for 1.5 seconds. To turn it off, press the same button again for 1.5 seconds.
4. If you have purchased a MYHIXEL program, follow these instructions to pair your MYHIXEL III device with the MYHIXEL Hub app:
  - 4.1. To enter Bluetooth pairing mode, press and hold the vibration button and the power button simultaneously for 2 seconds. The buttons will begin to flash intermittently, indicating that the device is searching for a connection.
  - 4.2. Enable the Bluetooth function on your smartphone and select the MYHIXEL III device. You also have the option to connect your device at the beginning of each program activity
  - 4.3. Once paired, the button LEDs will remain steadily lit

for 2 seconds until the vibration button LED turns off.

5. To activate the device's warming function, short press the warming button. The LED will begin to flash, and the heating rod will start warming the sleeve until it reaches a temperature of 39°C. Once the target temperature is reached, the light will turn off, indicating that warming is complete. You can turn it off manually by pressing the heating button for 1.5 sec. If the device is not used and the temperature drops to 34°C, it will automatically re-enter heating mode to return to 39°C ± 3. This reheat cycle will occur only once. If you wish to use the warming function again, press the heating button to restart the process. Please note that the maximum temperature is 39°C. **IMPORTANT:** Do not use the device until it has reached the desired temperature to ensure an optimal experience. The device will automatically shut off after 20 minutes to preserve battery life.
6. Once the device has reached the desired temperature and is connected to the app (if you have purchased a MYHIXEL program, refer to the corresponding manual for pairing instructions), remove the heating base to access the sleeve. To remove and reattach the heating base, always do so in a straight, vertical motion, without twisting. Make sure the cover fits properly and that the magnetic pins are securely connected when closing it.
7. We recommend using lubricant with your device before activating the warming function for the best experience. Generously apply lubricant to both the entry hole and the inner channel of the sleeve. Make sure to push the lubricant all the way to the bottom of the sleeve so that, when the device is standing upright, the lubricant comes into contact with the heating rod and warms properly. Use a water-based lubricant, such as MYHIXEL Lube.
8. **IMPORTANT!** Before using the device, make sure that both suction tabs (see the section "MYHIXEL III Device") are open. This will allow you to insert your penis easily and avoid any discomfort caused by suction.
9. The device is now ready to use. Insert your penis once you have an erection. After insertion, adjust the suction level to your preference by closing one or both of the suction tabs, which control the airflow and suction intensity. Tip: If you have trouble opening the side tabs with your fingernail, you can use a pointed object or similar tool to help.
10. The MYHIXEL III device offers **5 vibration modes** to suit your needs. If you're following a MYHIXEL program, the first three modes are designed for the premature ejaculation program, while the last two are intended for the erectile dysfunction program. Below is a guide on how to activate each mode:
  - **Mode 1:** Press the button once to activate the first vibration mode. The LED lights up white and flashes slowly once, then turns off. (Constant vibration, 50Hz frequency, PWM 45%)
  - **Mode 2:** Press the button again to activate the second level. The LED flashes slowly twice, then turns off. (Constant vibration, 50Hz frequency, PWM 65%)
  - **Mode 3:** Press the button again to activate the third level. The LED flashes slowly three times, then turns off. (Constant vibration, PWM 100%)

- **Mode 4:** Press the button once more to activate the fourth level. The LED stays on for 2 seconds, then turns off. (Intermittent vibration: 10-second intervals, 50Hz frequency, PWM 65%)

- **Mode 5:** Press the button once more to activate the fifth level. The LED stays on for 5 seconds, then turns off. (Intermittent vibration: 10 seconds on, 5 seconds off, 50Hz frequency, PWM 65%)

To turn off vibration at any time, press and hold the button for 1.5 seconds. The LED will turn off, indicating that the vibration has been deactivated.

11. Relax and enjoy the experience. If you've purchased a MYHIXEL program, follow the corresponding instructions to improve your intimate life.
12. Once you're finished, clean your MYHIXEL III device as described in the "Cleaning and Storage" section.

	BLUETOOTH		ON	OFF	CHARGING	
	PAIRING	PAIRED			CHARGING	CHARGED
ACTION	Press buttons 1 & 3 simultaneously (2 sec)		Press button 3 for 1.5 sec	Press button 3 for 1.5 sec	Connect charger	
LEDS	LEDs 1 & 3 blink simultaneously	LEDs 1 & 3 stay on, then LED 1 turns OFF	LED 3 Encendido	LED 3 OFF	LED 3 blinks	LED 3 stays on, and turns off once you disconnect the charger

	BATTERY LIFE		HEATING	
	100% TO 10%	10% TO 0%	HEATING	MAX TEMPERATURE
ACTION			Short press Button 2	
LEDS	LED 3 shows a bright light	LED 3 breathes 5 times, then dims gradually until the device turns off.	LED 2 blinks in "breathing mode"	LED 2 turns on for 2 sec, then turns off

	VIBRATION					
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	OFF/PAUSE
ACTION	Short press Button 1 once	Short press Button 1 twice	Short press Button 1 three times	Short press Button 1 four times	Short press Button 1 five times	Long press Button 1 for 1.5 sec
LEDS	LED 1 blinks in a slow sequence once	LED 1 blinks in a slow sequence twice	LED 1 blinks in a slow sequence three times	LED 1 turns on and stays on without blinking for 2 sec, then turns off	LED 1 turns on and stays on without blinking for 5 sec, then turns off	LED 1 OFF

## DEVICE CLEANING AND STORAGE

Clean and store your MYHIXEL III device as detailed below.

### SLEEVE CLEANING

With the heating base removed, open the two suction control tabs, carefully remove the sleeve, and rinse it thoroughly with water (it can be cleaned under running water). For best results, you can also use MYHIXEL Cleaner, specially formulated to clean and maintain your MYHIXEL sleeve in optimal condition.

We do not recommend cleaning the sleeve with soap or other cleaners, as these may damage the material. For a more effective clean, we suggest turning the sleeve inside out.

After cleaning, let the sleeve air dry completely until there is no remaining moisture.

Remember, you can purchase replacement sleeves for your device through our website.

## CASING CLEANING

Before cleaning the casing, make sure you have removed the sleeve.

We recommend cleaning the casing by submerging it in water to remove any remaining lubricant. Keep in mind that the device is water-resistant up to 1 meter deep, thanks to its IPX7 Waterproof rating.

If you plan to charge the device right after cleaning, make sure it is thoroughly dry.

Once both the sleeve and the casing are completely dry, reinsert the sleeve into the casing, attach the heating base, and store the device in its box or in a dry place until your next use.

## DEVICE STORAGE

Do not expose your MYHIXEL III device to direct sunlight or extreme heat. You can store the device in its original box, where it will be well protected from dust. Make sure the device is completely dry before storing it.

## MATERIALS

All materials used are completely free of phthalates.

- Rubber-coated Acrylonitrile Butadiene Styrene (ABS) for the main body/casing
- Bronze-plated ABS for the cover
- Thermoplastic Elastomer (TPE) for the sleeve

- Silicone for the buttons and the inner vibrating cover
- Electronic components and a 3.7V – 2000mA lithium battery

## DISCLAIMER

Users of the MYHIXEL III device do so at their own risk. Neither MYHIXEL (New Wellness Concept S.L.) nor its distributors assume any responsibility for the misuse of this product.

MYHIXEL reserves the right to revise this publication and make changes to its content at any time without obligation to notify anyone. The product may be modified for improvement without prior notice.

MYHIXEL assumes no responsibility for damages resulting from:

- Failure to follow the instructions
- Improper use
- Unauthorized modifications
- Technical alterations
- Use of unauthorized replacement parts
- Use of unauthorized accessories



CE declaración de conformidad / CE declaration of conformity / EU-Konformitätserklärung /  
Déclaration de conformité CE / Dichiarazione di conformità CE





FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.