

# Important safety information

Do not use this product if your dog is aggressive, or if your dog is prone to aggressive behavior

aggressive dogs can cause severe injury and even death to their

f you are unsure whether this product is appropriate for your dog. please consult your veterinarian or certified trainer.

skin has fully healed.

Avoid leaving the collar on the dog for more than 8 hours per day, t may cause SKIN IRRITATION.

possible. REPOSITION the collar on the pet's neck every 1 to 2

and look at your dog's reaction. If your pet becomes uncomfortable

The collar is waterproof, the remote transmitter is NOT waterproof LCD Screen

Make sure the collar is NOT TOO TIGHT, two fingers must fit between the collar belt and your dog's neck

are comfortable while they wear stainless steel contacts. Some dogs are sensitive to contact pressure. You may find after some time tha your dog is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use unti-

Beep Button

Shock Button

LED Indicator

on, it needs to be charged.

means 30% power remaining

1 bar that means it needs to charge.

Collar Receiver

Contact Point



the receiver turn off

Push up the on/off button is on, and push

Remote Control

NOTE: 4 white lights indicate 100% power, 3 white lights mean 80% power

remaining, 2 white lights mean 50% power remaining, and 1 white light

down the on/off button is off

Unmount Probes Covers The Probe



Channel Button: There 3 channels modes that can be switched, channel

remote and receiver on channel 1, only on channel 1 that the function can work Channel 2: Only show this icon( ) on the remote screen. If you pair the remote and receiver on channel 2, only on channel 2 that the function can work.

Channel 1+2: Showing this icon( ) on the remote screen, if you pair on Remote: It is the bottom of the LCD screen, when the battery icon has only this channel, the receiver can work on 3 channels. If pairing multiple receivers on this channel would deliver the same command to receivers at the same time.

2. Delivers vibrations to the colla Press the vibration button, the signal

receiver LED light flashes green.

Press the Up/Down button can

3. Delivers shock to the collar

Press the shock button, the signal

means the shock function delivers

Press the Up/Down button can adju

vibration levels from 1 to 16.

flashes on the remote screen, and the

receiver LED light flashes green. That

You will feel vibrate

successfully.

flashes on the remote screen, and the

If the collar is too long for your dog, trim the collar as following pictur Please singe the collar end to avoid fraying.





## The best location for the collar receiver box is on either side of the

### It takes about 2-3 hours

equently Asked Questions contact points, you may need to trim the hair on the dog's neck, so that bo contact points are touching the dog's skin. The intensity level may be too k for the dog. Increase the Simulation until the dog responds, usually by a n movement, head shaking, or looking over the shoulders. The response ma

5. Is the collar receiver waterproof?

6. Can I attach a leash to this collar?

the contact points on the training collar.

of every 24-hour period.

Yes. Make sure the rubber cover of the receiver is fully sealed on the

If you need to use a leash, attach it to a separate and non-metallic coll

harness while making sure that the extra collar does not put any press

charging port on the back of the collar to be 100% waterproof.

7. How long can I leave the Collar Receiver on my dog?

be very subtle. If tested for all of the above and the dog is still not responding, please try re-pairing the RemoteTransmitter and Collar Re

- 3. Is the Vibration/Shock safe for my pet?
  - remember to reinforce them promptly with ample praise and r
  - during the training process

## 10. When the dog has become apparently perplexed, shift the focus of the training by drawing the dog's attention to a command they have

familiarity. Example: Tell the dog to sit and give abundant praise ar encouragement on successful completion of the sit command a Class B digital device, pursuant to Part 15 of the FCC Rules. These . Do not use the training dog device to correct or eliminate forms of aggression or biting behavior. When the dog is showing signs of aggres limits are designed to provide reasonable protection against harmfu

Thank you for choosing this product. We grant 12 months warranty from the

behavior, immediately contact a professional dog trainer in your local are 2. Please keep in mind, that you should keep training sessions short and en

every session on a high note. Stop training and play with the dog as soon the dog has accomplished a new level of proficiency.

date of purchase. This product has undergone a thorough quality inspectio 3. During the first initial training sessions, keep the dog in a familiar out at the factory to ensure that the product is in good condition. We will remed all defects in workmanship or materials within the warranty period In order for the warranty to be granted, all warranty claims must be accomp proof of purchase from an authorized distribution partner. Damages due improper installation or use, unauthorized removal/modification/repair are overed by the warranty

Points on the Collar Receiver. Do not use the remote training collar without a long leash until your dogs is fully trained.

5. More success will occur by teaching the dog a command first before trying you have any questions during use, welcome to contact us, we will reply t with the right solution within 24 hours. How to contact the after-sales service

6. For basic obedience training, vibration is more useful

Contact Method 2: Go to the product page, you will see a line said: "Sold by

'store name' and Fulfilled by Amazon". Click "store name" > "Have a question 'store name'" - "Ask a question"

Contact Method 1: Please go to "My orders > Find Order > Contact Seller

Frequency: 915MHz R&TTE

for compliance could void the user's authority to operate the equipment

which the receiver is connected.

by one or more of the following measures:

-- Reorient or relocate the receiving antenna

his equipment has been tested and found to comply with the limits for

nterference in a residential installation. This equipment generates

uses and can radiate radio frequency energy and, if not installed

that interference will not occur in a particular installation. If the

equipment does cause harmful interference to radio or television

off and on, the user is encouraged to try to correct the interference

ncrease the separation between the equipment and receiver

-- Consult the dealer or an experienced radio/TV technician for help

Connect the equipment into an outlet on a circuit different from that to

reception, which can be determined by turning the equipment

and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee

Press the shock button and the test light should flash orange indicating the electric shock is operating correctly. It will be brighter accordingly with the

skin. When properly fitted, the collar received

dog's windpipe. A loose fit can allow the collar receiver to move around on the dog's neck. When this happens, the contact points may rub the skin and cause irritation. If the collar receiver is too tight, the dogs may have difficulty breathing. Please check whether contact points touch the dog's neck. If it is

# Collar receiver:15 da

8-25 inch

1000 FT

vibration and static shock. Be sure the strap is on the dog tight enough so that both contact points are touching the dog's skin. The contact points be too short for your dog's thick or long coat. If you are already using long

to reinforce the command with Remote Transmitter.

- 7. Issue one obedience command at a time, this will reduce confusion a When testing the collar with your hands, please touch the two electrode allow the dog to remain focused. Do not use the training device
- 3. The LED indicator light comes on, but I do not feel any Stimulate

  - 9. Avoid over-correcting your dog. Use as little remote correction as possible level. Be sure both contact points are touching both of your fingertips. The

These cautions will ensure safety and comfort of your pet. Millions of dogs

### Turn On and Off Receiver and Remote Collar Receiver: When charging, the white light will change from 1-4 lights.

# will stop at 4 lights when it is fully charged.

Remote: When charging, the battery icon will change from 1-4 bars. It will stop at 4 bars when it is fully charged.

Remote: After 30 seconds of no operation with the remote, the screen

backlight will turn off, and after 1 min, it enters sleep mode and maintains

Collar Receiver: After 5 minutes of no operation with the receiver, it enters leep mode and maintains extremely low power consumption. Press any button on remote can wake it up

### extremely low power consumption.

Pressing any button on the remote can wake it up

You will hear 1st beep from the collar receiver and the led light v

. Press the Beep button Channel 1: Only show this icon(1) on the remote screen. If you pair the

 
How to use the test ligh 3. You will hear 2nd "beep" from the collar receiver, which means the pairing

# shock level increasing.

 
1. After pairing the remote and receiver.

How to Install the Belt

2. Hold the test light contacts against the receiver contact points







# coveredby hair, tidy it up (because fur is a nonconductor.)

### Why the receiver does not respond to the remote?

2. Once my pet is trained and has been obeying my commands, will be have to continue to wear the Receiver Collar?

collar belt through collar belt through belt through the side belt through the tri-gli-

water enter the receiver.

### The test light is use to the test the shock mode work or not the receiver. the tri-glides buckle. release buckle. buckle again. How do the test light work? Step 4 is the most important step to keep the collar not fall off.

Adjust Collar Range

Working Time

Product Specification

### 27 inch Collar Lenght The collar receiver should be fitted so that the contact points press firmly against the

dog's skin. When properly fitted, you should be able to fit afinger or two snugly in between the contact points and your dog's

### should notmove on the dog. Receiver Waterproof Rating IP67 waterproof

8. How long should I process my training session for my pet? Remote Waterproof Rating Non-waterproof

ometimes the reason is the battery power is off.

### Troubleshooting Guide

### My dog is not reacting to the collar.

Make sure the receiver/collar is turned on, and check the intensity level to fully charge

- 2. I want to test the collar receiver myself, but it does not work.
- simultaneously, as touching one electrode will not work. commands that the dog has not learned
- Your tolerance may be higher than your dog's. You may need to try the

### 1. Make training sessions short and positive (between 10-15 minutes long for

each session) This will enable the dog to keep its attention focused on the

4. Transmitter has no range, or the Simulation is weaker when my dog is

Check to see if your fingers are touching the antenna, as the range m

terrain (line of sight), Heavy brush, trees, hills, buildings, and/or moistur

will affect the range of your unit. For the best range, hold the transmitte

decrease substantially. The range indicated on the unit's box is for fl

vertically above your head, and/or try moving to higher ground

- 2. Train one dog at a time
- environment. Training in new locations may cause the dog to become distracted, causing you to reinforce commands with the Collar Reco
- 4. Use a long leash fastened to a non-metallic collar to help the dog's learning. Ensure the additional collar and leash does not interfere with the Contact

- - 8. During training, look for all the positive changes in the dog's behavior at
- 4. Why is the collar can't be used normally when I got it or after a few days?

battery may be low, check the LED indicator light on the transmitter and receiver/collar for battery life.

Transmitter: 3.7V 300ma LiP ( FC Receiver: 3.7V 400ma LiP Made in China

Changes or modifications not expressly approved by the party responsible

















