

Thank you for purchasing this product.

Safety Instruction

- Do not drop, puncture or disassemble the device; otherwise the warranty will be voided.
- Avoid all contact with water. Dry your hands before using the device.
- Use the device with care. Avoid pressing hard on the device body.
- For your own safety, avoid using the device when there is a storm or lightning.
- Use only the accessories supplied by the manufacturer.
- Keep the device out of the reach of infants.
- When you get off the car, do not leave the device on the dashboard where it is subject to direct sunlight.
- The battery is integrated with the device. Do not dissemble and modify. The battery should be replaced by an authorized service center only.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. SAR test distance is 5 mm.

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Move the equipment away from the receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.

You are cautioned that any change or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate such equipment.



PACKAGE CONTENT

The following items come with your package.

1. Camera 2. Clothespin Bracket 3. Safety Pin Bracket

4. Neck Strap 5. Camera Stand

6. USB Cable 7. Micro USB port

8. Car Adapter 9. Micro SD card slot

10. Car Bracket 11. LED indicators

EN-1

PRODUCT OVERVIEW

1. Camera 2. Clothespin Bracket 3. Safety Pin Bracket

4. Neck Strap 5. Camera Stand

6. USB Cable 7. Micro USB port

8. Car Adapter 9. Micro SD card slot

10. Car Bracket 11. LED indicators

EN-2

GETTING STARTED

USING CLOTHESPIN BRACKET

Installing the Memory Card

1. Turn on the power, press the **POWER** button.

2. Press the quick release buckle to detach the small piece of neck strap.

3. Install the camera to the bracket.

Push the memory card until it clicks into place.

4. Turn off the power, press and hold the **POWER** button for at least 5 seconds.

5. Insert the layard through the strap eyelet on the bracket. Make a loop to secure it.

6. Install the camera into the bracket.

7. With the suction-cup laying flat, position the suction cup on the windshield.

8. Attach the quick release buckle onto the slot (see Step 1 illustration).

9. Hold the base firmly on the windshield and press down the clamp to mount the car bracket to the windshield.

10. Download and install Wicorder.

11. After the installation is complete, the Wicorder icon () is displayed on the application screen.

12. Connect the other end of the USB cable to the computer.

13. Wear the neck strap.

14. Connect one end of the USB cable to the micro USB port of the device.

15. Connect the other end of the USB cable to the computer.

16. Tap **WIRELESS & NETWORKS** to turn **Wi-Fi** on.

17. The available networks are listed.

18. Tap **WIRELESS & NETWORKS** to connect to the camera.

19. Enter the password and tap **Connect**.

20. The default password is "111111".

21. You can change the SSID and password in **Setup mode**.

22. Open the safety pin by pressing on the bar. Be careful with the sharp point.

23. Slide the open pin through the cloth. Then squeeze the pin and slide the bar back to position.

EN-3

INITIAL SETUP

USING NECKSTRAP

Turning the Device On/Off

1. Turn on the power, press the **POWER** button.

2. Press the quick release buckle to detach the small piece of neck strap.

3. Install the camera to the bracket.

4. Place the stand on a stable surface.

5. Insert the layard through the strap eyelet on the bracket. Make a loop to secure it.

6. Install the camera into the bracket.

7. With the suction-cup laying flat, position the suction cup on the windshield.

8. Attach the quick release buckle onto the slot (see Step 1 illustration).

9. Hold the base firmly on the windshield and press down the clamp to mount the car bracket to the windshield.

10. Download and install Wicorder.

11. After the installation is complete, the Wicorder icon () is displayed on the application screen.

12. Connect one end of the USB cable to the micro USB port of the device.

13. Connect the other end of the USB cable to the computer.

14. Tap **WIRELESS & NETWORKS** to turn **Wi-Fi** on.

15. The available networks are listed.

16. Tap **WIRELESS & NETWORKS** to connect to the camera.

17. Enter the password and tap **Connect**.

18. The default password is "111111".

19. You can change the SSID and password in **Setup mode**.

20. Open the safety pin by pressing on the bar. Be careful with the sharp point.

21. Slide the open pin through the cloth. Then squeeze the pin and slide the bar back to position.

22. Wear the neck strap.

EN-4

USING CAR BRACKET

Using the Device as a Car Recorder

1. Turn on the power, press the **POWER** button.

2. Press the quick release buckle to detach the small piece of neck strap.

3. Install the camera to the bracket.

4. Place the stand on a stable surface.

5. Insert the layard through the strap eyelet on the bracket. Make a loop to secure it.

6. Install the camera into the bracket.

7. With the suction-cup laying flat, position the suction cup on the windshield.

8. Attach the quick release buckle onto the slot (see Step 1 illustration).

9. Hold the base firmly on the windshield and press down the clamp to mount the car bracket to the windshield.

10. Download and install Wicorder.

11. After the installation is complete, the Wicorder icon () is displayed on the application screen.

12. Connect one end of the USB cable to the micro USB port of the device.

13. Connect the other end of the USB cable to the computer.

14. Tap **WIRELESS & NETWORKS** to turn **Wi-Fi** on.

15. The available networks are listed.

16. Tap **WIRELESS & NETWORKS** to connect to the camera.

17. Enter the password and tap **Connect**.

18. The default password is "111111".

19. You can change the SSID and password in **Setup mode**.

20. Open the safety pin by pressing on the bar. Be careful with the sharp point.

21. Slide the open pin through the cloth. Then squeeze the pin and slide the bar back to position.

22. Wear the neck strap.

EN-5

USING STAND

Using the Device as a Surveillance Camera

1. Turn on the power, press the **POWER** button.

2. Press the quick release buckle to detach the small piece of neck strap.

3. Install the camera to the stand.

4. Place the stand on a stable surface.

5. Insert the layard through the strap eyelet on the stand. Make a loop to secure it.

6. Install the camera into the stand.

7. With the suction-cup laying flat, position the suction cup on the windshield.

8. Attach the quick release buckle onto the slot (see Step 1 illustration).

9. Hold the base firmly on the windshield and press down the clamp to mount the car bracket to the windshield.

10. Download and install Wicorder.

11. After the installation is complete, the Wicorder icon () is displayed on the application screen.

12. Connect one end of the USB cable to the micro USB port of the device.

13. Connect the other end of the USB cable to the computer.

14. Tap **WIRELESS & NETWORKS** to turn **Wi-Fi** on.

15. The available networks are listed.

16. Tap **WIRELESS & NETWORKS** to connect to the camera.

17. Enter the password and tap **Connect**.

18. The default password is "111111".

19. You can change the SSID and password in **Setup mode**.

20. Open the safety pin by pressing on the bar. Be careful with the sharp point.

21. Slide the open pin through the cloth. Then squeeze the pin and slide the bar back to position.

22. Wear the neck strap.

EN-6



MODE SELECTION


Selecting the Mode

1. Launch **Wirecoder** application.
2. Tap or the Back key to display the **Select Mode** menu.
3. Select the desired mode that you want to use.
 - **Car Mode**: Select this option to use the device as a car recorder.
 - **Surveillance Mode**: Select this option to use the device as a surveillance camera.
 - **Wearable Mode**: Select this option to manually record videos or capture photos.
4. Tap **Ok** to confirm.

PREVIEW MODE

Viewing Live View

1. Tap **Preview** tab to switch to Preview/Record mode.
2. Tap to view the live view on your smartphone.

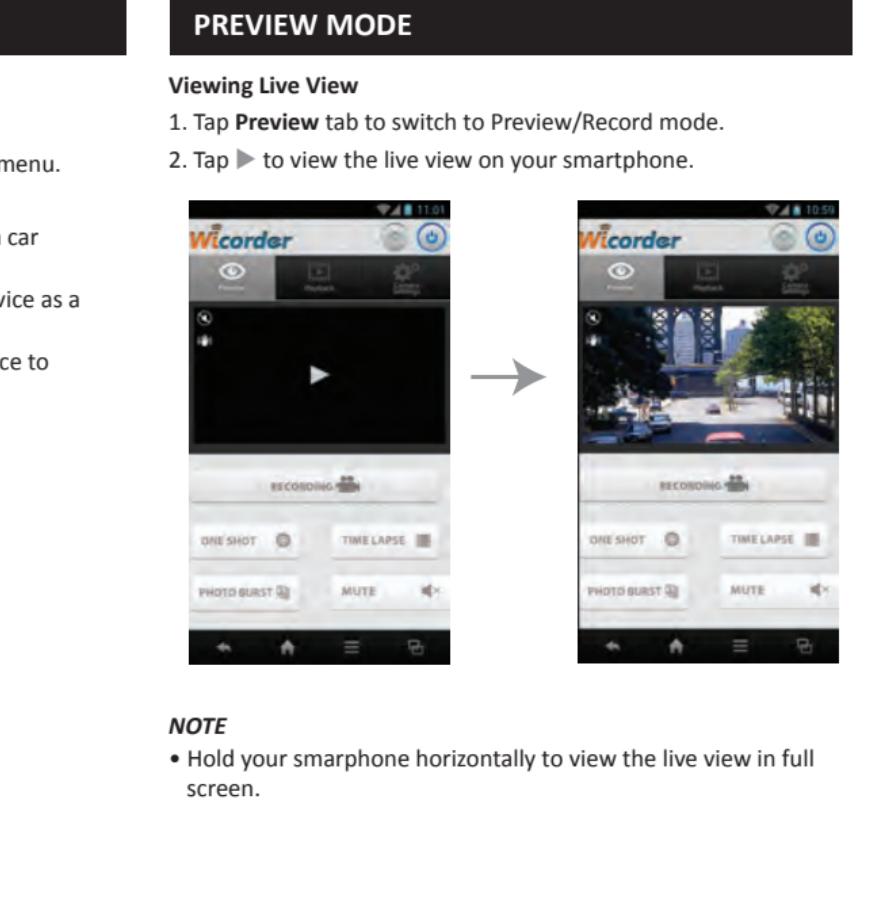


RECORD MODE

Recording Videos

1. Tap **Record** tab to switch to Record mode.
2. Tap to start recording video.

Sharing File to Facebook / YouTube


Before sharing the file to Facebook or YouTube, download the desired file first to your smartphone.

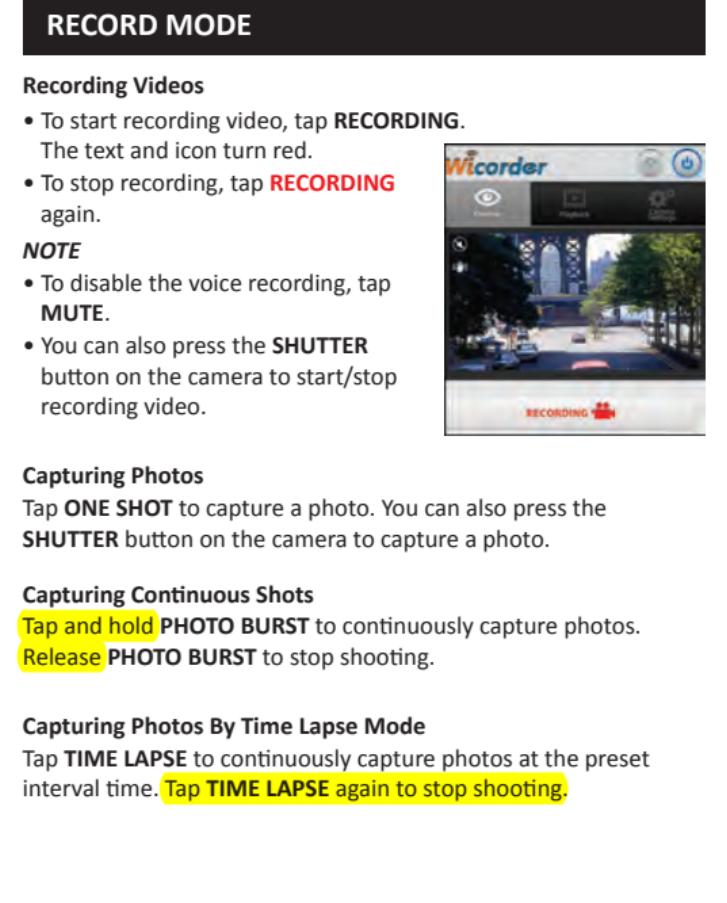

PLAYBACK MODE

Playing Videos

1. On **Videos** list, tap the desired video to play the video.

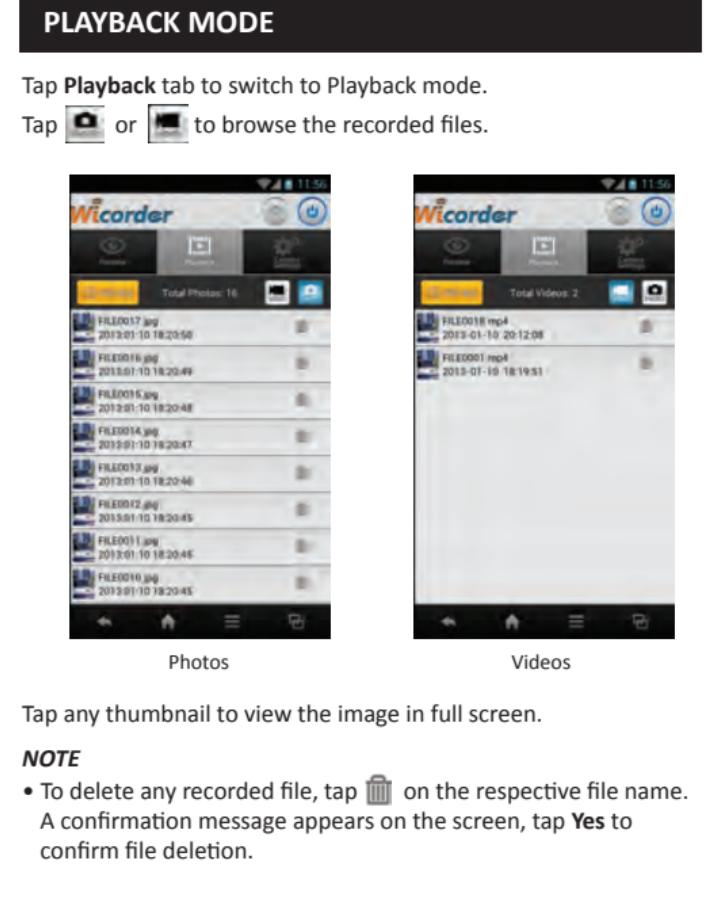


SETUP MODE

WIRELESS

Configure the wireless connections settings.

1. Tap **Camera Setting** tab to switch to Setup mode.
2. Tap or to browse the recorded files.

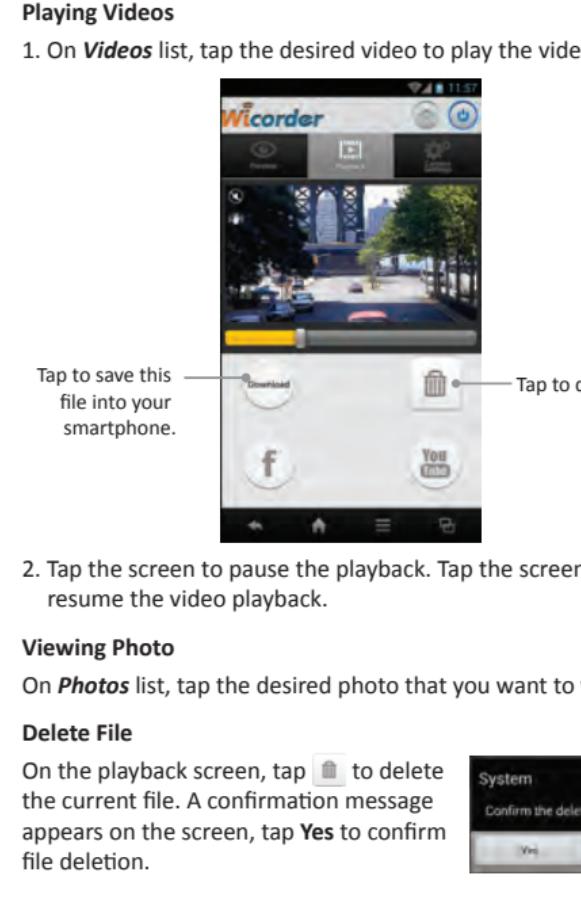


RECORD MODE

Recording Videos

- To start recording video, tap **RECORDING**. The text and icon turn red.
- To stop recording, tap **RECORDING** again.

NOTE

- To disable the voice recording, tap **MUTE**.
- You can also press the **SHUTTER** button on the camera to start/stop recording video.

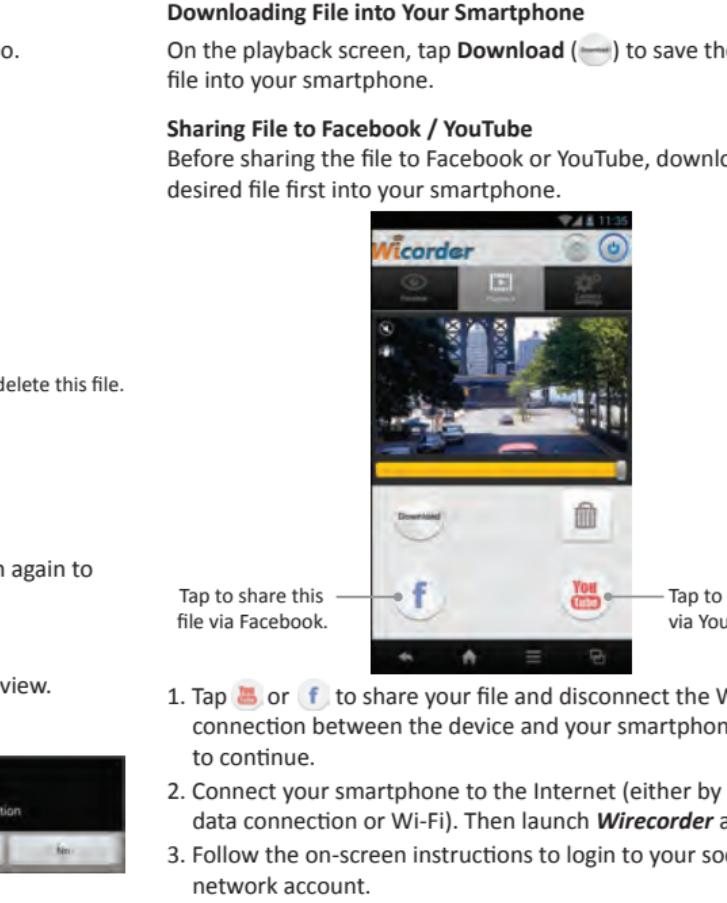

PLAYBACK MODE

Sharing File to Facebook / YouTube


Before sharing the file to Facebook or YouTube, download the desired file first to your smartphone.

CAMERA

Configure the video and photo recording settings.

SYSTEM

Configure the device general settings.

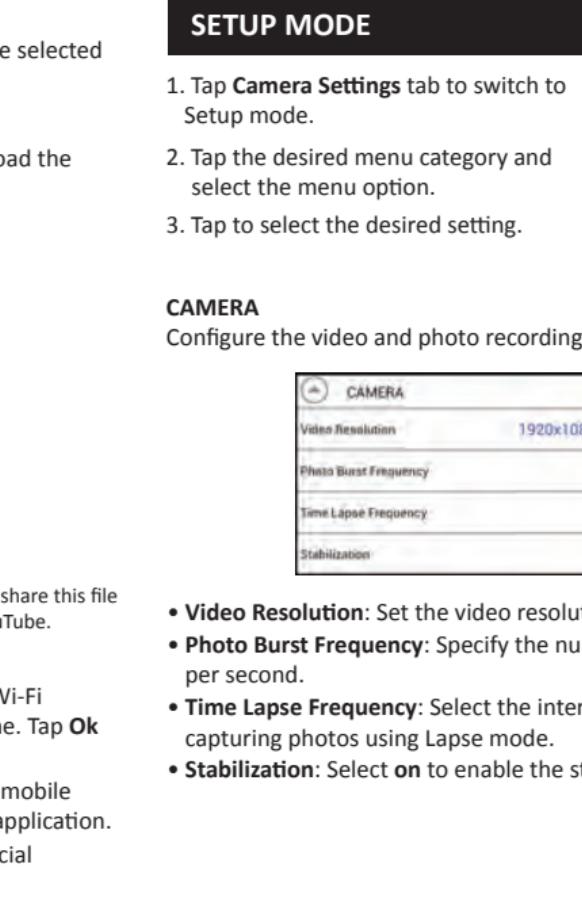

RECORD MODE

Recording Videos

- 1. Tap **Record** tab to switch to Record mode.
- 2. Tap to start recording video.

Sharing File to Facebook / YouTube

Before sharing the file to Facebook or YouTube, download the desired file first to your smartphone.

Capturing Photos

Tap **ONE SHOT** to capture a photo. You can also press the **SHUTTER** button on the camera to capture a photo.

Capturing Continuous Shots


Tap and hold **PHOTO BURST** to continuously capture photos. Release **PHOTO BURST** to stop shooting.

Viewing Photo

On **Photos** list, tap the desired photo that you want to view. Tap any thumbnail to view the image in full screen.

Delete File

- To delete any recorded file, tap on the respective file name. A confirmation message appears on the screen, tap **Yes** to confirm file deletion.

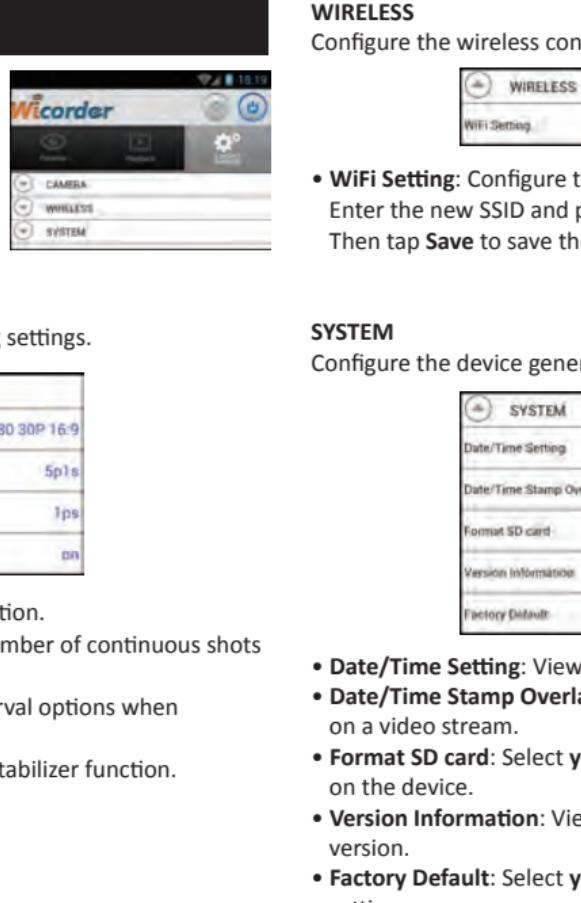

PLAYBACK MODE

Playing Videos

On the playback screen, tap to save the selected file into your smartphone.

WIRELESS

Configure the wireless connections settings.

NOTE

- Date/**Time Setting**: View the current date and time.
- Date/**Time Stamp Overlay**: Select **on** to include date and time on a video stream.
- **Format SD card**: Select **yes** to format the memory card installed on the device.
- **Version Information**: View the model name and firmware version.
- **Factory Default**: Select **yes** to reset all settings to factory default settings.

