

DESIGNED IN LONG BEACH, CALIFORNIA / CONÇU AUX LONG BEACH, CALIFORNIA

©COPYRIGHT 2014 ALL RIGHTS RESERVED / ©2014 TOUS DROITS RESERVES.

SCRATCH TRACKS 2445 N. PALM DR STE107 SIGNAL HILL, CA USA

IMIXID, BOT & AUDIOBOTS ARE TRADEMARKS OF HIGH FIDELITY, LLC REGISTERED IN THE US AND OTHER COUNTRIES.

IMIXID, BOT & AUDIOBOTS SONT DES MARQUES DE HIGH FIDELITY, LLC ENREGISTRÉE AUX USA ET AILLEURS.

MADE WITH CARE IN P.R.C. / FABRIQUE EN P.R.C.

APPLE, IPHONE, BOT ARE TRADEMARKS OF APPLE COMPUTER, INC REGISTERED IN THE U.S. AND OTHER COUNTRIES. IPHONE STAPOT BOT DES MARQUES D'APPLE COMPUTER, INC DÉPOSÉS AUX USA ET AILLEURS.

BLUETOOTH IS A REGISTERED TRADEMARK OF BLUETOOTH SIG INC.



FCC ID:2AA2J71001



IMIXID.COM



@IMIXID



@IMIXID



FACEBOOK.COM/IMIXID

IMIXID™



AUDIOBOTS™
PORTABLE WIRELESS BLUETOOTH
SPEAKER BOT™


USER GUIDE

 **Bluetooth™**
PORTABLE WIRELESS
3000 MILLIWATT
SPEAKER BOT™
CONNECT, LISTEN, TALK & CONTROL
WORKS WITH APPLE, SAMSUNG & OTHER
BLUETOOTH ENABLED DEVICES
& SMART PHONES



CONTENTS

- 01. SPECIFICATIONS
- 02. CHARGE
- 04. CONNECT
- 05. CONTROL
- 06. BLUETOOTH PAIRING
- 07. LISTEN
- 08. TALK
- 09. AUX-IN PLUG & PLAY
- 10. TROUBLESHOOT
- 11. SAFETY WARNING
- 12. FCC STATEMENT
- 13. LIMITED WARRANTY

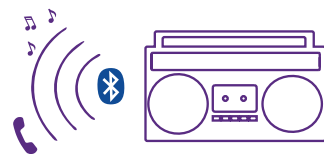

AUDIOBOTS™

PORTABLE WIRELESS BLUETOOTH™ SPEAKER BOT WITH CHANGEABLE HAT

IMIXID'S AUDIOBOTS™ WIRELESS BLUETOOTH SPEAKER BOT™ PACKS A POWERFUL PUNCH OF PLEASING PORTABLE POLYPHONIC SOUND IN A COMPACT DESIGN. IT COMES WITH A CUSTOM SNAP BACK CAP OR KNIT BEANIE THAT CAN BE UPDATED ALONG WITH YOUR TUNES.

AUDIOBOTS FEATURE THE BOUNCE BACK™ PASSIVE BASS RADIATING SUBWOOFER FOR AN EXTRA- ORDINARY AUDIO EXPERIENCE, A HIGH FIDELITY DRIVER AND UP TO 6 HOURS OF BLUETOOTH™ WIRELESS PLAYBACK. AUDIOBOTS HAVE A BUILT-IN MICROPHONE FOR HANDSFREE COMMUNICATIONS.

SPECIFICATIONS

AMPLIFIER

MAX OUTPUT POWER: 3000 MILLIWATTS
CHANNEL: MONO
SIGNAL TO NOISE RATIO (S/N): $\geq 80\text{dB}$
FREQUENCY RANGE 180HZ-20KHZ
DISTORTION THD: $\leq 1\%$

SPEAKER DRIVER

SIZE: 40MM (INNER MAGNET)
RESISTANCE: 4 OHMS
SENSITIVITY: $94\pm 3\text{dB SPL}@1.0\text{KHZ}$
POWER: 3000 MILLIWATTS

ACCESSOIRES (INCLUDED)


1PCS x 3.5MM TO 3.5MM AUX-IN CABLE
1PCS x MICRO USB TO USB CABLE
1PCS x USER MANUAL

POWER

RATED VOLTAGE: 3.7V DC
BATTERY: LI-POLY, 3.7V/720MA
DURATION: 6-8 HOURS
CHARGE VOLTAGE: $5V \pm 0.25V$
RECHARGE TIME: 4 HOURS

BLUETOOTH

CLASS II VERSION 3.0+ EDR
PROFILES: AVRCP, HFP, HSP
RANGE: UP TO 30 FT/10M
OUTPUT POWER: MAX 4 DBM
FREQ RANGE: 2.40 GHZ - 2.48 GHZ

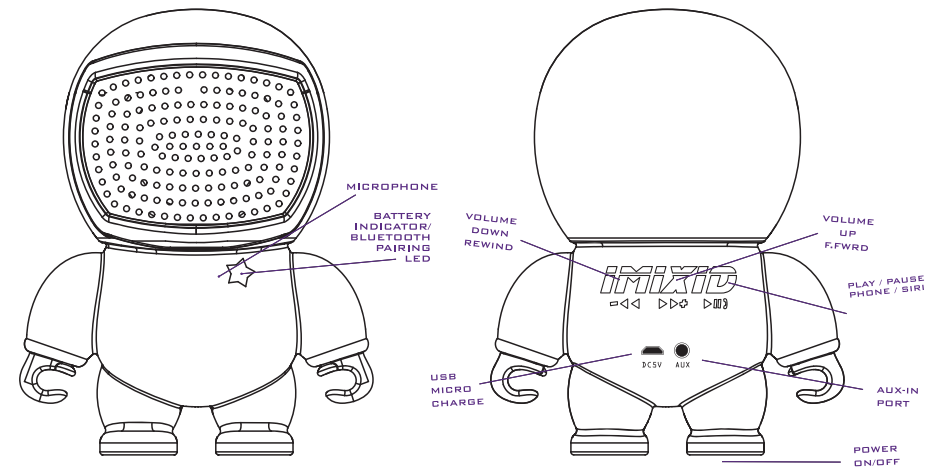

CHARGE

FOR BEST RESULTS, FULLY CHARGE YOUR AUDIOBOT™ BEFORE FIRST USE. YOUR AUDIOBOT™ REQUIRES DC5V/1A USB POWER TO CHARGE. CONNECT THE AUDIOBOT™ TO A COMPUTER WITH THE IMIXID USB MICRO CABLE (INCLUDED).

POWER ON

LED LIGHT TURNS BLUE

CHARGING

LED LIGHT TURNS GREEN

LOW CHARGE (>25%)

LED LIGHT TURNS GREEN

FULL CHARGE

LED LIGHT TURNS WHITE

RECHARGE TIME

4 HOURS

CONNECT

BLUETOOTH™

WIRELESSLY CONNECT TO AUDIOBOT WITH ANY BLUETOOTH ENABLED DEVICE WITHIN A 30 FOOT/10 METER LINE OF SIGHT RADIUS. (WALLS OR OBSTRUCTIONS MAY REDUCE SIGNAL RANGE)

OR

AUX-IN

CONNCET THE IMIXID 3.5MM STEREO AUX CABLE (INCLUDED) INTO THE HEADPHONE JACK ON ANY DEVICE. (THE BUILT-IN MIC DOES NOT FUNCTION IN THIS MODE)

BLUETOOTH™ PAIRING

READY YOUR AUDIOBOT™

TURN ON YOUR **AUDIOBOT**. AFTER 2 SECONDS IT WILL BEEP AND THE LED LIGHT WILL SLOW PULSE BLUE INDICATING AN OPEN CONNECTION.

READY YOUR BLUETOOTH DEVICE

TURN ON BLUETOOTH UNDER THE SETTINGS MENU OF YOUR DEVICE. SELECT THE “**BOT.IMIXID.COM**” FROM THE LIST OF DEVICE CONNECTIONS. IF ASKED FOR A PASSWORD, ENTER “0000”

PAIRED CONNECTION

YOU WILL HEAR A CRESCENDO SOUND FROM YOUR **AUDIOBOT** ONCE IT SUCCESSFULLY PAIRS WITH YOUR DEVICE. THE LED WILL FAST PULSING INDICATING A CONNECTION, THEN RETURN TO A BREATHING PULSE.

UNPAIRED CONNECTION

DISCONNECT THE BLUETOOTH SIGNAL FROM YOUR DEVICE. YOU CAN ALSO TURN OFF THE **AUDIOBOT**.

LISTEN

CONTROL YOUR AUDIOBOT™

YOU CAN USE THE BLUETOOTH CONNECTION TO CONTROL YOUR DEVICE. SIMPLY SELECT THE SONG ON YOUR PHONE AND PRESS PLAY.

PLAY/ PAUSE

PRESS THE “PHONE” BUTTON.

VOLUME UP/DOWN & F.FWRD/REWIND

LIGHTLY PRESS TO MOVE TRACKS FORWARD AND REVERSE. PRESS AND HOLD FOR VOLUME, YOU WILL HEAR A COIN DROP AT MAX/MIN LEVELS.

SOUND QUALITY

TO ACHIEVE THE OPTIMUM SOUND EXPERIENCE, TURN THE VOLUME ON YOUR DEVICE FULLY UP AND USE THE VOLUME CONTROLS ON THE **AUDIOBOT**.



TALK

ANSWER A CALL

PRESS THE “PHONE” BUTTON TO CONNECT TO AN INCOMING CALL.
PRESS AGAIN TO DISCONNECT.

MAKE A CALL

DIAL ON YOUR PHONE NORMALLY, BUT TALK/LISTEN THROUGH YOUR
AUDIOBOT.

REDIAL A CALL

PRESS THE “FWD & REV” BUTTON TOGETHER TO REDIAL THE LAST CALL MADE
ON YOUR PHONE.

CALL PRIORITY

ALL CALLS WILL TAKE PRIORITY OVER AUDIO PLAYBACK ON THE
AUDIOBOT.

SPEAKERPHONE

AUDIOBOT HAS A BUILT-IN MICROPHONE ON THE FRONT STAR
THAT WORKS WHEN USING A BLUETOOTH CONNECTION.

SIRI®

PRESS THE AND HOLD THE “PHONE” BUTTON TO ACTIVATE SIRI ON
YOUR IPHONE®. ASK YOUR AUDIOBOT ANY QUESTION AND THE AUDIOBOT
WILL RESPOND TO YOUR QUERY VIA SIRI.

AUX-IN PLUG & PLAY

IMIXID™ 3.5MM STEREO CABLE

USE THE INCLUDED IMIXID 3.5 MM STEREO CABLE TO CONNECT YOUR
AUDIOBOT TO ANY DEVICE WITH A HEADPHONE JACK.

AUDIO PRIORITY

AUDIO CONTENT VIA AUX-IN WILL OVERRIDE ALL BLUETOOTH FUNCTIONS.

SOUND QUALITY

TO ACHIEVE THE OPTIMUM SOUND EXPERIENCE, TURN THE VOLUME ON YOUR
PHONE/DEVICE DOWN BEFORE ADJUSTING THE VOLUME CONTROLS ON YOUR
AUDIOBOT.

TROUBLESHOOT

DISTORTED SOUND

- USING LOW QUALITY/LOW BIT RATE SAMPLE AUDIO FILES AFFECTS PLAYBACK.
- LOWER THE VOLUME ON YOUR PHONE/DEVICE.
- LOW BATTERY, RECHARGE YOUR **AUDIOBOT**.

LOW SPEAKER VOLUME

- USING LOW QUALITY/LOW BIT RATE SAMPLE AUDIO FILES AFFECTS PLAYBACK.
- TURN UP THE VOLUME ON **AUDIOBOT** AND YOUR DEVICE/PHONE.
- LOW BATTERY, RECHARGE YOUR **AUDIOBOT**.
- CONNECT VIA 3.5MM AUX-IN.

UNABLE TO PAIR WITH BLUETOOTH DEVICE

- MAKE SURE YOUR DEVICE/PHONE SUPPORTS BLUETOOTH.
- LOW BATTERY, RECHARGE YOUR **AUDIOBOT**.
- RESTART BOTH YOUR PHONE AND YOUR **AUDIOBOT**.

SIGNAL LOSS OR AUDIO DROP OUT

- MOVE YOUR DEVICE CLOSER TO THE **AUDIOBOT**.
- LOW BATTERY, RECHARGE YOUR **AUDIOBOT**.
- RESTART BOTH YOUR PHONE AND YOUR **AUDIOBOT**.

SAFETY INFORMATION WARNING

TO ENSURE PERSONAL SAFETY AND AVOID PROPERTY DAMAGE,
PLEASE READ THESE SAFETY WARNINGS AND CAUTIONS CAREFULLY. 

LI-POLY BATTERY / CHARGING HAZARDS

- AUDIOBOT USES A RECHARGEABLE LITHIUM POLYMER BATTERY.
- ONLY CHARGE THE BATTERY IN ACCORDANCE WITH THE USER INSTRUCTIONS IN THIS MANUAL. FAILING TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SHOCK OR CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.
- DO NOT DISASSEMBLE, MODIFY, OR FORCE OPEN THE AUDIOBOT, THE BUILT-IN BATTERY OR CHARGER AS THIS MAY RESULT IN ELECTRIC SHOCK.
- DO NOT STORE OR CHARGE THE AUDIOBOT IN HIGH OR LOW TEMPERATURES OR IN DAMP/WET ENVIRONMENTS, THIS MAY RESULT IN SHOCK OR CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.
- DO NOT CLEAN THE AUDIOBOT WHILE IT IS CHARGING. ALWAYS UNPLUG THE CHARGER BEFORE CLEANING.
- PROPERLY DISPOSE OF THE AUDIOBOT. DO NOT THROW IN FIRE AS THIS MAY CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.

TRANSPORTATION / MOVING PROJECTILE / FALLING HAZARDS

- DO NOT STORE OR OPERATE THE AUDIOBOT IN A MOVING VEHICLE SUCH AS CAR, TRUCK OR BIKE. SUDDEN STOPS MAY TURN THE AUDIOBOT INTO A MOVING PROJECTILE THAT CAN CAUSE SEVERE INJURY OR EVEN DEATH.
- MANY STATES HAVE DRIVER DISTRACTION LAWS. PLEASE FOLLOW ALL LOCAL LAWS!
- DO NOT PLACE THE AUDIOBOT ON HIGH SURFACES SUCH AS LADDERS OR SHELVES. AUDIOBOT'S BOUNCE BACK BASS MAY CAUSE IT TO SHIFT, RESULTING IN A FALL THAT COULD CAUSE SEVERE INJURY OR DEATH.

CAUTION



TO ENSURE PERSONAL SAFETY AND AVOID PROPERTY DAMAGE, PLEASE READ THESE SAFETY WARNINGS AND CAUTIONS CAREFULLY.

CARE AND HANDLING

- * HANDLE YOUR AUDIOBOT WITH CARE. DO NOT DROP OR THROW. THIS MAY RESULT IN DAMAGE TO INTERNAL COMPONENTS AFFECTING SOUND QUALITY, PERFORMANCE OR RESULTING IN SHOCK OR FIRE HAZARD.
- *DO NOT INSERT FOREIGN OBJECTS INTO THE AUDIOBOT SPEAKER, MESH OR PORTS UNLESS OTHERWISE SPECIFIED IN THIS USER MANUAL. THIS MAY DAMAGE INTERNAL COMPONENTS AFFECTING SOUND QUALITY, PERFORMANCE OR RESULTING IN SHOCK OR FIRE HAZARD.
- *DO NOT ATTEMPT TO REPAIR, MODIFY, DISASSEMBLE OR REPLACE ANY PART OF THE AUDIOBOT SPEAKER YOURSELF. THE AUDIOBOT DOES NOT INCLUDE ANY USER-SERVICEABLE PARTS OR COMPONENTS.
- *THE BATTERY IS BUILT-IN AND IS NOT REPLACEABLE. IF YOU HAVE ANY ISSUES, PLEASE CONSULT THE TROUBLE SHOOTING GUIDE.
- * SWITCH OFF THE AUDIOBOT IN AREAS DESIGNATED RF RADIO OR ELECTRICAL DEVICE FREE. TURN OFF AND PROPERLY STOW PRIOR TO BOARDING ANY AIRCRAFT.
- * PROPERLY DISPOSE OF THE AUDIOBOT'S BATTERY IN ACCORDANCE WITH ALL LOCAL LAWS AND REGULATIONS. DO NOT DISPOSE IN HOUSEHOLD WASTE.

WARNING



TO ENSURE PERSONAL SAFETY AND AVOID PROPERTY DAMAGE, PLEASE READ THESE SAFETY WARNINGS AND CAUTIONS CAREFULLY.

ELECTRICAL SHOCK AND FIRE HAZARDS

- AUDIOBOT USES A RECHARGEABLE LITHIUM POLYMER BATTERY.
- DO NOT EXPOSE THE AUDIOBOT TO LIQUIDS, SNOW, RAIN, ICE, MOISTURE OR HIGH HUMIDITY. DO NOT STORE OR USE IN OR NEAR SWIMMING POOLS, SAUNAS, STEAM ROOMS, SINKS, BATHTUBS, SHOWERS. EXPOSURE TO MOISTURE OR DAMP/WET ENVIRONMENTS, MAY RESULT IN SHOCK, FIRE OR CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.
- DO NOT DISASSEMBLE, FORCE OPEN, MODIFY, DROP, DAMAGE, HACK, JACK, CRACK, CRUSH, BEND, DEFORM, PAINT, BURN, OR INSERT FOREIGN OBJECTS IN TO THE AUDIOBOT AS THIS MAY RESULT IN SHOCK, FIRE OR CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.
- DO NOT STORE OR CHARGE THE AUDIOBOT IN HIGH OR LOW TEMPERATURES OR IN DAMP/WET ENVIRONMENTS. THIS MAY RESULT IN SHOCK, FIRE OR CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.
- DO NOT CLEAN THE AUDIOBOT WHILE IT IS CHARGING. ALWAYS UNPLUG THE CHARGER FIRST. CLEAN ONLY WITH A DAMP CLOTH
- DO NOT STORE OR EXPOSE THE AUDIOBOT IN DIRECT SUNLIGHT FOR EXTENDED PERIODS OF TIME.
- DO NOT STORE OR EXPOSE THE AUDIOBOT NEAR OPEN FLAMES SUCH AS BONFIRES, FIREPLACES, CANDLES OR STOVES.
- DO NOT BLOCK ANY VENTILATION OPENINGS.

FCC STATEMENT

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

FCC NOTICE

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

FCC CAUTION

- ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.
- THIS DEVICE AND ITS ANTENNA(S) MUST NOT BE CO-LOCATED OR OPERATING IN CONJUNCTION WITH ANY OTHER ANTENNA OR TRANSMITTER.

FCC ID: 2AA2J71001

LIMITED WARRANTY

ROK-IT SCIENCE UNIVERSAL LIMITED ("IMIXID") WARRANTS TO YOU, THE ORIGINAL RETAIL PURCHASER ("CONSUMER"), THAT THIS PRODUCT ("PRODUCT") WILL UNDER NORMAL USE OPERATE SUBSTANTIALLY IN ACCORDANCE WITH THE ACCOMPANYING DOCUMENTATION FOR A PERIOD OF ONE (1) YEAR FROM DATE OF ORIGINAL PURCHASE. CONSUMER'S SOLE AND EXCLUSIVE REMEDY, AND IMIXID'S SOLE AND EXCLUSIVE RESPONSIBILITY UNDER THIS WARRANTY WILL BE, AT IMIXID'S OPTION, EITHER TO REPAIR OR REPLACE THE DEFECTIVE PRODUCT DURING THE ONE (1) YEAR LIMITED WARRANTY PERIOD SO THAT IT PERFORMS SUBSTANTIALLY IN ACCORDANCE WITH THE ACCOMPANYING DOCUMENTATION ON THE DATE OF YOUR INITIAL PURCHASE. ANY REPLACEMENT MAY BE, AT THE OPTION OF IMIXID, A NEW OR REMANUFACTURED PRODUCT. IF IMIXID, IN ITS SOLE DISCRETION, DETERMINES IT IS NOT REASONABLE TO REPLACE THE DEFECTIVE PRODUCT, IMIXID MAY REFUND TO CONSUMER THE PURCHASE PRICE PAID FOR THE PRODUCT.

1. THE FOREGOING WARRANTY IS LIMITED AND IS NOT APPLICABLE TO: (I) NORMAL WEAR AND TEAR; (II) DEFECTS OR DAMAGE CAUSED BY MISUSE, ACCIDENT INCLUDING WITHOUT LIMITATION COLLISION, FIRE AND THE SPILLAGE OF FOOD OR LIQUID; NEGLIGENCE, ABUSE, ALTERATION, UNUSUAL STRESS, MODIFICATION, IMPROPER OR UNAUTHORIZED REPAIR, INSTALLATION, WIRING, OR TESTING, IMPROPER STORAGE, USE IN AN UNAPPROVED DEVICE OR IF THE SERIAL NUMBER HAS BEEN REMOVED; (III) USE NOT IN ACCORDANCE WITH THE DOCUMENTATION; AND (IV) DAMAGE CAUSED BY THE EQUIPMENT WITH WHICH THE PRODUCT IS USED.

2. TO OBTAIN WARRANTY SERVICE FOR ANY PRODUCT THAT IS SUBJECT TO THE FOREGOING WARRANTY, CONSUMER MUST NOTIFY IMIXID TO OBTAIN A RETURN MATERIAL AUTHORIZATION ("RMA") AND RETURN THE DEFECTIVE PRODUCT TOGETHER WITH PROOF OF PURCHASE TO THE ADDRESS SPECIFIED BY IMIXID IN CONNECTION WITH THE RMA. CONSUMER SHALL BEAR THE COST OF SHIPPING THE PRODUCT TO IMIXID AND IMIXID SHALL BEAR THE COST OF SHIPPING THE PRODUCT BACK TO THE CONSUMER AFTER THE COMPLETION OF SERVICE UNDER THIS LIMITED WARRANTY. ANY PRODUCT RETURNED TO IMIXID WITHOUT AN RMA OR WITHOUT PROOF OF PURCHASE WILL BE RETURNED TO CONSUMER AT CONSUMER'S COST.

3. THE LIMITED WARRANTY EXTENDS ONLY TO CONSUMER AND IS NOT ASSIGNABLE OR TRANSFERABLE TO ANY SUBSEQUENT PURCHASER OR USER. THE LIMITED WARRANTY SET FORTH ABOVE IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES AND IMIXID HEREBY DISCLAIMS ALL OTHER WARRANTIES OF ANY KIND, WHETHER EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR USE OR PURPOSE, NON-INFRINGEMENT, QUALITY AND TITLE. IMIXID DOES NOT WARRANT THAT THE PRODUCT IS ERROR FREE OR THAT IT WILL FUNCTION WITHOUT INTERRUPTION, TO THE EXTENT IMIXID MAY NOT, AS A MATTER OF APPLICABLE LAW, DISCLAIM CERTAIN IMPLIED WARRANTIES, THE DURATION OF ANY SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE SHORTER OF THE ONE (1) YEAR LIMITED WARRANTY PERIOD OR THE MINIMUM TIME PERIOD PERMITTED UNDER SUCH LAW. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

IN NO EVENT WILL IMIXID BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS OR REVENUES, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF ANY REPLACEMENT GOODS OR SUBSTITUTE EQUIPMENT, LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPAIRED, CLAIMS OF ANY THIRD PARTIES, OR ANY OTHER DAMAGES ARISING FROM IMIXID'S BREACH OF THIS LIMITED WARRANTY OR THE USE OF THE PRODUCT, REGARDLESS OF THE FORM OF ACTION WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE) OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF IMIXID HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL IMIXID'S TOTAL CUMULATIVE LIABILITY EXCEED THE PRICE PAID BY CONSUMER FOR THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

IF YOU HAVE ANY QUESTIONS CONCERNING THIS STATEMENT OF LIMITED WARRANTY PLEASE CONTACT IMIXID AT +1 917 677 8031 OR EMAIL US AT warranty@imixid.com FOR ANY MORE QUESTIONS.